

 


JATCO JF404E

Code Letter

Code Letter Determines JF404E AutoTransmission Type.

Code Letter Content




Line 1: Code Letter

(Alphabet: 3 characters from left)

Line 2: JATCO Code

Line 3: JATCO Serial Number

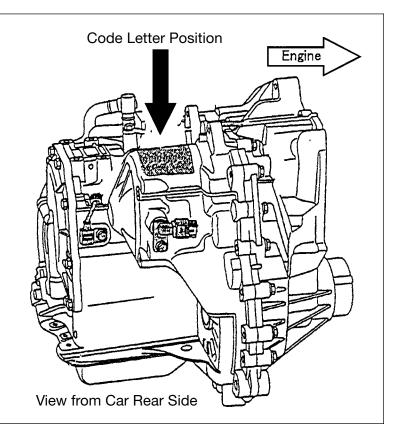

No.	Code Letter		AT Type
1	СМН		Type A
2	CMJ		Type A
3	DPN		Type A
4	DPP		Type A
5	DPB		Type A
6	EDP		Type A
7	FMA	EHD	Type B
8	FMB	EAR	Type B
9	FMC	EHE	Type B
10	FMD	EAT	Type B
11	FMG	EAW	Type A
12	ESK		Type B
13	FME	ERZ	Type A
14	FMF	ESA	Type A

Table 1

Important Notes:


Terminal Assembly is different with the number of the solenoids, too.


[&]quot;Type A" has 5 solenoids

[&]quot;Type B" has 6 solenoids




Control Valve Assembly

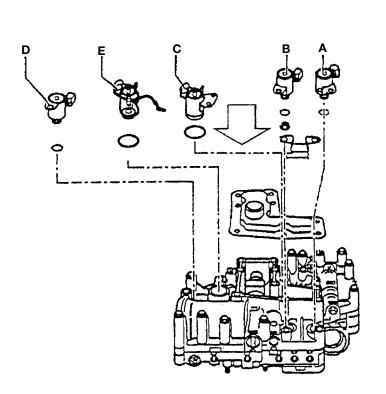


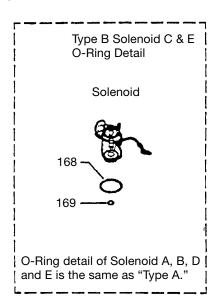

"Type A" and "Type B" determined by "Code Letter" as shown in the Table 1

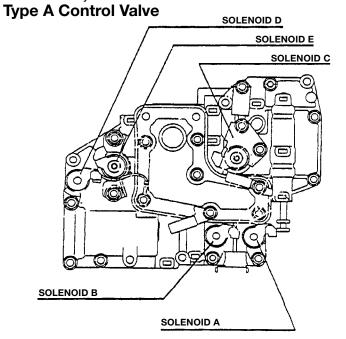


Type B Control Valve

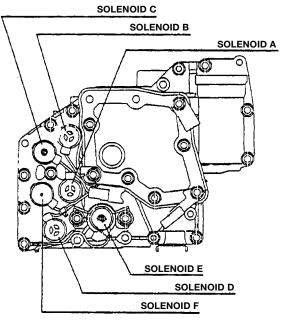




JATCO JF404E


Low Clutch Detail

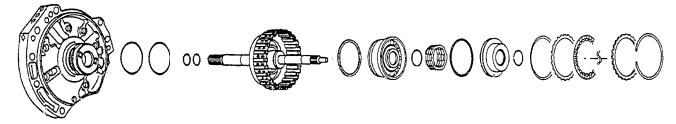


Reverse Clutch

 


High Clutch

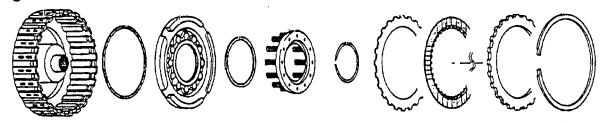

Low & Reverse Brake

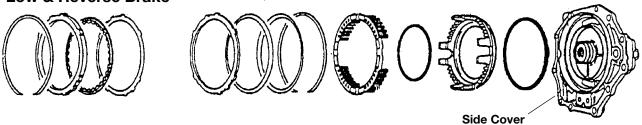



TRANStec®

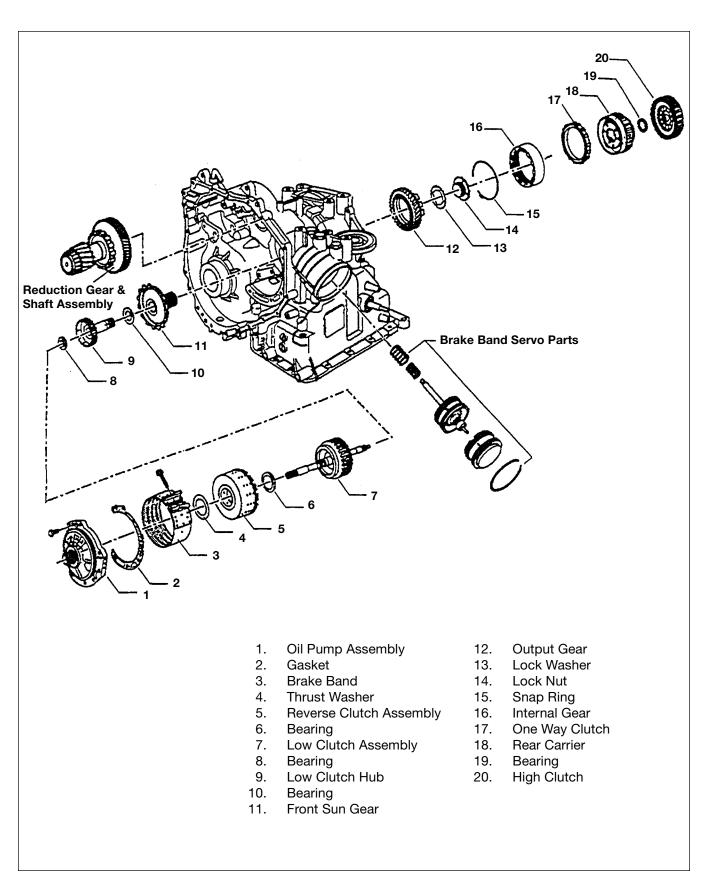



Case Passages, Valve Body Side

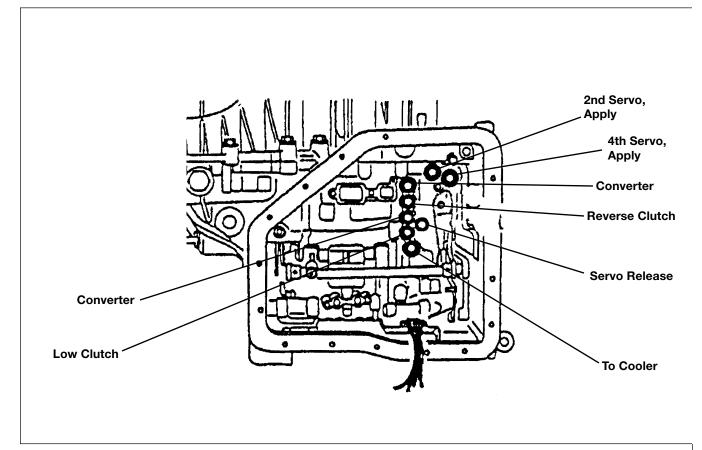

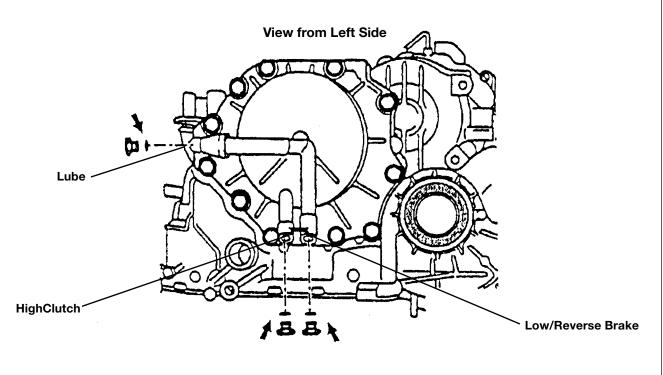



Brake Band Servo

