



BMW Motorrad



The Ultimate
Riding Machine

bmw-motorrad.com

Rider's Manual

S 1000 R

Vehicle data/dealership details

Vehicle data

Model

Vehicle Identification Number

Colour code

Date of first registration

Registration number

Dealership details

Person to contact in Service department

Ms/Mr

Phone number

Dealership address/phone number (company stamp)

Welcome to BMW

We congratulate you on your choice of a vehicle from BMW Motorrad and welcome you to the community of BMW riders. Familiarise yourself with your new vehicle so that you can ride it safely and confidently in all traffic situations.

About this Rider's Manual

Please read this Rider's Manual carefully before starting to use your new BMW. It contains important information on how to operate the controls and how to make the best possible use of all your BMW's technical features. In addition, it contains information on maintenance and care to help you maintain your vehicle's reliability and safety, as well as its value.

This record of the maintenance work you have had performed on

your vehicle is a precondition for generous treatment of goodwill claims.

If the time comes to sell your BMW, please remember to hand over this Rider's Manual to the new owner. It is an important part of the vehicle.

Suggestions and criticism

If you have questions concerning your vehicle, your authorised BMW Motorrad dealer will gladly provide advice and assistance.

We hope you will enjoy riding your BMW and that all your journeys will be pleasant and safe

BMW Motorrad.

01 40 8 402 051



Table of Contents

1 General instructions 5	Warnings 24	Helmet holder 61
Overview 6	4 Operation..... 39	Luggage loops 62
Abbreviations and symbols 6	Ignition switch/steering lock 40	5 Adjustment..... 63
Equipment 7	Electronic immobiliser EWS 41	Mirrors 64
Technical data 7	Emergency off switch (kill switch) 42	Headlight 64
Actuality 7	Lights 42	Brakes 64
2 General views 9	Hazard warning lights system 43	Spring preload 65
General view, left side 11	Turn indicators 44	Damping 69
General view, left side, with DDC 13	Multifunction display 45	6 Riding..... 75
General view, right side 15	Anti-theft alarm (DWA) 49	Safety instructions 76
Underneath the seat 16	BMW Motorrad Race ABS 51	Comply with checklist 78
Multifunction switch, left 17	Automatic Stability Control (ASC) 52	Starting..... 78
Multifunction switch, right 18	Dynamic Traction Control (DTC) 53	Running in 82
Instrument panel 19	Riding mode 54	Shifting gear 83
3 Status indicators 21	Cruise-control system 56	Brakes 85
Indicator and warning lights 22	Heated handlebar grips 58	Parking your motorcycle 87
Multifunction display 23	Front and rear seats..... 59	Refuelling 88
ABS Pro indicator 24		Securing motorcycle for transportation 90
		7 On the race track 93
		LAPTIMER 94
		RACE INFO 98
		SETUP MENU 103

Racing start	107	Riding without ABS, ASC or DTC	127	11 Care	171
Speed limiter for pit lane	109	9 Maintenance	129	Care products	172
Removing/installing mir- rors	109	General instructions	130	Washing the vehicle	172
Removing and installing number-plate carrier	110	Toolkit	130	Cleaning easily damaged components	173
Removing and installing front turn indicators	113	Front-wheel stand	131	Paint care	174
8 Engineering		Rear-wheel stand	132	Laying up the motor- cycle	174
details	115	Engine oil	132	Protective wax coating	174
Race ABS Antilock Brake System	116	Brake system	133	Restoring motorcycle to use	174
Automatic Stability Control (ASC)	119	Clutch	138	12 Technical data	175
Dynamic Traction Control (DTC)	120	Coolant	139	Troubleshooting chart	176
Dynamic Damping Control (DDC)	122	Tyres	140	Threaded fasteners	177
Riding mode	122	Rims and tyres	140	Fuel	179
Riding mode RAIN	123	Wheels	141	Engine oil	179
Riding mode ROAD	124	Light source	149	Engine	180
Riding mode DYNAMIC ...	125	Trim panel compon- ents	157	Clutch	181
Riding mode DYNAMIC PRO	126	Jump-starting	160	Transmission	181
		Battery	161	Final drive	182
		Fuses	163	Frame	182
		Diagnostic connector	164	Chassis and suspension	182
		Chain	165	Brakes	183
		10 Accessories	169	Wheels and tyres	184
		General instructions	170		

Electrical system	186
Dimensions	188
Weights	188
Riding specifications	189
13 Service	191
BMW Motorrad Service ...	192
BMW Motorrad Mobility services	192
Maintenance work.....	192
Maintenance schedule	195
Confirmation of mainten- ance work	196
Confirmation of service....	210
14 Appendix.....	213
Certificate for Electronic Immobiliser	214
15 Index	216

General instructions


Overview	6
Abbreviations and symbols	6
Equipment	7
Technical data	7
Actuality	7


Overview

Chapter 2 of this Rider's Manual will provide you with an initial overview of your motorcycle. All maintenance and repair work on the motorcycle is documented in Chapter 12. This record of the maintenance work you have had performed on your vehicle is a precondition for generous treatment of goodwill claims.


When the time comes to sell your BMW, please remember to hand over this Rider's Manual; it is an important part of the motorcycle.


Abbreviations and symbols

 **CAUTION** Low-risk hazard. Non-avoidance can lead to slight or moderate injury.

 **WARNING** Medium-risk hazard. Non-avoidance can lead to fatal or severe injury.

 **DANGER** High-risk hazard. Non-avoidance leads to fatal or severe injury.

 **ATTENTION** Special notes and precautionary measures. Non-compliance can lead to damage to the vehicle or accessory and, consequently, to voiding of the warranty.

 **NOTICE** Specific instructions on how to operate, control, adjust or look after items of equipment on the vehicle.

◀ Indicates the end of an item of information.

• Instruction.

» Result of an activity.

➔ Reference to a page with more detailed information.

◁ Indicates the end of a passage relating to specific accessories or items of equipment.

 Tightening torque.

 Technical data.

OE Optional extras. The vehicles are assembled complete with all the BMW Motorrad optional extras originally ordered.

- OA Optional accessories. You can obtain BMW Motorrad optional accessories through your authorised BMW Motorrad dealer; optional accessories have to be retrofitted to the vehicle.
- EWS Electronic immobiliser.
- DWA Anti-theft alarm (Diebstahlwarnanlage).
- ABS Anti-lock brake system.
- ASC Automatic Stability Control.
- DDC Dynamic Damping Control.
- DTC Dynamic Traction Control.

VDS Vertical Down Sensor (drop sensor).

Equipment

When you purchased your BMW motorcycle, you chose a model with individual equipment. This Rider's Manual describes the optional extras (OE) offered by BMW and selected optional accessories (OA). This explains why the manual may also contain descriptions of equipment which you have not ordered. Please note, too, that your motorcycle might not be exactly as illustrated in this manual on account of country-specific differences. If your motorcycle contains equipment that has not been described, its description can be found in a separate manual.

Technical data


All dimensions, weights and power ratings stated in the Rider's Manual are quoted to the standards and comply with the tolerance requirements of the Deutsches Institut für Normung e.V. (DIN). Versions for individual countries may differ.

Actuality

The high safety and quality level of BMW motorcycles is ensured by continuous development work on design, equipment and accessories. Because of this, your motorcycle may differ from the information supplied in the Rider's Manual. Nor can BMW Motorrad entirely rule out errors and omissions. We hope you will appreciate that no claims can be entertained on the basis of the data, illustrations or descriptions in this manual.


General views

General view, left side.....	11
General view, left side, with DDC ...	13
General view, right side	15
Underneath the seat	16
Multifunction switch, left	17
Multifunction switch, right.....	18
Instrument panel	19

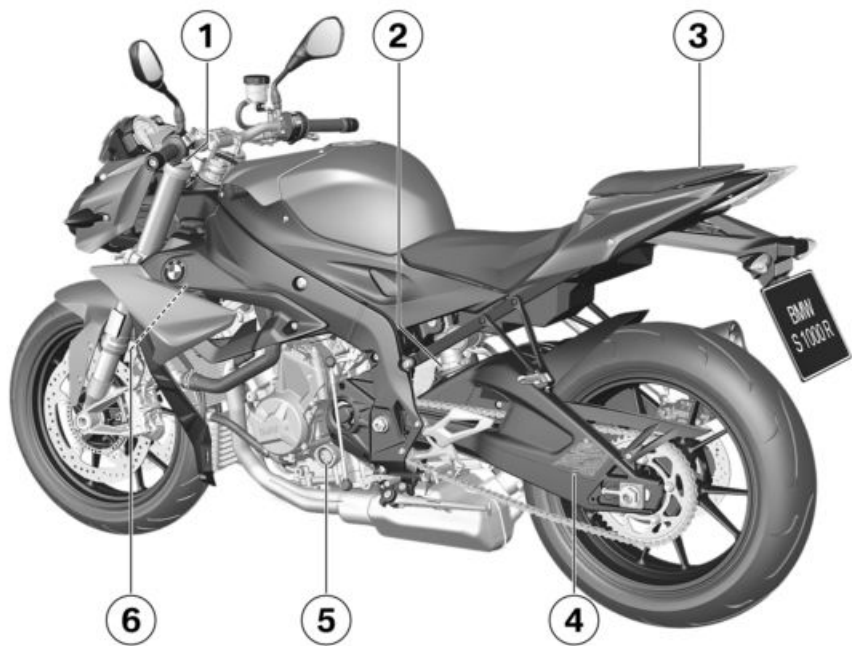

General view, left side


- 1** Adjuster for front compression-stage damping (red scale indicator) (▮▮▮▮▶ 70)
- 2** Adjuster for spring preload, rear (▮▮▮▶ 67)
- 3** Seat lock (▮▮▮▶ 59)
- 4** Tyre pressure table
Payload table
Chain settings
- 5** Engine oil level indicator (▮▮▮▶ 132)
- 6** Optional accessories
socket for navigation

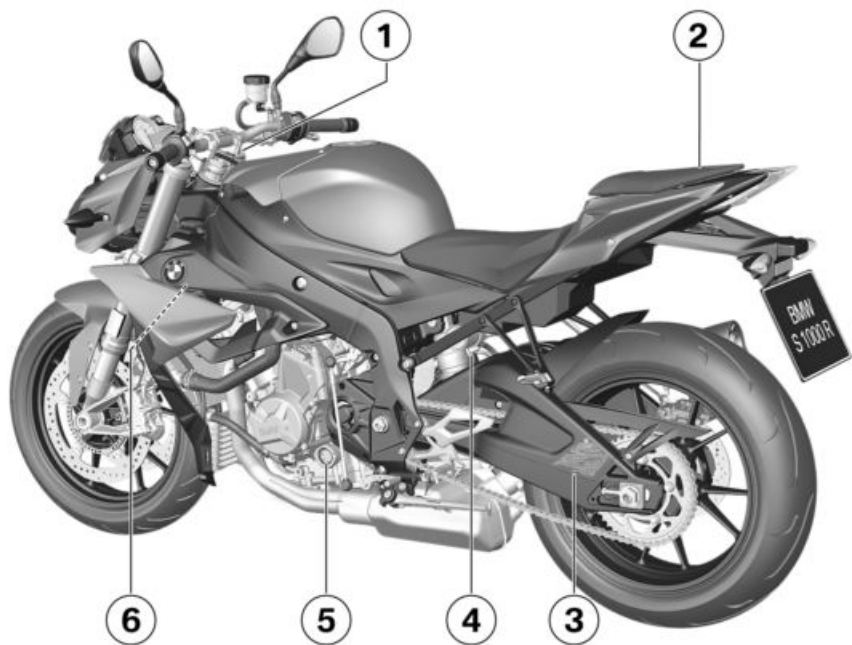





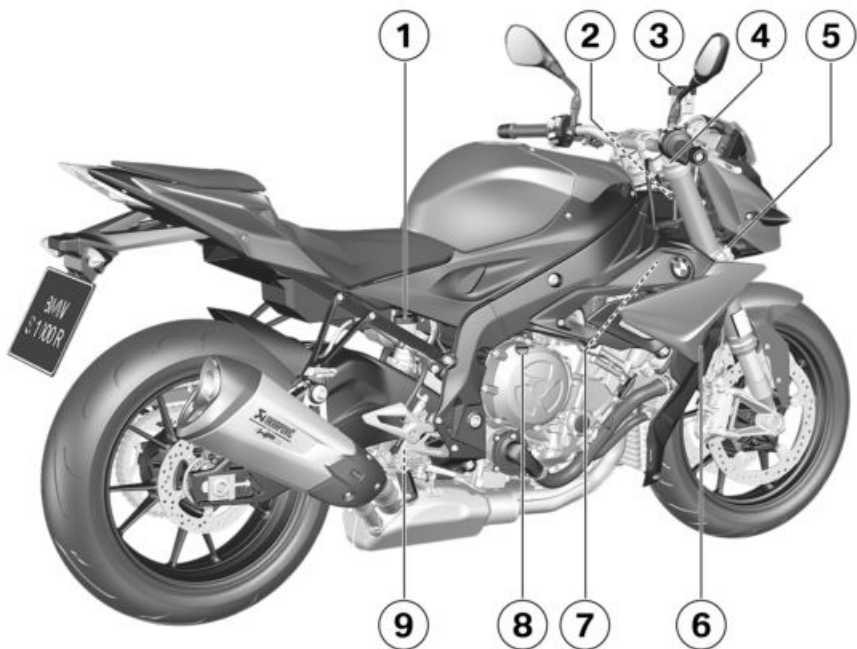

General view, left side, with DDC

– with Dynamic Damping Control
(DDC)^{OE}

- 1** Adjusting spring preload
for front wheel (▣▣▣▣▶ 66).
- 2** Seat lock (▣▣▣▶ 59)
- 3** Tyre pressure table
Payload table
Chain settings
- 4** Adjuster for spring preload,
rear (▣▣▣▶ 68)
- 5** Engine oil level indicator
(▣▣▣▶ 132)
- 6** Optional accessories
socket for navigation





General view, right side

- 1 Brake-fluid reservoir, rear
( 137)
- 2 VIN and type plate (on steering-head bearing)
- 3 Brake-fluid tank, front
( 136)
- 4 Setting the front rebound-stage damping (yellow scale indicator) ( 70)
- 5 Steering damper
- 6 Coolant-level indicator
( 139)
- 7 OA connector
- 8 Oil filler neck ( 133)
- 9 Setting the rear rebound-stage damping (down at the spring strut, yellow scale indicator) ( 71)

Underneath the seat

- 1 Battery (➡ 161)
- 2 Helmet holder (➡ 61)
- 3 Luggage loops (➡ 62)
- 4 Toolkit (➡ 130)
- 5 Anti-theft alarm (➡ 49)
- 6 Fuse box (➡ 163)
- 7 Rider's Manual
- 8 Diagnostic connector
- 9 Coding plug (➡ 56)

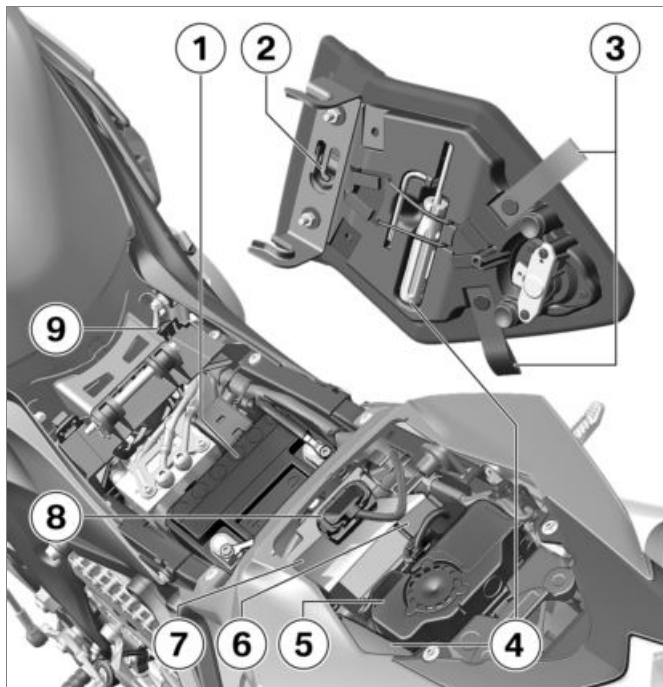

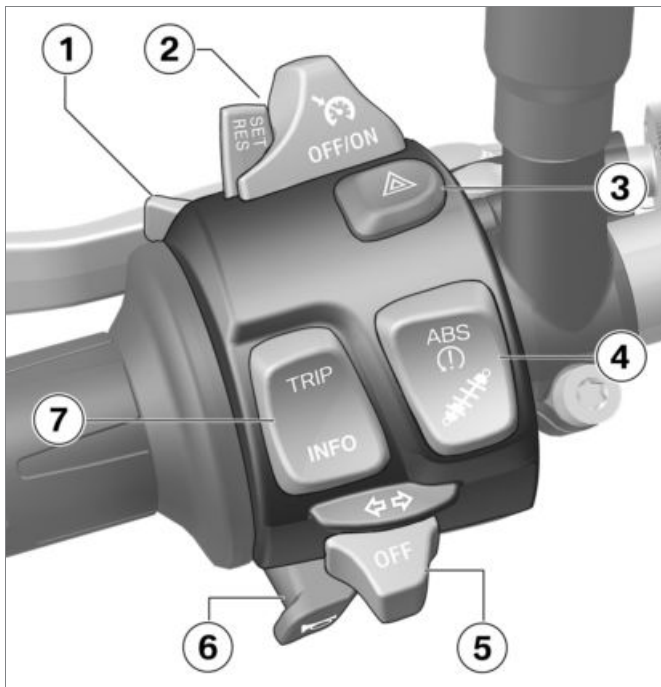


Multifunction switch, left

- 1 High-beam headlight and headlight flasher (➔ 42)
Lap timer (➔ 96)
- 2 Cruise-control system (➔ 56)
- 3 Hazard warning flashers (➔ 43)
- 4 BMW Motorrad Race ABS (➔ 51)
ASC (➔ 52)
DTC (➔ 53)
DDC (➔ 73)
- 5 Turn indicators (➔ 44)
- 6 Horn
- 7 Display-mode selection (➔ 45)

Multifunction switch, right

- 1 Heated handlebar grips (→ 58)
- 2 Riding mode (→ 54)
- 3 Emergency off switch (kill switch) (→ 42)
- 4 Start engine (→ 78)



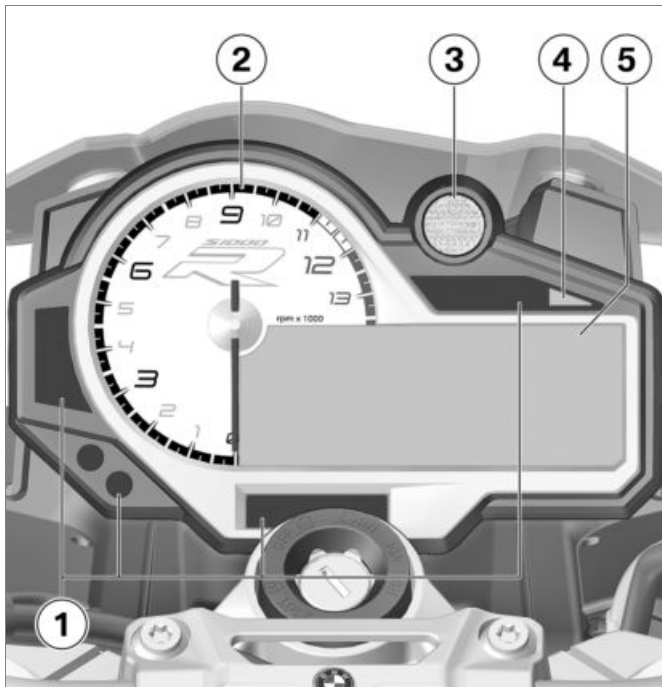

Instrument panel


- 1 Indicator and warning light fields (►► 22)
- 2 Engine speed display
- 3 Gearshift light (►► 83)
- 4 Ambient-light brightness sensor (for adapting the brightness of the instrument lighting)
 - with alarm system (DWA)^{OE}
 - DWA indicator light (►► 49)
- 5 Multifunction display (►► 23)


Status indicators

Indicator and warning lights	22
Multifunction display	23
ABS Pro indicator	24
Warnings	24

Indicator and warning lights

- 1 ASC (☞ 33)
DTC (☞ 34)
- 2 ABS (☞ 32)
- 3 Turn indicators, left
- 4 General warning light (in combination with warnings in the display) (☞ 24)
- 5 Turn indicators, right
- 6 Fuel reserve (☞ 37)
- 7 Neutral
- 8 High-beam headlight
- 9 Malfunction indicator lamp (☞ 29)
- 10 Cruise-control system
– with cruise control^{OE}
Switching on cruise control (☞ 56).
- 11 Light for the quickest lap (☞ 97)

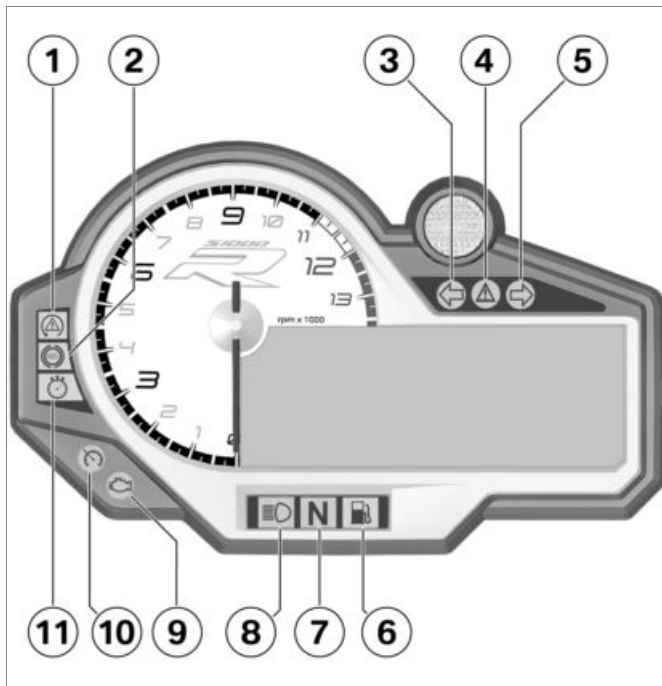

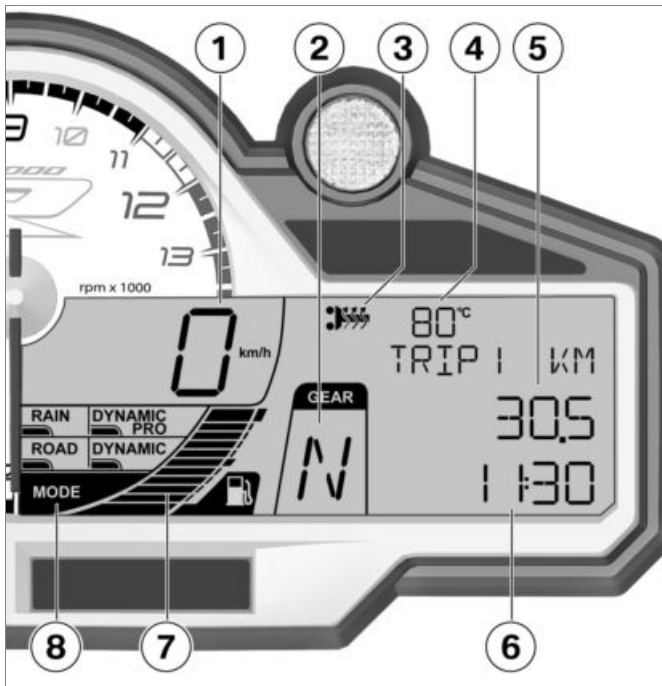

Multifunction display

- 1 Speedometer
- 2 Gear indicator; "N" indicates neutral
- 3 Operating the heated handlebar grips (➡ 58)
- 4 Coolant temperature
- 5 General information (➡ 47)
- 6 Clock (➡ 47)
- 7 Fuel level
- 8 Riding mode (➡ 54)



NOTICE

See Section 5 for information on the display modes for the race track. ◀

ABS Pro indicator

– with ABS Pro^{OE}




During the Pre-Ride-Check, the availability of the ABS Pro function is indicated by "ABS Pro" showing in the multifunction display.

Warnings

Mode of presentation

Warnings are indicated by the corresponding warning lights.

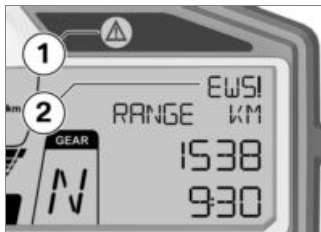

Warnings for which there is no dedicated warning light are indicated by 'General' warning light **1** showing in combination with a warning such as, for example, **2** appearing on the multifunction display. The 'general' warning light shows red or yellow, depending on the urgency of the warning.







If two or more warnings occur at the same time, all the appropriate warning lights and warning symbols appear, alternating with warning words as applicable.

The possible warnings are listed on the next pages.

Warnings, overview Telltale and warning lights






Warning symbols in the display

Meaning

	lights up yellow	EWS! appears on the display	EWS active (→ 29)
	flashes red	Coolant-temperature reading flashes	Coolant temperature too high (→ 29)
	lights up yellow	Engine! appears on the display.	Engine in emergency-operation mode (→ 29)
	flashes yellow	Engine! appears on the display.	Severe fault in the engine control (→ 30)
	The malfunction indicator lamp lights up		Emissions warning (→ 30)
		LAMP! appears on the display	Bulbs for flashing turn indicators defective (→ 30)
	lights up yellow	LAMPR! appears on the display	Rear light defective (→ 31)

Telltale and warning lights









Warning symbols in the display

		Meaning
	lights up yellow	Bulbs for front parking light defective (➡ 31)
		Front lights defective (➡ 31)
		VDS! appears on the blank display
		Motorcycle dropped (➡ 32)
		VDS! appears on the display
		Drop sensor defective (➡ 32)
	flashes	ABS self-diagnosis not completed (➡ 32)
	lights up	ABS fault (➡ 32)
	quick-flashes	ASC intervention (➡ 33)
	slow-flashes	ASC self-diagnosis not completed (➡ 33)

Telltale and warning lights






Warning symbols in the display

Meaning

	lights up		ASC switched off (→ 33)
	lights up		ASC fault (→ 33)
	lights up		ABS switched off (→ 33)
	quick-flashes		DTC intervention (→ 34)
	slow-flashes		DTC self-diagnosis not completed (→ 34)
	lights up		DTC switched off (→ 34)
	lights up		DTC fault (→ 34)
	lights up yellow	DDC ! appears on the display	DDC fault (→ 35)

Telltale and warning lights

Warning symbols in the display

		Meaning
	 The gear indicator flashes.	Gear not trained (➡ 35)
		DWA! appears on the display
		DWA battery weak (➡ 35)
	lights up yellow	DWA! appears on the display
		DWA battery flat (➡ 36)
	lights up red	NO CAN appears on the display
		CAN open circuit/short circuit (➡ 36)
	lights up yellow	NO CODING appears on the display
		No coding (➡ 36)
	lights up	Fuel down to reserve (➡ 37)

EWS active


 General warning light shows yellow.

EWS! appears on the display.
Possible cause:

The key being used is not authorised for starting, or communication between key and engine electronics is disrupted.

- Remove all other vehicle keys from the same ring as the key used for the vehicle.
- Use the reserve key.
- Have the defective key replaced, preferably by an authorised BMW Motorrad dealer.

Coolant temperature too high

 General warning light flashes red.

The coolant-temperature reading flashes.



ATTENTION

Riding with overheated engine

Engine damage


- Compliance with the information set out below is essential.◀

Possible cause:

The coolant temperature is too high.

- If possible, ride in the part-load range to cool down the engine.
- Check the coolant level.
- If the coolant temperature is frequently too high, have the fault rectified as soon as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Engine in emergency-operation mode

 General warning light shows yellow.

Engine! appears on the display



WARNING

Unusual ride characteristics when engine running in emergency-operation mode

Risk of accident

- Adapt your style of riding accordingly: avoid accelerating sharply and overtaking.◀

Possible cause:

The engine control unit has diagnosed a fault. In exceptional cases, the engine stops and refuses to start. Otherwise, the engine runs in emergency operating mode.

- You can continue to ride, but bear in mind that the usual engine power or the full range of

engine rpm might not be available.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Severe fault in the engine control



General warning light flashes yellow.

Engine! appears on the display



WARNING

Engine damage when running in emergency-operation mode

Risk of accident

- Adapt your style of riding accordingly: ride slowly, avoid sharp accelerating and overtaking.
- If possible, have the vehicle brought in and the fault

rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

Possible cause:

The engine control unit has diagnosed a fault which may cause severe secondary faults. The engine is in emergency-operation mode.

- It is possible to continue to ride but not recommended.
- Avoid high load and rpm ranges if possible.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Emissions warning



The malfunction indicator lamp lights up

Possible cause:

The engine control unit has diagnosed a fault which affects the pollutant emissions.

- Have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- » You can continue riding; pollutant emissions are higher than the threshold values.

Bulbs for flashing turn indicators defective

LAMP! appears on the display.



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Bulb for turn indicator defective.

- Replacing bulbs for front and rear turn indicators (➡ 154).

Possible cause:

The number plate carrier is removed, the vehicle electronics detect the missing turn indicator.

- Installing number-plate carrier (➡ 111).



NOTICE

If the number-plate carrier is removed in preparation for a race-track session, the electronics detect a bulb failure and the appropriate warning appears on the display. Activating the **EQIP WARN LAMP** function in the **SETUP MENU** suppresses this warning.◀

Rear light defective



General warning light shows yellow.

LAMP R! appears on the display.

Possible cause:

Rear light bulb or brake light bulb faulty.

- The LED rear light must be replaced. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.

Bulbs for front parking light defective



General warning light shows yellow (only if both parking lights fail).

LAMP F! appears on the display.



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Bulb for side light defective.

- Replacing bulb for left parking light (➡ 151).
- Replacing bulb for right side light (➡ 153).

Front lights defective

No indication of a fault if the high-beam or low-beam headlight fails.



WARNING

Vehicle overlooked in traffic due to failure of the lights on the vehicle

Safety risk

- Replace defective bulbs as soon as possible; always carry a complete set of spare bulbs if possible.◀

Possible cause:

Front bulb is defective.

- Replacing bulb for low-beam headlight (►► 149).
- Replacing bulb for high-beam headlight (►► 151).

Motorcycle dropped

VDS! (Vertical Down Sensor) appears on the blank display.

Possible cause:

The drop sensor has detected a drop and has cut out the engine.

- Bring the motorcycle to the upright position
- Switch the ignition off and then on again or switch the kill switch on and then off again.

Drop sensor defective

VDS! (Vertical Down Sensor) appears on the display.

Possible cause:

A defect in the drop sensor has been detected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis not completed



ABS telltale and warning light flashes.

Possible cause:



ABS self-diagnosis not completed

The ABS function is not available because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the ABS function is not

available until self-diagnosis has completed.

ABS fault



ABS telltale and warning light shows.

Possible cause:

The ABS control unit has detected a fault. The ABS function is not available or the functionality is subject to certain restrictions.

- You can continue to ride the vehicle, but make due provision for the fact that the ABS function is not available. Bear in mind the more detailed information on situations that can lead to an ABS fault (►► 117).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC intervention



ASC telltale and warning light quick-flashes.

The ASC has detected a degree of instability at the rear wheel and has intervened to reduce torque. The indicator and warning light flashes longer than the ASC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

ASC self-diagnosis not completed



ASC telltale and warning light slow-flashes.

Possible cause:



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the ASC function is not available until self-diagnosis has completed.

ASC switched off



ASC telltale and warning light shows.

Possible cause:

The rider has switched off the ASC system.

- Switch on the ASC function (► 52).

ASC fault



ASC telltale and warning light shows.

Possible cause:

The ASC control unit has detected a fault. Bear in mind that the ASC function is not available or the functionality is subject to certain restrictions.

- You can continue to ride. Bear in mind the more detailed information on situations that can lead to an ASC fault (► 119).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS switched off



ABS telltale and warning light shows.


Possible cause:

The rider has switched off the ABS system.

- Switch on the ABS function (▮▮▮▶ 51).

DTC intervention


– with Dynamic Traction Control (DTC)^{OE}

 DTC indicator and warning light flashes quickly.

The DTC control unit has detected a degree of instability at the rear wheel and has intervened to reduce torque. The warning light flashes for longer than DTC intervention lasts. This affords the rider visual feedback on control intervention even after the critical situation has been dealt with.

DTC self-diagnosis not completed

– with Dynamic Traction Control (DTC)^{OE}

 DTC warning light slow-flashes.

Possible cause:


 DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

- Pull away slowly. Bear in mind that the DTC function is not available until self-diagnosis has completed.

DTC switched off

– with Dynamic Traction Control (DTC)^{OE}

 DTC warning light flashes.


Possible cause:

The rider has switched off the DTC system.

- Switch on the DTC function (▮▮▮▶ 53).

DTC fault

– with Dynamic Traction Control (DTC)^{OE}

 DTC warning light flashes.

Possible cause:

The DTC control unit has detected a fault. Bear in mind that the DTC function is not available or the functionality is subject to certain restrictions.

- You can continue to ride. Bear in mind the more detailed information on situations that can lead to an DTC fault (►► 119).
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

DDC fault

 General warning light shows yellow.

DDC! appears on the display.

Possible cause:

The DDC control unit has detected a fault.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- » In this condition, the motorcycle has too much damping and is uncomfortable to drive,

especially on roads in poor condition.

Gear not trained

– with shift assistant Pro^{OE}

N The gear indicator flashes.
The Pro shift assistant is not available.

Possible cause:

– with shift assistant Pro^{OE}

The gearbox sensor is not fully trained.

- Engage neutral gear N and, with the vehicle at a standstill, let the engine run for at least 10 seconds to train the idle gear.
- Engage all gears with clutch actuation and ride at least 10 seconds with the engaged gear.
- » The gear indicator starts to flash when the gearbox sensor has been trained successfully.

– Shift assistant Pro will operate as described (►► 84) once the transmission sensor has been completely taught-in.

- If the training process was not successful, have the fault rectified by a specialist workshop, preferably an authorised BMW Motorrad dealer.

DWA battery weak

– with alarm system (DWA)^{OE}

DWA!O! appears on the display.

 **NOTICE**

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm (DWA) has lost a significant proportion of its original capacity. There is no assurance of how long the DWA anti-theft alarm can remain operational if

the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

DWA battery flat

– with alarm system (DWA)^{OE}



General warning light shows yellow.

DWA! appears on the display.



NOTICE

This error message shows briefly only after the Pre-Ride-Check completes. ◀

Possible cause:

The integral battery in the anti-theft alarm (DWA) has lost its entire original capacity. There is no assurance that the DWA anti-theft alarm will be operational if the vehicle's battery is disconnected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

CAN open circuit/short circuit



General warning light shows red.

NO CAN (Controller Area Network) appears on the display.

Possible cause:

A fault in the Controller Area Network has been detected.

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

No coding



General warning light shows yellow.

NO CODING appears on the display.

Possible cause:

A coding fault has been detected.

- The reading remains visible for 10 seconds before disappearing automatically.
- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.


Service-due indicator




If the next service is due in less than one month, the date for the next service **1** is shown briefly after the Pre-Ride-Check completes. In this example the reading means "October 2013".



If the vehicle covers long distances in the course of the year, under certain circumstances it might be necessary to have it serviced at a date in advance of the forecast due date. If the countdown distance to the early service is within the defined displayable range, this countdown distance **1** appears briefly on the display after the Pre-Ride-Check completes.

	Display of maximum remaining distance to next service:
	1000 km

 General warning light shows yellow and **SERVICE!** remains permanently visible on the display.

If service is overdue, the due date or the odometer reading at which service was due is accompanied by the 'General' warning light showing yellow. The word "Service" remains permanently visible.


Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

NOTICE

If the service-due indicator appears more than a month before the service date, the date saved in the instrument cluster must be adjusted. This situation can occur if the battery was disconnected for a prolonged period of time.

If you want to have the date set consult a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

Fuel down to reserve

 Warning light for fuel down to reserve shows.

WARNING

Irregular engine operation or engine shutdown due to lack of fuel

Risk of accident, damage to catalytic converter

- Do not run the fuel tank dry.◀

Possible cause:

The fuel tank contains no more than the reserve quantity of fuel.




Fuel reserve

approx. 4 l

- Refuelling (▣▣▣ 88).

Range

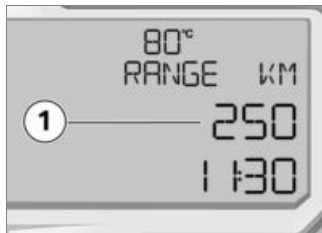

The range readout **1** indicates how far you can ride with the fuel remaining in the tank. This distance is calculated on the basis of fuel level and average consumption.

After a refuelling stop, the distance counter for reserve fuel is reset if the amount of fuel in the tank is greater than the reserve quantity.

When the motorcycle is propped on its side stand the slight angle of inclination means that the sensor cannot register the fuel level correctly. This is the reason

why the range is calculated only when the side stand is in the retracted position.

NOTICE

The calculated range is only an approximate figure. Consequently, BMW Motorrad recommends that you should not try to use the full range before refuelling.◀

Operation

Ignition switch/steering lock	40	Front and rear seats	59
Electronic immobiliser EWS.....	41	Helmet holder	61
Emergency off switch (kill switch).....	42	Luggage loops.....	62
Lights.....	42		
Hazard warning lights system	43		
Turn indicators.....	44		
Multifunction display	45		
Anti-theft alarm (DWA).....	49		
BMW Motorrad Race ABS.....	51		
Automatic Stability Control (ASC).....	52		
Dynamic Traction Control (DTC)....	53		
Riding mode	54		
Cruise-control system	56		
Heated handlebar grips	58		

Ignition switch/steering lock

Keys


You receive 2 ignition keys. Consult the information on the electronic immobiliser (EWS) (► 41) if a key is lost or mislaid.

One-key system

- Ignition switch/steering lock
- Tank filler cap
- Seat lock
- Rear seat cover


Lock the handlebars

- Turn the handlebars to the left full-lock position.

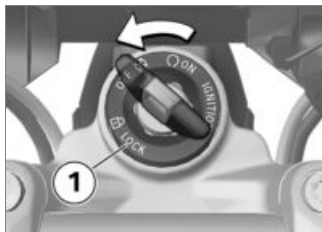


- Turn the key to position **1**, while moving the handlebars slightly.
 - » Ignition, lights and all function circuits are switched off.
 - » Handlebars are locked.
 - » Key can be removed.

Switching on ignition

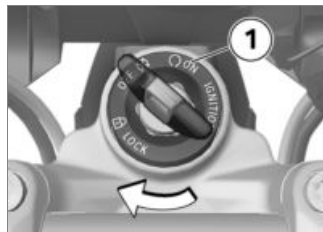

- Insert the key in the ignition switch and turn to position **1**.
 - » Side lights and all function circuits are switched on.
 - » Pre-Ride-Check is performed. (► 79)
 - » ABS self-diagnosis is in progress. (► 80)
 - » ASC self-diagnosis is in progress. (► 81)
 - with Dynamic Traction Control (DTC)^{OE}
 - » DTC self-diagnosis is in progress. (► 81)◁

Switching off ignition

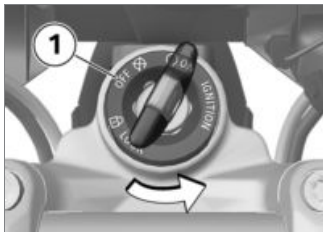

- Turn the ignition key to position **1**.
 - » Lights are switched off.
 - » Handlebars (steering lock) are not locked.
 - » Key can be removed.
 - » The number-plate light goes out after 10 seconds.

Electronic immobiliser EWS

The electronic design of the motorcycle allows it to access data stored in the ignition key by means of a ring antenna loc-

ated in the ignition switch/steering lock. The engine control unit will only allow the engine to be started if the key is identified as “authorised”.

NOTICE

A spare key attached to the same ring as the ignition key used to start the engine could “irritate” the electronics, in which case the enabling signal for starting is not issued. The EWS warning appears in the multifunction display. Always keep the spare key separately from the ignition key. ◀

If you lose a key, you can have it barred by your authorised BMW Motorrad dealer.

If you wish to do this, you will need to bring all other keys for the motorcycle with you. The engine cannot be started by a barred key, but a key that has

been barred can subsequently be reactivated.

You can obtain extra keys only through an authorised BMW Motorrad dealer. The keys are part of an integrated security system, so the dealer is under an obligation to check the legitimacy of all applications for replacement/extra keys.

Emergency off switch (kill switch)



- 1 Emergency off switch (kill switch)



WARNING

Operation of the kill switch while riding

Risk of fall due to rear wheel locking

- Do not operate the kill switch when riding. ◀

The emergency off switch is a kill switch for switching off the engine quickly and easily.



- a Engine switched off
b Normal operating position (run)

Lights

Side light

The side lights switch on automatically when the ignition is switched on.



NOTICE


The side lights place a strain on the battery. Do not switch the ignition on for longer than absolutely necessary. ◀

Low-beam headlight

The low-beam headlight switches on automatically when you start the engine.

High-beam headlight and headlight flasher


- Start the engine.

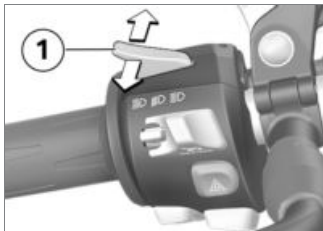

- Push switch **1** up to switch on the high-beam headlight.
- Press switch **1** down to operate the headlight flasher.

Parking lights

- Switch off the ignition.

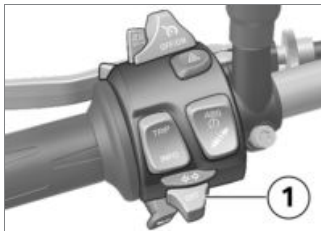

- Immediately after switching off the ignition, push button **1** to the left and hold it in this position until the parking lights come on.

NOTICE

You can switch on the parking lights within 10 seconds after switching off the ignition.◀

- Switch the ignition on and off again to switch off the parking lights.

Hazard warning lights system

Switching on hazard warning flashers

- Switch on the ignition.

NOTICE

The hazard warning flashers place a strain on the battery. Do not use the hazard warning flashers for longer than absolutely necessary.◀



- Press button **1** to switch on the hazard warning flashers.

- » Ignition can be switched off.
- To switch off the hazard warning flashers, switch on the ignition and press button **1** again.

Turn indicators

Operating the turn indicators

- Switch on the ignition.



NOTICE


The turn indicators are cancelled automatically after the defined time and distance. The defined time and distance travelled can be set by an authorised BMW Motorrad dealer. ◀



- Push button **1** to the left to switch on the left turn indicators.
- Push button **1** to the right to switch on the right turn indicators.
- Operate centre button **1** to cancel the turn indicators.

Multifunction display

Selecting the display mode

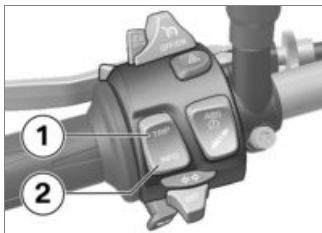


- Press button **1** to view the **ROAD** display mode.
- Press button **2** to view other display modes.

The display modes at your disposal are as follows:

- **ROAD**: All the information necessary for riding on public roads is presented here.
- **LAPTIMER**: Lap times and other data can be logged here

and subsequently retrieved in the **RACE INFO** display mode.

- **RACE INFO**: The information logged with the **LAPTIMER** can be retrieved for viewing here. Note that this display mode can be activated only when the motorcycle is at a standstill.
- **SETUP MENU**: The instrument panel can be configured to suit the rider's preferences here. Note that this display mode can be activated only when the motorcycle is at a standstill.

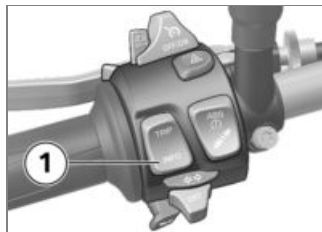


- When the display shows **RACE INFO** or **SETUP MENU**, as applicable, press and hold down button **1** to activate the mode.

Overview of the display modes

- Solid line: short-press the button.
- Broken line: press and hold down the button.

- 1 On-board computer readings (➡ 47)
- 2 Starting timing (➡ 96)
- 3 Start RACE INFO (➡ 98)
- 4 Start SETUP MENU (➡ 103)

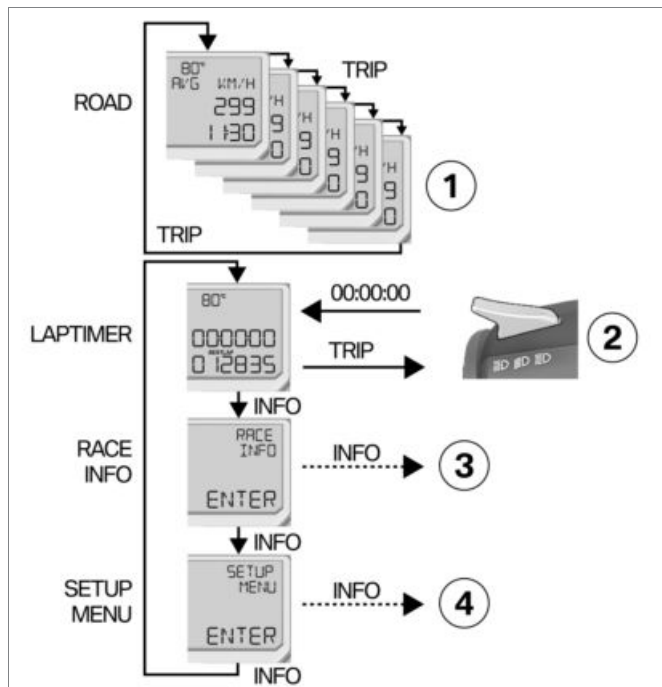

Selecting readings in ROAD mode

- Switch on the ignition.




- Repeatedly press button **1** until the value you want appears in panel **2**.

The following values can be displayed:

- Total distance travelled
- Range
- Trip distance 1 (Trip I)
- Trip distance 2 (Trip II)
- Average consumption
- Average speed

Resetting the average values

- Switch on the ignition.

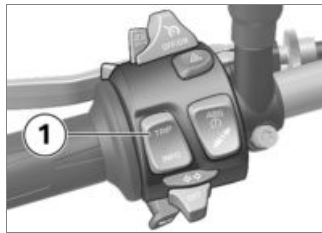

- Repeatedly short-press button **1** until the average value you want to reset appears in the display line.
- Press and hold down button **1** until the value you selected has reset.

Setting the clock

- Switch on the ignition.



- Repeatedly press button **2** until SETUP MENU ENTER appears on the display.
- Press and hold down button **2**.
- Repeatedly press button **2** until SETUP EQUIPMENT ENTER appears on the display.
- Press and hold down button **2**.
- Repeatedly press button **2** until SETUP EQUIP:CLOCK TIME appears on the display.
- Press and hold down button **2** until the minutes number **4** flashes.
- Press button **1** to step the minutes reading up.

- Press button **2** to step the minutes reading down.
 - When the minutes reading is correct, hold down button **2** until hours reading **3** flashes.
 - Press button **1** to step the hours reading up.
 - Press button **2** to step the hours reading down.
 - When the hours reading is correct, press and hold down button **2** until the number stops flashing.
- » This completes the process.

Anti-theft alarm (DWA)

– with alarm system (DWA)^{OE}

Activation

- Switching on ignition (➡ 40).
- DWA adjusting (➡ 50).
- Switch off the ignition.
- » If the DWA is activated, the DWA is automatically activated after having switched off the ignition.
- » The alarm system is active after approximately 30 seconds.
- » Turn indicators flash twice.
- » Confirmation tone sounds twice (if programmed).
- » Anti-theft alarm (DWA) is active.

Alarm signal

A DWA alarm can be triggered by:

- motion sensor
- an attempt to use an unauthorised vehicle key to switch on the ignition
- disconnection of the DWA anti-theft alarm from the motorcycle's battery (DWA internal battery in the anti-theft alarm provides power - alarm tone only, the turn indicators do not flash).

All functions are sustained even if the internal battery of the DWA anti-theft alarm system is flat; the only difference is that an alarm cannot be triggered if the system is disconnected from the motorcycle's battery.

An alarm lasts for approximately 26 seconds. While an alarm is in progress an alarm tone sounds and the turn indicators flash. The type of alarm tone can be set by

an authorised BMW Motorrad Retailer.

If an alarm was triggered while the motorcycle was unattended, the rider is notified accordingly by an alarm tone sounding once when the ignition is switched on. The DWA LED then indicates the reason for the alarm for one minute.

Light signals issued by the DWA LED:

- Flashes 1x: Motion sensor 1
- Flashes 2x: Motion sensor 2
- Flashes 3x: Ignition switched on with unauthorised vehicle key
- Flashes 4x: Disconnection of the DWA anti-theft alarm from the motorcycle's battery
- Flashes 5x: Motion sensor 3


Deactivation

- Shift emergency-off switch to operating position.

- Switch on the ignition.
- » Turn indicators flash once.
- » Confirmation tone sounds once (if programmed).
- » Anti-theft alarm (DWA) is deactivated.

DWA adjusting

- Switching on ignition (➡ 40).

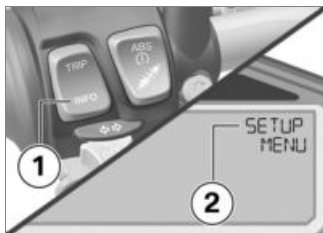

- Repeatedly press button **1** briefly until the display line displays **2** SETUP MENU ENTER.
- Press and hold button **1** to launch the SETUP MENU.



- Repeatedly press button **1** briefly until the display line displays **2** SETUP EQUIPMENT ENTER.
- Press and hold button **1** to launch the SETUP EQUIPMENT.



- Press button **1** briefly to select the SETUP EQIP DWA menu item.
 - » AUTO appears in display line **2**.
 - » The preset ON/OFF value appears in display line **3**.
 - Press and hold button **1** in order to change the set value.
- The following settings are available:
- AUTO ON: the DWA anti-theft alarm is active and will be armed automatically when the ignition is switched off.
 - AUTO OFF: the DWA anti-theft alarm is deactivated.


BMW Motorrad Race ABS

Switch off the ABS function


- Switch on the ignition.


NOTICE

You have the option of deactivating the ABS function while the motorcycle is on the move. ◀

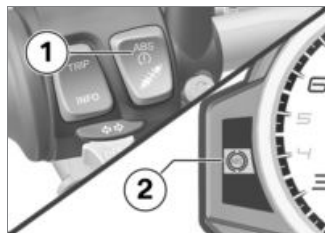


- Press and hold down button **1** until ABS indicator and warning light **2** changes status.

 ABS telltale and warning light shows.

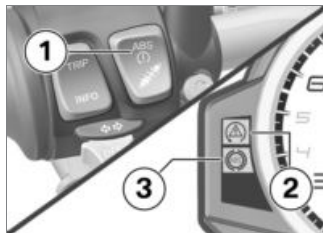

- Press and hold down button **1** until first DTC warning light **2** and then ABS indicator and warning light **3** change status.
» The DTC setting remains unchanged.


 ABS telltale and warning light shows.

- Release button **1** within two seconds.


 ABS telltale and warning light remains on.

» ABS function is switched off.


Switch on the ABS function

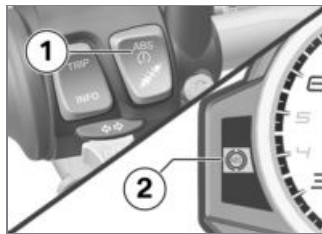

- Press and hold down button **1** until ABS indicator and warning light **2** changes status.

 ABS telltale and warning light goes out; if self-diagnosis has not completed it starts flashing.

- Release button **1** within two seconds.

 ABS telltale and warning light remains off or continues to flash.

» ABS indicator and warning light switched on.

- If the encoding plug is not inserted, you have the alternative of switching the ignition off and then on again.



An ABS fault has occurred if the ABS indicator and warning light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 5 km/h

Automatic Stability Control (ASC)


Switch off the ASC function



- Start the engine.



NOTICE

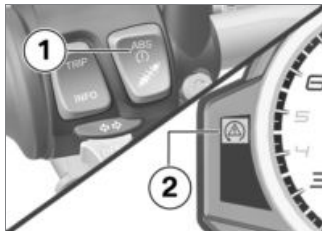
You have the option of deactivating the ASC function while the motorcycle is on the move. ◀





- Press and hold down button **1** until ASC indicator and warning light **2** changes status.
-  ASC telltale and warning light starts to show.
- Release button **1** within two seconds.
-  ASC telltale and warning light remains on.

» ASC function is switched off.

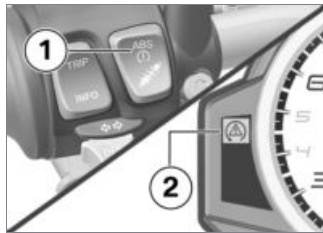
Switch on the ASC function



- Press and hold down button **1** until ASC indicator and warning light **2** changes status.
-  ASC telltale and warning light goes out; if self-diagnosis has not completed it starts flashing.
- Release button **1** within two seconds.
-  ASC telltale and warning light remains off or continues to flash.

» ASC function is switched on.

- If the encoding plug is not inserted, you have the alternative of switching the ignition off and then on again.

 An ASC fault has occurred if the ASC indicator and warning light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 5 km/h

Dynamic Traction Control (DTC)


– with Dynamic Traction Control (DTC)^{OE}

Switch off the DTC function


- Start the engine.

NOTICE

You have the option of deactivating the DTC function while the motorcycle is on the move. ◀

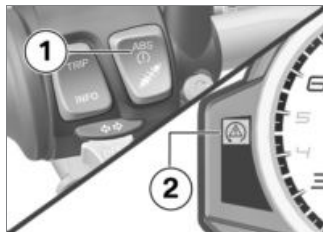

- Press and hold down button **1** until DTC warning light **2** changes status.


 DTC warning light starts to show.

- Release button **1** within two seconds.


 DTC warning light continues to flash.

» DTC function is switched off.


Switch on the DTC function

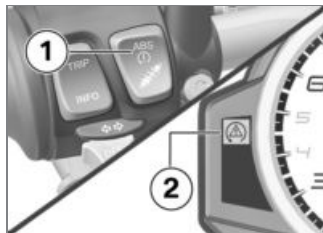

- Press and hold down button **1** until DTC warning light **2** changes status.

 DTC warning light goes out; if self-diagnosis has not completed it starts flashing.

- Release button **1** within two seconds.

 DTC indicator and warning light remains off or continues to flash.

- » DTC function is switched on.
- If the encoding plug is not inserted, you have the alternative of switching the ignition off and then on again.



A DTC fault has occurred if the DTC warning light shows when the motorcycle accelerates to a speed in excess of the minimum stated below after the ignition was switched off and then on again.

min 5 km/h

Riding mode

Using the riding modes

BMW Motorrad has developed 4 operational scenarios for your motorcycle from which you can select the scenario suitable for your situation:

- Riding on a rain-wet road surface.
- Riding on a dry road surface.
- with riding modes Pro^{OE}
- Dynamic riding on a dry road surface.
- Sporty riding on a dry road surface.

The interplay of engine management, throttle response, ABS control and ASC or DTC control is optimised for each of these 4 scenarios. The optimum setting is preset for DDC.

Setting riding mode

- Switching on ignition (➡ 40).




- Press button **1**.



NOTICE

See the section entitled "Engineering details" for more information on the various ride modes that can be selected.◀

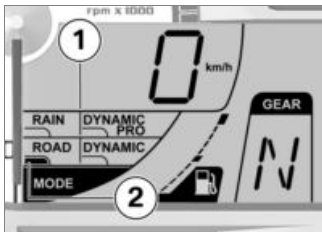

Selection menu **1** with the four selectable riding modes appears on the display. The highlight **2** tells you which riding mode is currently selected.



- Repeatedly press button **1** until the riding mode you want is highlighted.

The following ride modes can be selected:


- RAIN: For riding on a rain-wet road surface.
- ROAD: For riding on a dry road surface.
- with riding modes Pro^{OE}
 - » The following riding modes are additionally available for selection:
 - DYNAMIC: For dynamic riding on a dry road surface.

- DYNAMIC PRO: For sporty riding and for configuration to personal preferences or current marginal conditions (only with encoding plug fitted). ◀
 - » With the motorcycle at a standstill, the selected mode is activated after approximately two seconds.
 - » The newly selected riding mode is activated as you ride only when the following preconditions are satisfied:
 - Throttle twistgrip is in idle position.
 - Brake levers are in the released positions.
 - » The mode selected in this way is retained with the engine-characteristic, ABS, DTC and DDC adaptation settings even after the ignition has been switched off.

Installing encoding plug

– with riding modes Pro^{OE}

- Switching off ignition (➡ 41).
- Removing front seat (➡ 60).

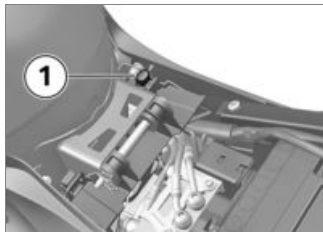

ATTENTION

Dirt and damp penetrating inside open connectors

Malfunctions

- Reinstall the protective cap after removing the coding plug. ◀
- Remove cap of plug 1.



- To do so, press in latch 1 and remove the cap.
- Install the encoding plug.
- Switch on the ignition.
- » The riding mode selected is retained in memory, even after the ignition is switched off.
- Installing front seat (➡ 61).

Cruise-control system

– with cruise control^{OE}

Switching on cruise control



- Slide switch 1 to the right.
- » Button 2 is enabled for operation.


Saving road speed



- Briefly push button **1** forward.

 Adjustment range for cruise control

30...180 km/h


 Telltale light for cruise control shows.

- » The motorcycle maintains your current cruising speed and the setting is saved.

Accelerating



- Briefly push button **1** forward.

 Increase speed

Speed is increased with each actuation.


1 km/h

- Push button **1** forward and hold it in this position.
 - » The motorcycle accelerates steplessly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Decelerating



- Briefly push button **1** back.

 Reduce speed

Speed is reduced with each actuation.

1 km/h

- Push button **1** back and hold it in this position.
 - » The motorcycle decelerates steplessly.
 - » The current speed is maintained and saved if button **1** is not pushed again.

Deactivate cruise control

- Brake, pull the clutch lever or turn the throttle twistgrip (close the throttle by turning the twistgrip back past the idle position) to deactivate the cruise-control system.
- » Telltale light for cruise control goes out.

Resuming former cruising speed



- Briefly push button **1** back to return to the speed saved beforehand.



NOTICE

Opening the throttle does not deactivate the cruise-control system. If you release the twistgrip the motorcycle will decelerate only to the cruising speed saved in memory, even though you might have intended slowing to a lower speed.◀



Telltale light for cruise control shows.

Switching off cruise control



- Slide switch **1** to the left.
- » The system is deactivated.
- » Button **2** is disabled.

Heated handlebar grips

– with heated grips^{OE}

Operating the heated handlebar grips

- Start the engine.



NOTICE

The heating in the heated handlebar grips can be activated

only when the engine is running.◀


NOTICE

The increase in power consumption caused by having the heated handlebar grips switched on can drain the battery if you are riding at low engine speeds. If the charge level is low, the heated handlebar grips are switched off to ensure the battery's starting capability.◀



- Repeatedly press button **1** until the heating stage you want to

use appears on the multifunction display.

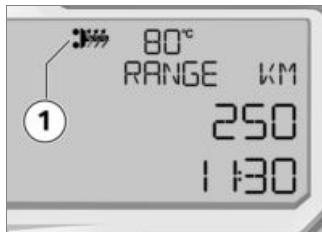

The handlebar grips have two-stage heating. Stage two **1** is for heating the grips quickly: it is advisable to switch to stage one as soon as the grips are warm.



Second stage: 100 % heating power



First stage: 50 % heating power


- » The selected heating stage will be saved if you allow a certain

length of time to pass without making further changes.

Front and rear seats

Removing rear seat


- Place the motorcycle on its stand on firm, even ground.

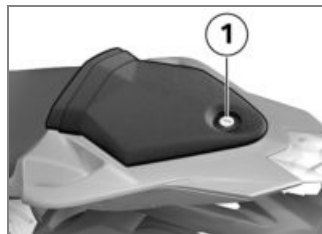


- Open seat lock **1** with the ignition key.
- Lift the rear passenger seat, then remove it backwards and upwards.
- Pull out the ignition key and place the passenger seat up-

holstered side down on a clean surface.

Install the rear seat

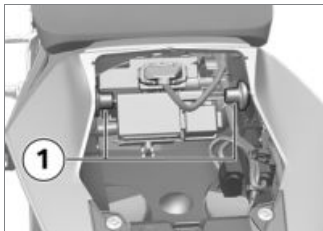

- Insert passenger seat in the mounts **1** on left and right.

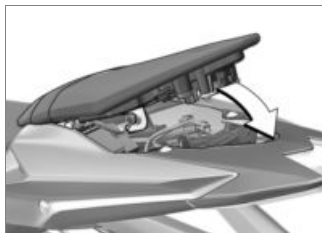


- Fold the passenger seat downwards, and press forwards lightly.
- Lock seat lock using the ignition key.

Removing front seat



- Push the upholstery of the rider's seat forward slightly above screws **1** and hold it in this position.
- Remove screws **1**.
- Push the seat forward and lift it at the rear to remove. Take care not to let the screws scratch the trim panels.
- Place the seat, upholstered side down, on a clean surface.

Installing front seat

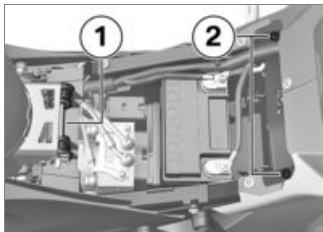

- Engage the rider's seat in mount **1**, then lower the rear of the seat to bring the holes into alignment with screw holes **2**. Take care not to let the screws scratch the trim panels.




- Push the upholstery of the rider's seat forward slightly above the screw holes and hold it in this position.
- Install screws **1**.

Helmet holder

Securing the helmet to motorcycle

- Removing rear seat (▣▣▣ 59).
- Turn the rear seat upside down.

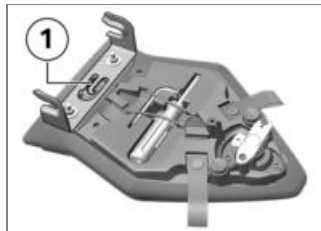

ATTENTION

Incorrect positioning of the helmet lock


Scratch marks on trim panel

- Make sure the lock is out of the way when you hook the helmet into position. ◀
- Use a plastic-sheathed steel cable (not part of the vehicle) to secure the helmet to helmet holder **1**.
- Install the rear seat (▣▣▣ 60).
- Place the helmet on the front seat.


Luggage loops

Securing luggage to motorcycle

- Removing rear seat (➡ 59).
- Turn the rear seat upside down.

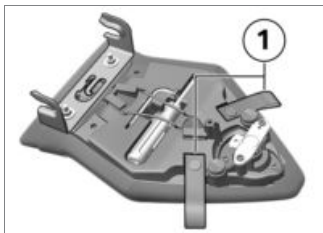

- Pull loops **1** out of the holders and to the outside and down.
- Install the rear seat (➡ 60).

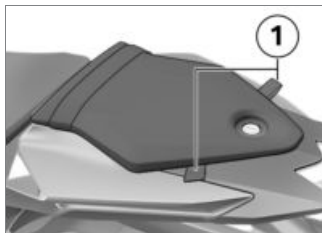

- Use the loops **1** and the rear footrests, for example, to secure luggage to the rear seat. In this process, take care not to damage the rear trim panels.

Adjustment

Mirrors	64
Headlight	64
Brakes	64
Spring preload	65
Damping	69

Mirrors

Adjusting mirrors



- Turn the mirror to the correct position.

Headlight

Adjusting headlight for driving on left/driving on right

This motorcycle has a symmetric-beam low-beam headlight. If the motorcycle is ridden in a country where the opposite rule of the road applies, its symmetric low-

beam headlight means that no measures are necessary to prevent the headlight beam from dazzling oncoming traffic.

Headlight beam throw and spring preload

Headlight beam throw is generally kept constant when spring preload is adjusted to suit load.



NOTICE

If there are doubts about the correct headlight beam throw, have the setting checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

Brakes

Adjusting brake lever



WARNING

Relocated brake fluid tank

Air in the brake system

- Do not turn the handlebars or the handlebar fitting on the handlebar.◀



WARNING

Adjusting the brake lever while riding

Risk of accident

- Do not attempt to adjust the brake lever unless the motorcycle is at a standstill.◀



- Turn knob **1** to the desired position.

NOTICE

The adjusting screw is easier to turn if you push the brake lever forward.◀

- » Adjustment options:
- Position 1: largest span between handlebar grip and brake lever
- Position 6: smallest span between handlebar grip and brake lever

Spring preload

Adjustment


Front spring preload has to be adjusted to suit the rider's weight. Increase spring preload for heavier loads, decrease spring preload for lighter loads.

It is essential to set spring preload of the rear suspension to suit the load carried by the motorcycle. Increase spring preload when the vehicle is heavily

loaded and reduce spring preload accordingly when the vehicle is lightly loaded.

Adjusting spring preload for front wheel


- without Dynamic Damping Control (DDC)^{OE}
- Place the motorcycle on its stand on firm, even ground.
- Make sure there is no load on the motorcycle; remove all items of luggage, if carried.

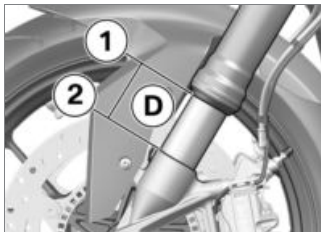

- Hold the motorcycle upright and measure distance **D**


between the lower edge **1** of the slider tube and the front axle **2**.

- Apply the rider's weight to the motorcycle.
- With the assistance of a second person, measure distance **D** between points **1** and **2** again and calculate the difference (negative spring displacement) between the two readings.

 Load-dependent adjustment of spring preload

Negative spring displacement of front wheel

6...10 mm (including rider 85 kg)

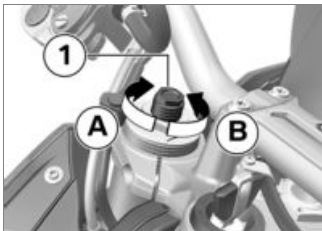**WARNING****Spring preload setting and spring-strut damping setting not matched.**

Impaired handling.

- Adjust spring-strut damping to suit spring preload. ◀
- To reduce compression (i.e. to increase spring preload), use the tool from the toolkit to rotate the adjusting screws **1** in direction **A**.
- To increase compression (i.e. to reduce spring preload), use the tool from the toolkit to ro-

tate the adjusting screws **1** in direction **B**.

- Make sure that the same values are set on the left and on the right.


Adjusting spring preload for front wheel

– with Dynamic Damping Control (DDC)^{OE}

- Place the motorcycle on its stand on firm, even ground.
- Start the engine.

**NOTICE**

Make sure there is no load on the motorcycle and remove all items of luggage, if carried, before setting the spring preload. Adjust damping action (DDC) to ROAD in one-up riding. ◀

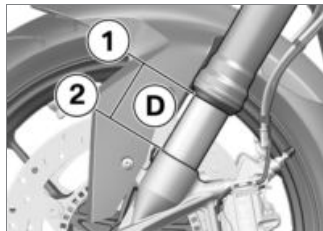

- Keep motorcycle upright, best done with help from a second person (do not use the side stand).
- Measure distance **D** between the lower edge **1** of the slider tube and the front axle **2**.
- Apply the rider's weight to the motorcycle.
- With help from a second person, measure distance **D** between points **1** and **2** again and calculate the difference (negative spring displacement) between the two values.



Load-dependent adjustment of spring preload

Negative spring displacement of front wheel

6...10 mm (including rider 85 kg)

- To reduce compression (i.e. to increase spring preload), use the tool from the toolkit to rotate the adjusting screws **1** in direction **A**.
- To increase compression (i.e. to reduce spring preload), use the tool from the toolkit to rotate the adjusting screws **1** in direction **B**.


Adjusting spring preload for rear wheel

– without Dynamic Damping Control (DDC)^{OE}

- Place the motorcycle on its stand on firm, even ground.
- Make sure there is no load on the motorcycle; remove all items of luggage, if carried.



- Use the tool from the on-board toolkit to slacken screw **1**.

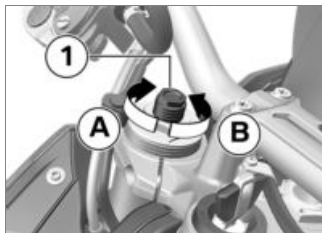


WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload. ◀

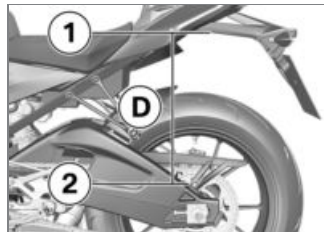

- Hold the motorcycle upright (do not prop it on the side stand) and measure distance **D** from bottom edge **1** of the

number plate carrier to screw **2** of the chain guard.


- Apply the rider's weight to the motorcycle.
- With the assistance of a second person, measure distance **D** between points **1** and **2** again and calculate the difference (negative spring displacement) between the two readings.



Load-dependent adjustment of spring preload

Suspension compression at rear wheel

20...24 mm (including rider 85 kg)

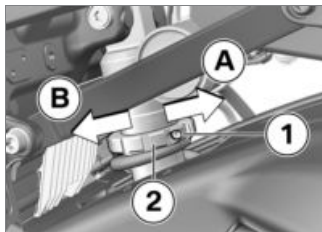

WARNING

Spring preload setting and spring-strut damping setting not matched.

Impaired handling.

- Adjust spring-strut damping to suit spring preload. ◀
- To reduce negative spring displacement (increase spring preload, in other words), use the tool from the on-board toolkit to turn adjusting ring **2** in direction **B**.
- To increase negative spring displacement (reduce spring

preload, in other words), use the tool from the on-board toolkit to turn adjusting ring **2** in direction **A**.

- Tighten screw **1** to the specified tightening torque.



Clamping bolt on top spring cup

3 Nm

Adjusting spring preload for rear wheel

– with Dynamic Damping Control (DDC)^{OE}


- Place the motorcycle on its stand on firm, even ground.
- Start the engine.



NOTICE


Make sure there is no load on the motorcycle and remove all items of luggage, if carried, before setting the spring preload.

Adjust damping action (DDC) to ROAD in one-up riding. ◀

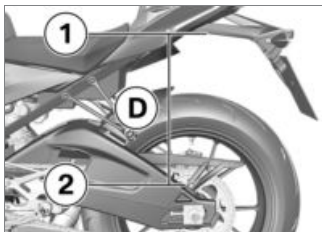


- Keep motorcycle upright, best done with help from a second person (do not use the side stand).
- Measure distance **D** between the lower edge **1** of the number plate carrier and screw **2** on the chain guard.
- Apply the rider's weight to the motorcycle.
- With help from a second person, measure distance **D** between points **1** and **2** again and calculate the difference

(negative spring displacement) between the two values.

 Load-dependent adjustment of spring preload

Suspension compression at rear wheel

20...24 mm (including rider 85 kg)

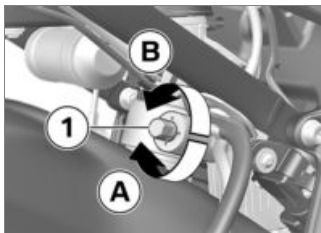

- To reduce negative spring displacement (i.e. to increase spring preload), use the tool from the toolkit to turn adjusting ring **1** in direction **A**.

- To increase negative spring displacement (i.e. to reduce spring preload), use the tool from the toolkit to turn adjusting ring **1** in direction **B**.

Damping

Correct setting for the damping characteristic

Damping must be adapted to suit the surface on which the motorcycle is ridden and to suit spring preload.

- An uneven surface requires softer damping than a smooth surface.
- An increase in spring preload requires firmer damping, a reduction in spring preload requires softer damping.

Adjusting compression-stage damping for front wheel

– without Dynamic Damping Control (DDC)^{OE}



- Adjust the compression-stage damping using the adjusting screw **1** on the left fork leg.



- To increase damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **1** points to a higher reading on the scale.
- To reduce damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **1** points to a lower reading on the scale.



Compression stage, basic setting, front


Position 1 (comfortable setting with rider 85 kg)

Position 3 (normal setting with rider 85 kg)

Position 7 (sports setting with rider 85 kg)

Adjust the rebound-stage damping for front wheel

– without Dynamic Damping Control (DDC)^{OE}

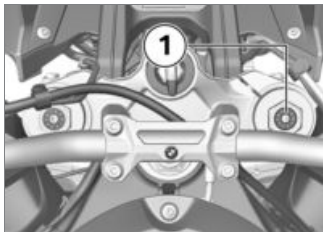

- Adjust the rebound-stage damping using the adjusting screw **1** on the right fork leg.



- To increase damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that

mark **1** points to a higher reading on the scale.

- To reduce damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **1** points to a lower reading on the scale.

Rebound stage, basic setting, front

Position 1 (comfortable setting with rider 85 kg)

Position 3 (normal setting with rider 85 kg)

Position 7 (sports setting with rider 85 kg)

Factory default settings, front wheel

- Reset the factory defaults as stated below.


Factory default settings for compression/rebound stages, front

Position 3

Adjusting rebound-stage damping for rear wheel

– without Dynamic Damping Control (DDC)^{OE}

- Place the motorcycle on its stand on firm, even ground.

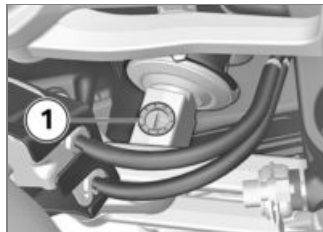

- Adjusting the rebound-stage damping using the adjusting screw **1**.



- To increase damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **1** points to a higher reading on the scale.
- To reduce damping: Use the tool from the on-board kit to turn the adjusting screw in the appropriate direction so that mark **1** points to a lower reading on the scale.



Rebound stage, basic setting, rear

Position 1 (comfortable setting with rider 85 kg)

Position 4 (normal setting with rider 85 kg)

Position 7 (sports setting with rider 85 kg)

Factory settings at rear wheel

- Reset the factory defaults as stated below.




Factory default setting for rebound stage, rear


Position 4

Display damping with DDC

- with Dynamic Damping Control (DDC)^{OE}
- Switching on ignition (➡ 40).

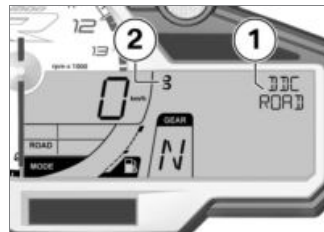

- Press button **1** briefly to view the current setting.

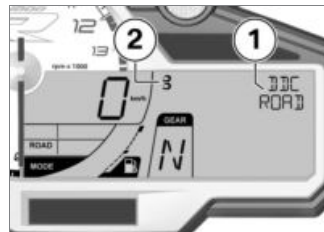


Damping is shown in area **1** of the multifunction display with the loading show in area **2**.

» The setting shows briefly, then disappears automatically.

Adjusting suspension damping with DDC

– with Dynamic Damping Control (DDC)^{OE}

- Switching on ignition (▣→ 40).

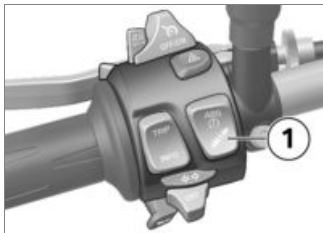

- Press button **1** briefly to view the current setting.

To adjust damping:

- Repeatedly press button **1** until the setting you want to use appears on the display.

NOTICE

You can adjust the damping characteristic while the motorcycle is on the move.◀

The following settings are available:

- ROAD: Normal damping characteristic
- DYNAMIC: Sporty damping characteristic

To adjust load:

- Repeatedly press button **1** and hold until the setting you want to use appears on the display.

NOTICE

The load cannot be set while the motorcycle is in motion.◀

The following settings are available:

-  One-up



Riding with passenger

Riding

Safety instructions	76
Comply with checklist.....	78
Starting	78
Running in	82
Shifting gear	83
Brakes	85
Parking your motorcycle	87
Refuelling	88
Securing motorcycle for transportation	90

Safety instructions

Rider's equipment

Do not ride without the correct clothing! Always wear:

- Helmet
- Motorcycling jacket and trousers
- Gloves
- Boots

This applies even to short journeys, and to every season of the year. Your authorised BMW Motorrad dealer will be glad to advise you on the correct clothing for every purpose.

Loading



WARNING

Handling adversely affected by overloading and imbalanced loads

Risk of falling

- Do not exceed the permissible gross weight and be sure to comply with the instructions on loading. ◀
- Set spring preload, damping characteristic and tyre pressures to suit total weight.
 - with tank bag^{OA}
- Note the maximum permissible payload of the tank rucksack.



Payload of tank rucksack

≤5 kg◀

- with rear softbag^{OA}
- Note the maximum payload and the speed limit for riding with the rear softbag fitted.



Payload of rear softbag

max 5 kg



Maximum permissible speed for riding with the rear softbag fitted to the motorcycle

max 220 km/h◀

Speed

If you ride at high speed, always bear in mind that various boundary conditions can adversely affect the handling of your motorcycle:

- Settings of the spring-strut and shock-absorber system
- Imbalanced load
- Loose clothing
- Insufficient tyre pressure
- Poor tyre tread
- Etc.

Risk of poisoning

Exhaust fumes contain carbon monoxide, which is colourless and odourless but highly toxic.

WARNING

Exhaust gases adversely affecting health

Risk of asphyxiation

- Do not inhale exhaust fumes.
- Do not run the engine in an enclosed space. ◀

Risk of burn injury

CAUTION

Engine and exhaust system become very hot when the vehicle is in use

Risk of burn injury

- When you park the vehicle make sure that no-one and no objects can come into contact with the hot engine and exhaust system. ◀

Catalytic converter

If misfiring causes unburned fuel to enter the catalytic converter, there is a danger of overheating and damage.

The following guidelines must be observed:

- Do not run the fuel tank dry.
- Do not attempt to start or run the engine with a spark-plug cap disconnected.
- Stop the engine immediately if it misfires.
- Use only unleaded fuel.
- Comply with all specified maintenance intervals.

ATTENTION

Unburned fuel in catalytic converter

Damage to catalytic converter

- Note the points listed for protection of the catalytic converter. ◀

Risk of overheating

ATTENTION

Engine running for prolonged period with vehicle at standstill

Overheating due to insufficient cooling; in extreme cases vehicle fire

- Do not allow the engine to idle unnecessarily.
- Ride away immediately after starting the engine. ◀

Tampering

ATTENTION

Tampering with the motorcycle (e.g. engine management ECU, throttle valves, clutch)

Damage to the affected parts, failure of safety-relevant functions, voiding of warranty

- Do not tamper with the vehicle in any way that could result in tuned performance.◀

Comply with checklist

- At regular intervals, use the checklist below to check your motorcycle.

Requirement

Always before riding off:

- Check operation of the brake system.
- Check operation of the lights and signalling equipment.
- Checking clutch function (▣▣▣ 138).
- Checking tyre tread depth (▣▣▣ 141).
- Check that cases and luggage are securely held in place.

Requirement

Every 3rd refuelling stop:

- without Dynamic Damping Control (DDC)^{OE}
 - Adjusting spring preload for rear wheel (▣▣▣ 67).
 - Adjusting compression-stage damping for front wheel (▣▣▣ 70).
 - Adjust the rebound-stage damping for front wheel (▣▣▣ 70).
 - Adjusting rebound-stage damping for rear wheel (▣▣▣ 71).◀
- with Dynamic Damping Control (DDC)^{OE}
 - Adjusting spring preload for rear wheel (▣▣▣ 68).
 - Adjusting spring preload for front wheel (▣▣▣ 66).
 - Adjust the suspension damping with DDC (▣▣▣ 73).◀

- Checking engine oil level (▣▣▣ 132).
- Checking front brake pad thickness (▣▣▣ 134).
- Check rear brake pad thickness (▣▣▣ 135).
- Checking brake-fluid level, front brakes (▣▣▣ 136).
- Checking the brake-fluid level, rear brakes (▣▣▣ 137).
- Check coolant level (▣▣▣ 139).
- Lubricating chain (▣▣▣ 165).
- Checking chain tension (▣▣▣ 165).

Starting

Start engine

- Switch on the ignition.
 - » Pre-Ride-Check is performed. (▣▣▣ 79)
 - » ABS self-diagnosis is in progress. (▣▣▣ 80)
 - » ASC self-diagnosis is in progress. (▣▣▣ 81)

- with Dynamic Traction Control (DTC)^{OE}
- » DTC self-diagnosis is in progress. (►► 81)◀
- Select neutral or, if a gear is engaged, pull the clutch lever.

NOTICE

You cannot start the motorcycle with the side stand extended and a gear engaged. The engine will switch itself off if you start it with the gearbox in neutral and then engage a gear before retracting the side stand.◀

- For a cold engine start and low temperatures: pull clutch.



- Press starter button **1**.

NOTICE

The start attempt is automatically interrupted if battery voltage is too low. Recharge the battery before you start the engine, or use jump leads and a donor battery to start.


See the subsection on jump starting in "Maintenance" for more details.◀

- » The engine starts.
- » Consult the troubleshooting chart below if the engine refuses to start. (►► 176)

Pre-Ride-Check

The instrument panel runs a test of the warning lights and the revolution counter when the ignition is switched on: this is the Pre-Ride-Check. The test is aborted if you start the engine before it completes.

Phase 1

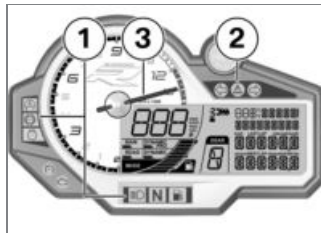

The indicator and warning lights **1** light up, the general warning light **2** lights up yellow. Needle **3** of the revolution counter moves all the way to the position for maximum engine revolutions.

All the segments in the display light up.

Phase 2

The 'General' warning light changes from yellow to red.

Phase 3

The needle of the engine speed display moves to the position for zero engine revolutions.

The indicator and warning lights go out or start operation as intended.

– with ABS Pro^{OE}

» ABS Pro is displayed.<

The display changes to the default display.

If a warning light does not show:



WARNING

Faulty warning lights

No indication of malfunctions

- Check all the telltale and warning lights.◀
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ABS self-diagnosis

BMW Motorrad Race ABS performs self-diagnosis to ensure its operability. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



ABS telltale and warning light flashes.

Phase 2

» Pullaway test of the system components with diagnostic capability.



ABS telltale and warning light flashes.

ABS self-diagnosis completed

- » The ABS symbol no longer shows.
- Check all the indicator and warning lights.



ABS self-diagnosis not completed

The ABS function is not available because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed for the wheel sensors to be checked: min 5 km/h)

If an ABS fault is displayed after having completed ABS self-diagnosis:

- You can continue to ride. Bear in mind that the ABS and integral braking functions are not

available at all, or the functionality is subject to certain restrictions.

- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

ASC self-diagnosis

BMW Motorrad ASC performs self-diagnosis to check operational readiness. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

- » Test of the diagnosis-compatible system components with the vehicle at a standstill.

 ASC telltale and warning light slow-flashes.

Phase 2

- » Pullaway test of the system components with diagnostic capability.

 ASC telltale and warning light slow-flashes.

ASC self-diagnosis completed

- » The ASC symbol no longer shows.
- Check all the indicator and warning lights.



ASC self-diagnosis not completed

The ASC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

If an indicator showing an ASC fault appears when ASC self-diagnosis completes:

- You can continue to ride. Bear in mind that the ASC function is not available or the functionality might be subject to certain restrictions.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

DTC self-diagnosis

– with Dynamic Traction Control (DTC)^{OE}

BMW Motorrad DTC performs self-diagnosis to check operational readiness. Self-diagnosis is performed automatically when you switch on the ignition.

Phase 1

» Test of the diagnosis-compatible system components with the vehicle at a standstill.



DTC warning light slow-flashes.

Phase 2

» Pullaway test of the system components with diagnostic capability.



DTC warning light slow-flashes.

DTC self-diagnosis completed

- » The DTC symbol no longer shows.
- Check all the indicator and warning lights.



DTC self-diagnosis not completed

The DTC function is not available, because self-diagnosis did not complete. (The motorcycle has to reach a defined minimum speed with the engine running for the wheel-speed sensors to be checked: min 5 km/h)

If an indicator showing a DTC fault appears when DTC self-diagnosis completes:

- You can continue to ride. Bear in mind that the DTC function is not available or the functionality might be subject to certain restrictions.
- Have the fault rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Running in Engine

- Until the running-in check, vary the throttle opening and engine-speed range frequently; avoid riding at constant engine rpm for prolonged periods.
- Try to do most of your riding during this initial period on twisting, fairly hilly roads.
- Comply with the rpm limits for running in.



Running-in speed

<7000 min⁻¹ (Odometer reading 0...300 km)

<9000 min⁻¹ (Odometer reading 300...1000 km)

No full load (Odometer reading 0...1000 km)

- Note the mileage after which the running-in check should be carried out.



NOTICE

The electronic engine management system prevents the engine from revving past the preset rpm limit for running in. The authorised BMW Motorrad dealer deactivates this monitoring function when the motorcycle is brought in for its initial inspection.◀



Mileage until the running-in check

500...1200 km



Engine rpm governing until the running-in check

max 9000 min⁻¹

Brake pads

New brake pads have to bed down before they can achieve their optimum friction levels. You can compensate for this initial reduction in braking efficiency by exerting greater pressure on the levers.



WARNING

New brake pads

Longer stopping distance, risk of accident

- Apply the brakes in good time.◀

Tyres

New tyres have a smooth surface. This must be roughened by riding in a restrained manner at various heel angles until the tyres are run in. This running in procedure is essential if the tyres are to achieve maximum grip.



WARNING


New tyres losing grip on wet roads and at extreme bank angles

Risk of accident

- Ride carefully and avoid extremely sharp inclines.◀

Shifting gear

Gearshift light

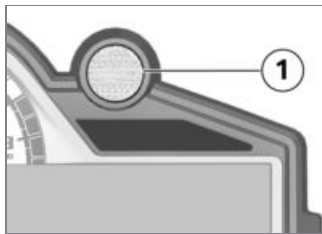

Gearshift light **1** shows the rider two engine-speed thresholds:

Pullaway engine speed

When the motorcycle is at a standstill with the engine running, the gearshift light indicates the ideal engine speed for a racing start.

- Gearshift light off: engine speed too low
- Gearshift light on: ideal engine speed for pulling away
- Gearshift light flashing: engine speed too high

Shift speed

When the motorcycle is on the move, the gearshift light indicates the engine speed at which the rider should upshift.

- Gearshift light flashes at preset frequency: approaching upshift rpm
- Gearshift light goes out: the engine has revved past upshift rpm

The engine-speed thresholds and the way in which the gearshift light indicates the various states can be customised in the **SETUP EQUIPMENT** menu.

Shift assistant Pro

- with shift assistant Pro^{OE}

Your vehicle is equipped with a shift assistant, a system originally developed for racing and now adapted for riding on public roads. It permits upshifts and downshifts without declutching or closing the throttle in virtually all load and rpm ranges.

Advantages

- 70-80 % of all gearshifts on a trip can be done without using the clutch.
- Less relative movement between rider and passenger because the shift pauses are shorter.


- It is not necessary to close the throttle valve when shifting under acceleration.
- When braking and downshifting (throttle valve closed), engine speed is adjusted by blipping the throttle.
- Shift time is shorter than a gearshift with clutch actuation.

In order for the system to identify a request for a gearshift, the rider has to move the shift lever from its idle position in the desired direction against the force of the spring through a certain "over-travel" at ordinary speed or rapidly and keep the shift lever in this position until the gearshift is completed. It is not necessary to increase the force applied to the shift lever while shifting is in progress. Once the gear shift has completed, the gearshift lever must be fully released before being able to carry out another gear

shift using the Pro shift assistant. Constantly maintain the corresponding load condition (throttle grip position) before and during gear shifts using the shift assistant. A change in the position of the throttle twistgrip during a gearshift can cause the function to abort and/or lead to a missed shift. The shift assistant does not provide assistance for gear shifts involving clutch control.

Downshifting


- Downshifting is assisted until maximum rpm for the target gear to be selected is reached. This prevents overrevving.

 Maximum engine speed
max 12000 min ⁻¹

Upshifting

- The shift assistant provides no assistance if engine speed

drops below idle during an upshift.

 Idle speed
1270 min ⁻¹ (Engine at regular operating temperature)

Brakes

How can stopping distance be minimised?

Each time the brakes are applied, a load distribution shift takes place with the load shifting forward from the rear to the front wheel. The sharper the motorcycle decelerates, the more load is shifted to the front wheel. The higher the wheel load, the more braking force can be transmitted without the wheel locking.

To optimise stopping distance, apply the front brakes rapidly and keep on increasing the force you

apply to the brake lever. This makes the best possible use of the dynamic increase in load at the front wheel. Remember to pull the clutch at the same time. In the sudden-stop braking situations that are trained so frequently braking force is applied as rapidly as possible and with the rider's full force applied to the brake levers; under these circumstances the dynamic shift in load distribution cannot keep pace with the increase in deceleration and the tyres cannot transmit the full braking force to the surface of the road. This can increase stopping distance. Use both brakes. The rear wheel can evince a tendency to lift clear of the ground. The BMW rear-wheel lift assistant intervenes to prevent the rear wheel from losing contact with the ground.

Hazard braking

– with ABS Pro^{OE}

If you brake sharply from a speed in excess of 50 km/h, the brake light flashes rapidly as an additional warning for road users behind you.

The hazard warning lights system switches on if you brake to below 15 km/h in this process. The hazard warning lights system automatically switches off again from a speed of 20 km/h.

Descending mountain passes

WARNING

Braking only with the rear brake on mountain descents

Brake fade, destruction of the brakes due to overheating

- Use both front and rear brakes, and make use of the engine's braking effect as well.◀

Wet and dirty brakes

Wetness and dirt on the brake discs and the brake pads diminish braking efficiency.

Delayed braking action or poor braking efficiency must be reckoned with in the following situations:

- Riding in the rain or through puddles of water.
- After the vehicle has been washed.
- Riding on salted or gritted roads.
- After work has been carried on the brakes, due to traces of oil or grease.
- Riding on dirt-covered surfaces or off-road.

WARNING

Wetness and dirt result in diminished braking efficiency

Risk of accident

- Apply the brakes lightly while riding to remove wetness and dirt, or dismount and clean the brakes.
- Think ahead and brake in good time until full braking efficiency is restored.◀

ABS Pro

– with ABS Pro^{OE}

Physical limits applicable to motorcycling

WARNING

Braking when cornering

Risk of crash despite ABS Pro

- Invariably, it remains the rider's responsibility to adapt riding style to riding conditions.
- Do not take risks that would negate the additional safety offered by this system.◀

Availability of ABS Pro

– ABS Pro is available in the RAIN, ROAD and DYNAMIC riding modes.

ABS Pro does not support the DYNAMIC PRO riding mode.

Possibility of a fall not precluded

Although ABS Pro provides the rider with valuable assistance and constitutes a huge advance in safety for braking with the motorcycle banked for cornering, it cannot under any circumstances be considered as redefining the physical limits that apply to motorcycling. It is still possible for these limits to be overshoot due to misjudgement or rider error. In extreme cases this can result in a crash.

ABS Pro not developed for race-circuit use

ABS Pro was not developed for race-circuit use to enhance individual braking performance with the motorcycle banked into corners.

On the contrary, ABS Pro helps make the motorcycle even safer for riding on public roads. When the brakes are applied because of an unforeseen hazard when the motorcycle is banked for cornering, within the physical limits that apply to motorcycling the system prevents the wheels from locking and skidding away.

On the race track

For riders of limited experience, first attempts at race-track riding are much safer in the ROAD and DYNAMIC riding modes with ABS Pro.



NOTICE

ABS Pro was not developed to enhance individual braking performance with the motorcycle banked into corners in situations approaching the limits of performance. ◀

Use on public roads

ABS Pro was intentionally designed for use on public roads.

Parking your motorcycle

Side stand

- Switch off the engine.



ATTENTION

Poor ground underneath the stand

Risk of damage to parts if vehicle topples

- Always check that the ground under the stand is level and firm. ◀

- Extend the side stand and prop the motorcycle on the stand.



ATTENTION

Additional weight placing strain on the side stand

Risk of damage to parts if vehicle topples

- Do not sit or lean on the vehicle while it is propped on the side stand. ◀
- If the camber of the roadway permits, turn the handlebars all the way to the left.
- On a gradient, the motorcycle should always face uphill; select 1st gear.

Refuelling

Fuel grade

Requirement

For optimum fuel consumption, fuel should be sulphur-free or with the lowest sulphur content possible.



ATTENTION

Engine operation with leaded fuel

Damage to catalytic converter

- Do not attempt to run the vehicle on leaded fuel or fuel with metallic additives (e.g. manganese or iron). ◀
- You can run the engine on fuel with a maximum ethanol content of 10 %, i.e. E10.



Recommended fuel grade

Super Plus, unleaded (max. 10 % ethanol, E10)
98 ROZ/RON
91 AKI

Refuelling



WARNING

Fuel is highly flammable

Risk of fire and explosion

- Do not smoke. Never bring a naked flame near the fuel tank. ◀



ATTENTION

Component damage

Component damage caused by overfilled fuel tank

- Overfilling the fuel tank will cause excess fuel to penetrate

the carbon canister and cause component damage.

- Fill the fuel tank up to the lower edge of the filler neck only.◀

ATTENTION

Wetting of plastic surfaces by fuel

Damage to the surfaces (surfaces become unsightly or dull)

- Clean plastic surfaces immediately after contact with fuel.◀
- Make sure the ground is level and firm and place the motorcycle on its side stand.

NOTICE

The volume of the tank can be utilised to the full only when the motorcycle is propped on its side stand.◀



- Open protective cap **1**.
- Use the ignition key to unlock fuel filler cap **2** by turning the key clockwise, and flip the cap open.



- Refuel with fuel of the grade stated below; do not fill the

tank beyond the bottom edge of the fuel filler neck.

NOTICE

When refuelling after running on reserve, make sure that you top up the tank to a level above reserve, as otherwise the new level will not be registered and the fuel warning light indicating that the level is down to reserve will not be switched off.◀

NOTICE

The "usable fuel capacity" specified in the technical data is the quantity that the fuel tank could hold if refilled after it had been run dry and the engine had cut out due to a lack of fuel.◀



Usable fuel capacity

approx. 17.5 l



Fuel reserve

approx. 4 l

- Press the fuel tank cap down firmly to close.
- Remove the ignition key and close the protective cap.

Securing motorcycle for transportation

- Make sure that all components that might come into contact with straps used to secure the motorcycle are adequately protected against scratching. Use adhesive tape or soft cloths, for example, for this purpose.




ATTENTION

Vehicle topples to side when being lifted on to stand

Risk of damage to parts if vehicle topples

- Secure the vehicle to prevent it toppling, preferably with the assistance of a second person.◀
- Push the motorcycle onto the transportation flat and hold it in position: do not place it on the side stand.

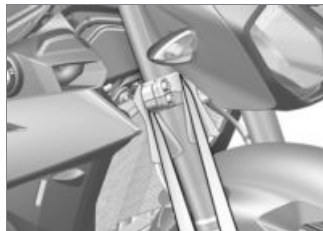

ATTENTION

Trapping of components

Component damage

- Do not trap components such as brake lines or cable legs.◀
- At the front, loop a strap over the bottom fork bridge on each side.
- Pull the straps down and tight.




- Secure the tensioning straps on the frame for the rear footrests on either side and tighten.
- Tighten all the straps uniformly; the vehicle's suspension should be compressed as tightly as possible front and rear.

On the race track

LAPTIMER	94
RACE INFO.....	98
SETUP MENU.....	103
Racing start.....	107
Speed limiter for pit lane	109
Removing/installing mirrors	109
Removing and installing number-plate carrier	110
Removing and installing front turn indicators	113

LAPTIMER

Mode of presentation

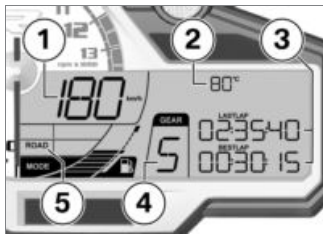

- 1 Speedometer
- 2 Engine temperature
- 3 The readings in these lines can be changed by the rider. (→ 94)
LAST LAP: Time for the preceding lap.
BEST LAP: The fastest of the laps currently logged in memory.
- 4 Gear indicator
- 5 Riding mode selected by the rider

Labels for the values shown on the display

The following times can be displayed in the third line:

- LAST LAP: The time for the preceding lap.

The following times can be displayed in the fourth line:

- BEST LAP: The fastest of the laps currently logged in memory.
- RUN: The running time for the current lap.


The third and fourth lines can be combined to show other readings:

- RUN BEST: The third line shows the running time for the current lap, the best lap currently logged in memory is shown in the fourth line.
- LAST RUN: The third line shows the time recorded for the preceding lap, the running

time for the current lap is shown in the fourth line.

- LAST BEST: The third line shows the time needed for the preceding lap, the best lap currently logged in memory is shown in the fourth line.
- RUN TOTAL: The third line shows the running time for the current lap, the total time for all the laps currently logged in memory is shown in the fourth line.
- RUN BESTEV: The third line shows the running time for the current lap, the best-ever lap is shown in the fourth line.


At the start of each new lap the time for the preceding lap is shown briefly before the display switches to the running time of the current lap.

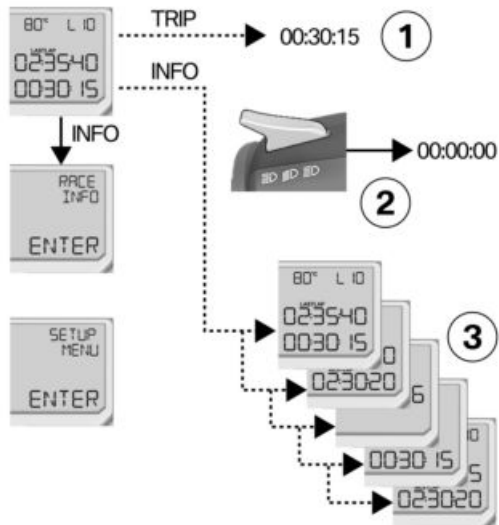

Display overview


- Solid line: short-press the button.
 - Broken line: press and hold down the button.
- 1** Interrupting timing (→ 97).
 - 2** Starting timing (→ 96).
 - 3** View the times (→ 96).

Viewing times

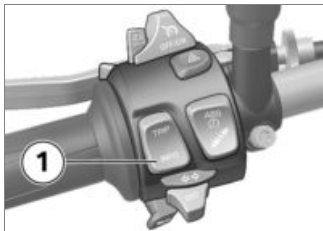

- To view the time of your choice, repeatedly press button **1** until the display changes.

Starting timing

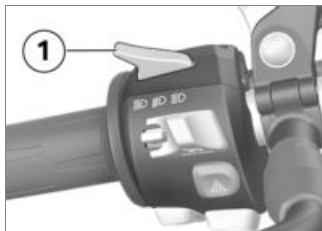

- Press switch **1** to start timing.



NOTICE

The engine has to be running in order for the headlight-flasher signal to be detected.◀

- Every time you cross the start/finish line, press switch **1** again to start timing for the next lap.
 - » The data of the preceding lap are written into memory.
 - » Timing continues even if you exit the display mode. In the other display modes, however, timing of another lap can be

started only by an external signal.

Infrared receiver


– with infrared receiver^{OA}

An infrared signal provides a convenient way of operating the lap timer. The instrument can be operated in this way only when the infrared receiver available as an optional accessory is connected to the IR receiver (on the right side, behind the side panel). The RACETRACK SETUP MENU enables you to choose between operation with the headlight-flasher button and the TRIP/INFO button, or operation by one or other of these buttons (see the section on the SETUP MENU).

A lap timeout can be defined to stop the receiver from registering completion of a lap prematurely in response to spurious signals.

Signals received before this time elapses are ignored.

Interrupting timing

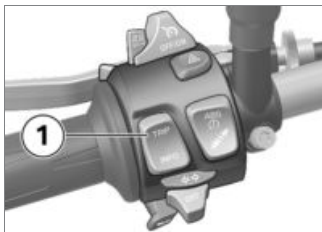

- Press and hold down button **1** to interrupt timing.
- Press and hold down button **1** again to resume timing.




NOTICE

If more laps are subsequently timed, lap numbering resumes. Numbering is not restarted at lap 1 unless you delete the current timing session in the RACE INFO display mode. ◀

Expected fastest lap

This function must be activated in the SETUP RACETRACK (see SETUP MENU chapter).

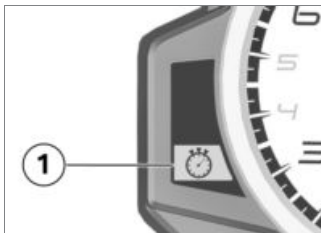

After starting a new lap, the sector time is taken when a defined sector is reached and compared with the corresponding sector time from the saved best lap.




Distance covered for intermediate time

100 m

If the current sector time is better than the one from the best lap, a new best time can be expected. The Fastest Lap light **1** is switched on.

RACE INFO

Selecting saved lap

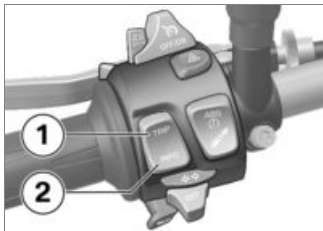


- Repeatedly press button **1** or button **2** to view each lap stored in memory one after the other.

Repeatedly press button **1** to step through the laps stored in memory in the following sequence. Repeatedly press button **2** to step through them in the opposite sequence:

- Best-ever lap **BEST-EVER**
- Best lap logged in memory **BEST**


- Last lap logged in memory **LAST**
- All other laps logged in memory
- Aggregate time for all laps logged in memory **TOTAL**
- Delete lap data logged in memory **DELETE LAPS**.
- Delete the best-ever lap logged in memory **BEST-EVER DELETE**.
- Exit the **RACE INFO EXIT** display mode.

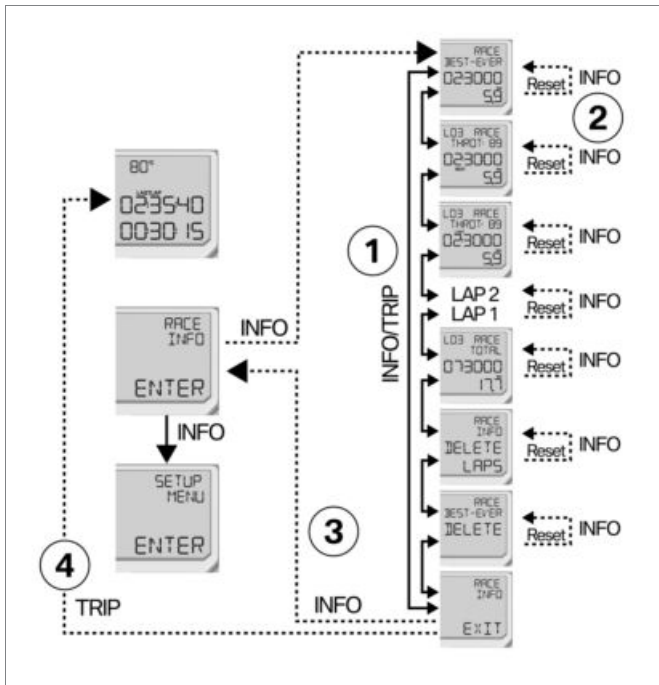

Display overview

- Solid line: short-press the button.
 - - Broken line: press and hold down the button.
- 1 Selecting saved lap (➡ 98).
 - 2 Deleting lap times (➡ 101).
 - 3 Exit the INFO MENU (➡ 100).
 - 4 Delete the timing logs (➡ 101).


Information for a lap

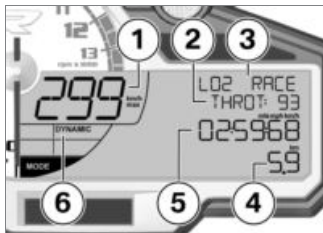


- 1 In sequence: Top speed (max), average speed (\emptyset) and lowest speed (min) on the lap currently displayed.
- 2 In sequence: Average throttle twistgrip position (THROT) in percent, percentage of lap ridden with brakes applied (BRAKE) and number of gearshifts (GEAR) on the lap currently displayed.
- 3 Lap for which the data on the display apply.
- 4 Distance ridden.

- 5 Time for the lap currently displayed.
- 6 The riding mode most commonly used is displayed continuously.

Exiting INFO MENU

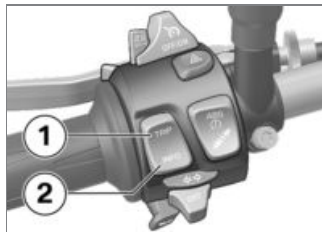


- Repeatedly press button 1 or button 2 until RACE INFO EXIT appears on the display.

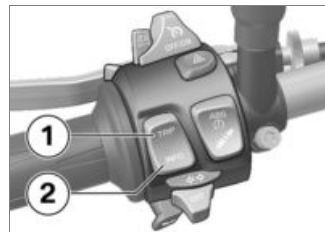

- Press and hold down button 2 to exit the RACE INFO display mode.
 - » The readings already recorded remain saved in memory.
- **Alternatively:** Press and hold down button 1.

Deleting timing logs

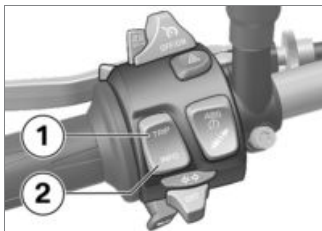

- Repeatedly press button **1** or button **2** until RACE INFO DELETE LAPS appears on the display.
- Press and hold down button **2** to delete all the logged data from memory.

All-time best lap


The all-time best lap (BEST-EVER) is the fastest of all timed laps and is updated as soon as a faster lap BESTLAP is timed. The all-time best lap remains stored in memory even if the

timed laps are deleted. This means that other races can subsequently be timed and the lap times of those races compared with the best lap from earlier races.

The all-time best lap can also be deleted from memory.

If the all-time best lap is from a race timed in the past, it is accompanied on the display by the appropriate lap number. If the all-time best lap shows without a lap number, this lack of a lap number indicates that the time is from a race timed in the past but subsequently deleted from memory.

Deleting lap times

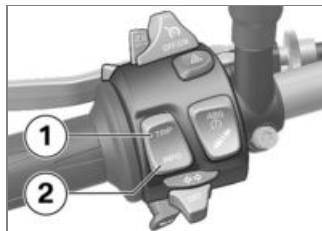


- Repeatedly press button **1** or button **2** until the lap you want to delete appears on the display.
- Press and hold down button **2** to delete the lap from memory.
 - » If the lap you select for deletion was
 - the best lap in memory BEST, the lap in question is deleted. The lap that was the second-best time until the best time was deleted becomes the new best lap.

- the last lap in memory **LAST**, the lap in question is deleted. The lap that was the second-last time until the last time was deleted becomes the new last lap.
- a lap stored in memory, the lap in question is deleted. The numbering of the remaining laps remains unchanged.
- » Total time is reduced by the time for the laps you delete.
- Select **BEST-EVER DELETE** and press and hold down button **2** to delete the **BEST-EVER** lap time.

SETUP MENU

Select parameters

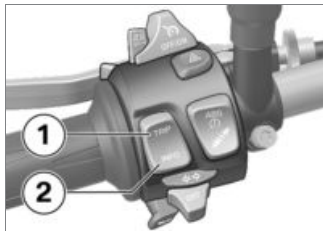

- Select **SETUP MENU** and press and hold button **2**.
- Press button **1** or button **2** repeatedly until the submenu you want appears on the display.
- Press and hold button **2** to call up the submenu you want.

Each time button **1** is pressed the possible parameters are shown in the sequence described below; each time button **2** is pressed the parameters are shown in reverse sequence.

SETUP EQUIPMENT

- Adjust the alarm system setting (DWA) **DWA AUTO ON/OFF**.
- Set the time **CLOCK TIME**.
- Adjust display brightness **DISP BRIGHT**.
- Switch warning for defective bulbs on/off **WARN LAMP**.
- Switch gearshift light on/off **GSL ON/OFF RPM**.
- Gearshift light brightness **GSL BRIGHT**
- Gearshift light frequency **GSL FREQ**
- Change units of measure for speed, range, temperature, average consumption, distance and time **UNITS**

SETUP RACETRACK

- Set **LAPTIMER** readings: Current lap **RUN**, time required for preceding lap **LAST**, best lap **BEST**, total of all laps logged in memory **TOTAL**, best-ever lap **BESTEV**


- Display-freeze period for the most recent time **HOLD**
- Debounce time (time that must elapse before a new lap can be started) of the **TRIP/INFO** button for operating the **LAPTIME DEB-TM**
- Activate or deactivate **BESTLAP BLIP ON/OFF**.
- Change settings for operating the **LAPTIME** by the headlight-flasher button and the **TRIP/INFO** button. **TRIG AUTO**: operate by headlight-flasher button and **TRIP/INFO** button; **TRITG MANUAL**: operate by headlight-flasher button only; **EXTERN**: operate by **TRIP/INFO** button only.

- with riding modes Pro^{OE}

SETUP DYNA-PRO

- Only available with encoding plug inserted.
- Adjust **ABS**: **ROAD**, **DYNA**, **D-PRO**


- Adjust DTC: RAIN, ROAD, DYNA, D-PRO
- Adjust throttle response in combination with torque and coasting acoustics (ENGINE): RAIN, ROAD
- Reset settings to default: RESET<

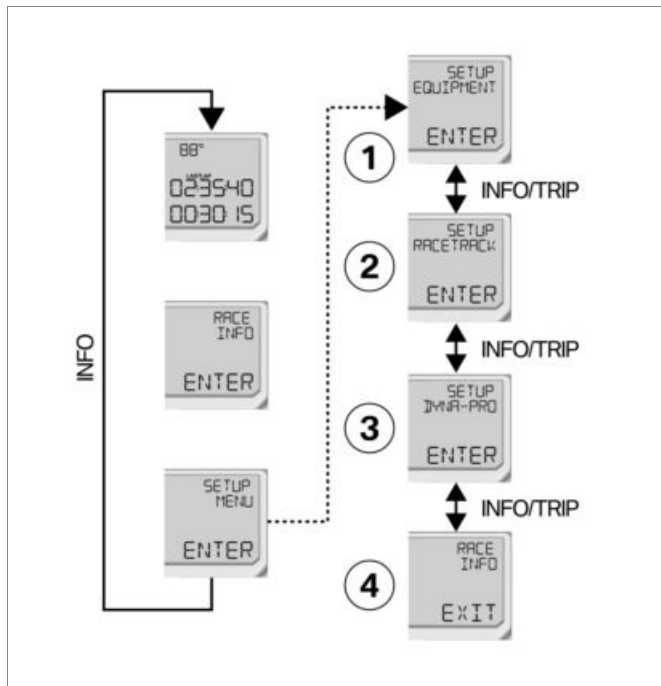

SETUP MENU overview

- Solid line: short-press the button.
 - - Broken line: press and hold down the button.
- 1** Display settings
 - 2** Race track settings
 - 3** Dynamic Pro riding mode settings (only with encoding plug inserted)
 - 4** Exit SETUP MENU

Setting parameters

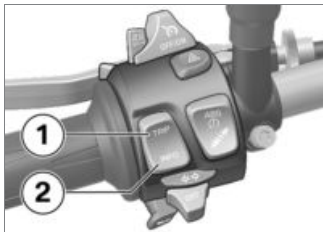


- Press and hold down button **2** until the parameter starts to flash.
- Repeatedly press button **1** or button **2** until the value you want appears on the display.

When the value you want is shown:

- Press and hold down button **2** until the value stops flashing.
- » The value is saved.

Exiting SETUP mode

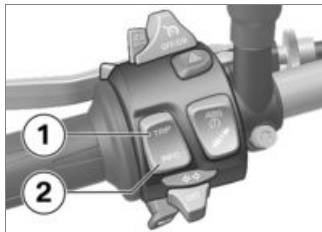

- To exit the **SETUP MENU**, press and hold down button **1**.
- » A value that is still flashing will not be saved.
- **Alternatively:** Repeatedly press button **1** or button **2** until **SETUP MENU EXIT** appears on the display.

When **SETUP MENU EXIT** appears:


- Press and hold down button **2** to exit the **SETUP MENU**.

Racing start


– with riding modes Pro^{OE}

Launch Control

Launch Control supports riders by maintaining the ideal engine speed for a racing start. Launch Control can be activated in the **DYNAMIC** and **DYNAMIC PRO** riding modes only.

 Engine speed after activation of Launch Control at full load
8000 min ⁻¹

After the clutch is engaged, the torque is controlled so that maximum drive is produced at the rear wheel. The throttle grip remains in the full-load position. The engine speed limitation is switched off once a maximum speed is exceeded.

 Top speed
60 km/h

The DTC system is switched off while Launch Control is active.

Launch Control is also turned off in the following circumstances:

- The third gear is engaged.
- The angle of inclination is greater than 30°.
- The engine or the ignition is switched off.
- The riding mode is changed.

The number of consecutive starts using Launch Control is limited in order to protect the clutch. The number of possible starts still remaining is shown in the multifunction display.

Racing start with Launch Control

CAUTION

Launch Control permits maximum acceleration, so unfamiliar riding situations can occur.

Risk of accident through increased acceleration.

- Use Launch Control only on race tracks. ◀
- Activate **DYNAMIC** or **DYNAMIC PRO** riding mode.
- Bring vehicle to starting position.
 - » Vehicle is stationary, engine is running.



- Press and hold down starter button **1** until the reading on the display changes.
- Check the display.



L-CON and the remaining number of available starts **1** using

Launch Control are shown in the multifunction display.

Start with Launch Control is possible.

- Start as described below.



If it is not currently possible to start using Launch Control, the number 0 is shown, alongside an exclamation mark **1**.

- Allow the clutch to cool.



Clutch cooling time

approx. 3 min (With engine running)

approx. 20 min (With engine stopped)

- Proceed in the normal way when starting; open the throttle only as far as necessary to reach the rpm limit.
- After engaging the clutch, open the throttle completely.



If the DTC warning light shows, the DTC system has been switched off.



Shift light on.

» Launch Control controls ideal torque at the rear wheel and maintains a constant engine speed up to approximately 60 km/h.

» As soon as engine speed limitation ceases, engine speed increases because the throttle grip is in the full-throttle position.

Speed limiter for pit lane

– with riding modes Pro^{OE}



• Ride in 1st gear.

NOTICE

The maximum rotational speed PIT LIMIT ... must be set in the SETUP RACETRACK submenu.

The speed resulting from the maximum rotational speed is dependent on the ratio and tyre size.◀

- Press and hold down starter button **1**.
- Open the throttle twistgrip until PIT LIMIT ... is reached.
- » The ignition is interrupted to limit engine speed.

WARNING

As soon as the starter button is released the vehicle accelerates in accordance with the position of the throttle twistgrip.

Risk of crashing due to severe jerk forward if throttle twistgrip in full load position.

- Do not fully open the throttle twistgrip; instead, turn it only to the position at which the engine reaches its speed-limit rpm.◀

- Release starter button **1**.
- » The vehicle accelerates at the maximum rate.

Removing/installing mirrors

Remove mirror



- Push protective cap **1** up.
- Loosen the nut **2** using the toolkit.

NOTICE

When removing the right mirror, make sure that the brake-

fluid reservoir remains correctly secured.◀

- Remove mirror **3**.
- Re-tighten nut **2** using the toolkit.

Install mirror



- Fit mirror **4**.
- Tighten nut **2** using the toolkit.



Locknut (mirror) to clamping piece

Joining compound: Multi-wax spray


20 Nm

- Push protective cap **1** on.

Removing and installing number-plate carrier

Removing number-plate carrier

- Place the motorcycle on its stand on firm, even ground.
- Removing rear seat (→ 59).

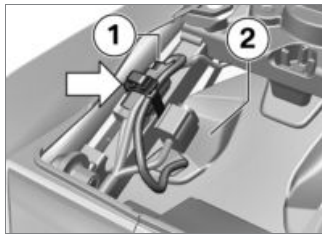

- Remove cable strap (**arrow**) and disconnect plug connection **1** for number plate carrier.




NOTICE

If the number-plate carrier is removed in preparation for a race-track session, the electronics detect a bulb failure and the appropriate warning appears on the display. Activating the EQUIP WARN LAMP function in the SETUP MENU suppresses this warning.◀

- Unthread plug connection **1** with cable through tail bottom section **2**.

– with alarm system (DWA)^{OE}

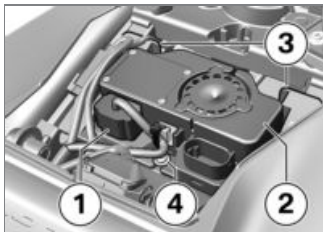


- Disconnect plug connection **1** for alarm system.


NOTICE

Before disconnecting the plug for the anti-theft alarm, check that DWA has been deactivated in the SETUP MENU. ◀

- Remove screw **4**.
- Remove alarm system **2**, and detach from holder **3**.

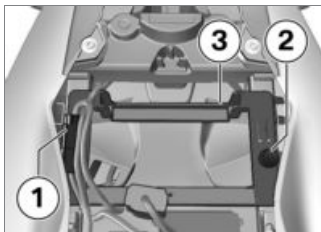

- Release plug connection **1** for number plate carrier.
- Remove expanding rivet **2**.
- Remove holder **3** for alarm system. ◀

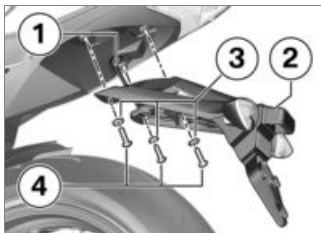


- Remove screws **4** with washers **3**.

- Remove number plate carrier **2** and unthread wiring harness **1**.
- Install the rear seat (▶▶ 60).

Installing number-plate carrier

- Place the motorcycle on its stand on firm, even ground.
- Removing rear seat (▶▶ 59).

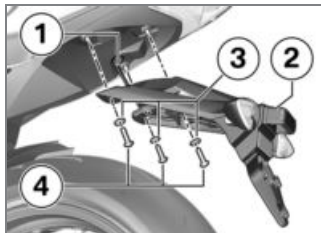


- Fix the number plate carrier **2** and attach the wiring harness **1**.
- Install screws **4** with washers **3**.




Number-plate carrier to rear frame

5 Nm


– with alarm system (DWA)^{OE}

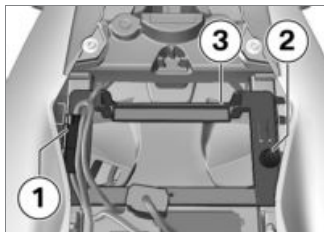

- Install holder **3** for alarm system.
- Install expanding rivet **2**.
- Secure plug connection **1** for number plate carrier.

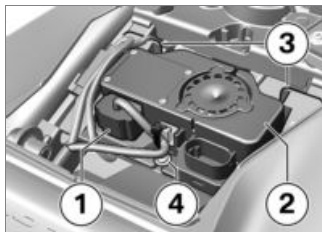

- Deploy alarm system **2** and attach to holder **3**.
- Install screw **4**.
- Connect plug connection **1** for alarm system.◀

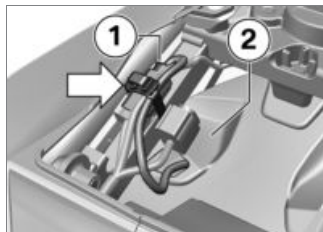

- Thread plug connection **1** with cable through tail bottom section **2**.
- Connect and fix plug connection **1**, and secure cable strap (arrow).



NOTICE

If the warning for bulb failure is suppressed in preparation for a race-track session, before the motorcycle is ridden on public roads the warning has to be reactivated by selecting the **EQUIP WARN LAMP** function in the **SETUP MENU**.◀

- Install the rear seat (☞ 60).

Removing and installing front turn indicators


Removing front flashing turn indicator



NOTICE

The procedure described here for the right side applies by analogy to the left side panel.◀


- Remove the cover on the right (☞ 158).

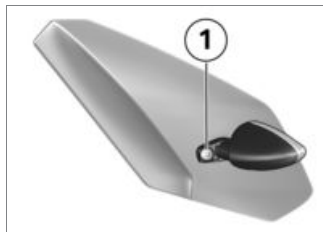

- Remove screw **1** and remove turn indicator. Guide cable through the fairing side panel.
- Protect connector on vehicle from contamination.
- Fit cover on right (☞ 159).

Installing front flashing turn indicator

- Remove the cover on the right (☞ 158).
- Guide cable through the fairing side panel.

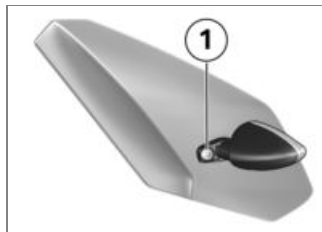

- Put turn indicator in position and fit screw **1**.
- Fit cover on right (☞ 159).

Engineering details

Race ABS Antilock Brake System	116
Automatic Stability Control (ASC)	119
Dynamic Traction Control (DTC)	120
Dynamic Damping Control (DDC)	122
Riding mode	122
Riding mode RAIN	123
Riding mode ROAD	124
Riding mode DYNAMIC	125
Riding mode DYNAMIC PRO	126
Riding without ABS, ASC or DTC	127

Race ABS Antilock Brake System

Partially integral brakes

Your motorcycle is equipped with partially integral brakes. Both front and rear brakes are applied when you pull the handbrake lever. The footbrake lever acts only on the rear brake.



ATTENTION

Attempted burn-out despite Integral braking function

Damage to rear brake and clutch

- Do not attempt a burn-out unless the ABS function is switched OFF. ◀

How does ABS work?

The amount of braking force that can be transferred to the road depends on factors that include the coefficient of friction of the road surface. Loose stones, ice and snow or a wet road all have

much lower coefficients of friction than a clean, dry asphalt surface. The lower the coefficient of friction, the longer the braking distance.

If the rider increases braking pressure to the extent that braking force exceeds the maximum transferable limit, the wheels start to lock and the vehicle loses its directional stability; a fall is imminent. Before this situation can occur, ABS intervenes and adapts braking pressure to the maximum transferable braking force, so the wheels continue to turn and directional stability is maintained irrespective of the condition of the road surface.

What are the effects of surface irregularities?

Humps and surface irregularities can cause the wheels to lose contact temporarily with the road surface; if this happens the

braking force that can be transmitted to the road can drop to zero. If the brakes are applied under these circumstances the ABS has to reduce braking force to ensure that directional stability is maintained when the wheels regain contact with the road surface. At this instant the BMW Motorrad Integral ABS must assume an extremely low coefficient of friction (gravel, ice, snow), so that the wheels will continue to rotate under all imaginable circumstances, because this is the precondition for ensuring directional stability. As soon as it registers the actual circumstances, the system reacts instantly and adjusts braking force accordingly to achieve optimum braking.

What feedback does the rider receive from the BMW Motorrad Race ABS?

If the ABS has to reduce braking force on account of the circumstances described above, vibration is perceptible through the handbrake lever.

When the handbrake lever is pulled, brake pressure is also built up at the rear wheel by the integral function. If the brake pedal is depressed after the handbrake lever is pulled, the brake pressure built up beforehand is perceptible as counter-pressure sooner than is the case when the brake pedal is depressed either before or at the same time as the brake lever is pulled.

Rear wheel lift

Even under severe braking, a high level of tyre grip can mean that the front wheel does not lock up until very late, if at all. Consequently, ABS does not intervene until very late, if at all. Under these circumstances the rear wheel can lift off the ground, and the outcome can be a high-siding situation in which the motorcycle can flip over.



Rear wheel lift due to severe braking

Risk of falling

- When you brake sharply, bear in mind that ABS control cannot always be relied on to prevent the rear wheel from lifting clear of the ground.◀

Special situations

The speeds of the front and rear wheels are compared as one means of detecting a wheel's incipient tendency to lock. If the system registers implausible values for a lengthy period the ABS function is deactivated for safety reasons and an ABS fault message is issued. Self-diagnosis has to complete before fault messages can be issued. In addition to problems with the BMW Motorrad Race ABS, exceptional riding conditions can lead to a fault message being issued.

Exceptional riding conditions:

- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.
- Rear wheel locked by the engine brake for a lengthy period, for example while descending steep gradients.

If a fault message is issued on account of exceptional riding conditions, you can reactivate the ABS function by switching the ignition off and on again.

What significance devolves on regular maintenance?

WARNING

Brake system not regularly serviced.

Risk of accident

- In order to ensure that the BMW Motorrad Race ABS is always maintained in optimum condition, it is essential for you to comply strictly with the specified inspection intervals.◀

Reserves for safety

The potentially shorter braking distances which BMW Motorrad Race ABS permits must not be used as an excuse for careless riding. ABS is primarily a means of ensuring a safety margin in genuine emergencies.

Take care when cornering! When you apply the brakes on a corner, the motorcycle's weight and momentum take over and even BMW Motorrad Race ABS is unable to counteract their effects.

Evolution of Race ABS to ABS Pro

– with ABS Pro^{OE}

Until now, the BMW Motorrad Race ABS helped ensure a very high degree of safety for braking with the motorcycle upright and travelling in a straight line. Now ABS Pro offers enhanced safety for braking in corners as well.

ABS Pro prevents the wheels from locking even under sharp braking. ABS Pro reduces abrupt changes in steering force, particularly in panic-braking situations, counteracting the vehicle's otherwise natural but undesirable tendency to straighten up.

ABS intervention

Technically speaking, depending on the riding situation ABS Pro adapts ABS intervention to the motorcycle's bank angle. Signals for rate of roll and rate of yaw and lateral acceleration are used to calculate bank angle.

As the motorcycle is heeled over more and more as it banks into a corner, an increasingly strict limit is imposed on the brake-pressure gradient for the start of brake application. This slows the build-up of brake pressure to a corresponding degree. Additionally, pressure modulation is more

uniform across the range of ABS intervention.

Advantages for the rider

The advantages of ABS Pro for the rider are sensitive response and high braking and directional stability combined with best-case deceleration of the motorcycle, even when cornering.

Automatic Stability Control (ASC)

How does ASC work?

The BMW Motorrad ASC system compares the speed of rotation of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine control intervenes and adapts the engine torque accordingly.

What is the design baseline for BMW Motorrad ASC?

BMW Motorrad ASC is an assistant system for the rider for use on public roads. The extent to which the rider affects ASC control can be considerable (weight shifts when cornering, items of luggage loose on the motorcycle), especially when style of riding takes rider and machine close to the limits imposed by physics.

The system is not optimised for special requirements that apply under extreme competitive situations off-road or on the race course. The BMW Motorrad ASC can be deactivated in these cases.



WARNING

Risky riding

Risk of accident despite ASC

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adapting his or her style of riding accordingly.
- Do not take risks that would negate the additional safety offered by this system.◀

Special situations

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared as one means of detecting the rear wheel's incipient tendency to spin or slip sideways. If the system registers implausible values for a lengthy period the ASC function is deactivated for safety

reasons and an ASC fault message is issued. Self-diagnosis has to complete before fault messages can be issued.

The following exceptional riding conditions can lead to an automatic shutdown of the BMW Motorrad ASC:

- Riding for a lengthy period with the front wheel lifted off the ground (Wheelie).
- Rear wheel rotating with the vehicle held stationary by applying the front brake (Burn Out).
- Heating up with the motorcycle on the centre stand or an auxiliary stand, engine idling or with a gear engaged.

If the front wheel lifts clear of the ground under severe acceleration, the ASC reduces engine torque until the front wheel regains contact with the ground.

Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

When riding on a slippery surface, never snap the throttle twistgrip fully closed without pulling the clutch at the same time. Engine braking torque can cause the rear wheel to lock, with a corresponding loss of stability. The BMW Motorrad ASC is unable to control a situation of this nature.

Dynamic Traction Control (DTC)

How does DTC work?

- with Dynamic Traction Control (DTC)^{OE}

The BMW Motorrad DTC system compares the speed of rotation of the front wheel and the rear wheel. The differential is used to compute slip as a measure of the reserves of stability available at the rear wheel. If slip exceeds a certain limit, the engine control intervenes and adapts the engine torque accordingly.

WARNING

Risky riding

Risk of accident despite DTC

- Invariably, the rider bears responsibility for assessing road and traffic conditions and adopting his or her style of riding accordingly.
- Do not take risks that would negate the additional safety offered by this system. ◀

Special situations

- with Dynamic Traction Control (DTC)^{OE}

In accordance with the laws of physics, the ability to accelerate is restricted more and more as the angle of heel increases. Consequently, there can be a perceptible reduction in acceleration out of very tight bends.

The speeds of the front and rear wheels are compared and the angle of heel taken into account as one means of detecting the rear wheel's incipient tendency to spin or slip sideways. If the electronic processor receives values that it considers implausible over a lengthy period, a dummy value is used for the angle of heel or the DTC function is switched off. Under these circumstances the indicator for a DTC fault shows. Self-diagnosis has to complete before fault messages can be issued.

The BMW Motorrad DTC can switch off automatically under the exceptional riding conditions outlined below.

Exceptional riding conditions:

- Riding for a lengthy period with the front wheel lifted off the ground (Wheelie).

- Rear wheel rotating with the vehicle held stationary by applying the front brake (Burn Out).
- Heating up with the motorcycle on an auxiliary stand, in neutral or with a gear engaged.

If the front wheel lifts clear of the ground under severe acceleration, the ASC or DTC reduces engine torque in the **RAIN**, **ROAD** and **DYNAMIC** riding modes until the front wheel regains contact with the ground.

Front wheel lift-off detection is deactivated in the **DYNA PRO** setting of the **DYNAMIC PRO** riding mode.

Under these circumstances, BMW Motorrad recommends rolling the throttle slightly closed so as to restore stability with the least possible delay.

When riding on a slippery surface, never snap the throttle twistgrip fully closed without pulling the clutch at the same time. Engine braking torque can cause the rear wheel to skid, with a corresponding loss of stability. The BMW Motorrad DTC is unable to control a situation of this nature.

Accelerating the motorcycle to a defined minimum speed after switching the ignition off and then on again reactivates the DTC if the encoding plug is not inserted.



Minimum speed for activation of DTC

min 10 km/h

Dynamic Damping Control (DDC)

How does DDC work?

– with Dynamic Damping Control (DDC)^{OE}

Dynamic Damping Control (DDC) is a semi-active suspension system that reacts automatically to riding manoeuvres and changes in surface condition, constantly correcting the damping in accordance with the situation.

Movement of the rear spring strut is registered by the ride height sensor. The electric damper valve is opened/closed depending on the determined direction of travel and speed of travel as well as on the chosen riding mode. Front-wheel damping also depends on the riding mode, but spring travel is not measured.

DDC can be adjusted between the ROAD and DYNAMIC modes

at any time, whatever the riding mode selected.

Riding mode

Riding mode

Riding mode selection

Different riding modes enable the motorcycle's characteristics to adapt to the prevailing weather conditions, the road and traffic, and the rider's style of riding:

RAIN

ROAD (standard mode)

– with riding modes Pro^{OE}

DYNAMIC

DYNAMIC PRO (only with encoding plug inserted)

Each of these modes produces perceptible differences in the way the motorcycle behaves. ABS and/or ASC/DTC can be switched off in each mode: the explanations below invariably ap-

ply to the behaviour of the motorcycle with these systems active. The mode last selected is automatically reactivated after the ignition has been switched off and then on again.

The basic rule is: the sportier the mode you select, the more directly can you tap into the engine's reserves of power. At the same time, the level of rider assistance that the ABS and ASC/DTC systems offer decreases accordingly.

The **RAIN**, **ROAD** and **DYNAMIC** riding modes are set up for riding with standard tyres recommended by BMW Motorrad. The **DYNAMIC PRO** riding mode is for race-track conditions and surfaces with a very high level of grip.

Consequently, you must always bear the following in mind with regard to your selection of a ride mode: The sportier the setting,

the greater the challenge to your riding skill!

Mode changes

A changeover of the functions in the engine management system, the ABS and the ASC/DTC systems while riding is possible only in certain operating states:

- No drive torque at the rear wheel
- No brake pressure in the brake system.

In order to achieve this state,

- The motorcycle must be at a standstill with the ignition switched on

or

- The throttle twistgrip must be in the fully closed position,
- The brake levers must be in the released positions.

The desired riding mode is initially preselected. The mode change does not take place until the systems in question are all in the appropriate state.

The selection menu does not disappear from the display until the mode change has taken place.

Riding mode RAIN

Wet roads

The **RAIN** riding mode offers safety and directional stability on wet roads or roads with a similarly low coefficient of friction.

ABS

- The ABS always intervenes early enough to prevent as effectively as possible the wheels from locking and the rear wheel from lifting off the ground.
- Maximum assistance with integral pressure build-up when

- only the handbrake lever is pulled.
- ABS for the rear wheel is switched on.
- Rear-wheel lift detection is switched on. The rear wheel should remain in contact with the ground at all times.

– with ABS Pro^{OE}

ABS Pro is fully available. The tendency of the motorcycle to straighten up when the brakes are applied with the machine banked for cornering is reduced to a minimum.

ASC

- The ASC intervenes early enough to prevent the rear wheel from spinning whenever possible. ASC offers maximum assistance.
- Front-wheel lift detection is ON and prevents the front wheel from lifting off the ground.

– with Dynamic Traction Control (DTC)^{OE}

DTC

- The DTC intervenes early enough to prevent the rear wheel from spinning whenever possible. DTC offers maximum assistance.
- Front-wheel lift detection is ON and prevents the front wheel from lifting off the ground.

Throttle response

- Restrained: Power increase when you open the throttle is virtually linear, engine response is soft.
- The engine's maximum torque is not made available. The torque curve for rain is imposed.
- The thrust acoustics are off.

Riding mode ROAD

Standard mode

The ROAD riding mode offers safety and directional stability on dry roads.

ABS

- The behaviour of the ABS is the same as in RAIN mode.
- The ABS always intervenes early enough to prevent as effectively as possible the wheels from locking and the rear wheel from lifting off the ground.
- Maximum assistance with integral pressure build-up when only the handbrake lever is pulled.
- ABS for the rear wheel is switched on.
- Rear-wheel lift detection is switched on. The rear wheel should remain in contact with the ground at all times.

- with ABS Pro^{OE}

ABS Pro is fully available. The tendency of the motorcycle to straighten up when the brakes are applied with the machine banked for cornering is reduced to a minimum.

ASC

- The ASC intervenes early enough to prevent the rear wheel from spinning whenever possible. However, ASC offers less assistance than in RAIN mode.
- Front-wheel lift detection is ON and prevents the front wheel from lifting off the ground.

- with Dynamic Traction Control (DTC)^{OE}

DTC

- The DTC intervenes later than in RAIN mode, so it is possible to induce slight drift when exiting corners.

- Front-wheel lift detection is ON and prevents the front wheel from lifting off the ground.

Throttle response

- Engine response is optimum and direct.
- The engine's maximum torque is made available.
- The thrust acoustics are on.

Riding mode DYNAMIC

- with riding modes Pro^{OE}

Dynamic on dry roads

The **DYNAMIC** riding mode is suitable for sporty riding on dry roads.

ABS

- In this riding mode, the ABS intervenes later than in ROAD mode. The wheels are still prevented from locking.

- Lift detection for the rear wheel is reduced. The rear wheel can lift slightly clear of the ground.
- Assistance with integral pressure build-up is reduced.
- ABS for the rear wheel is switched on. Assistance is less than in the ROAD riding mode.
- ABS Pro is available. Assistance is less than in the ROAD riding mode.

DTC

- The DTC intervenes later than in ROAD mode, so it is possible to induce drift when exiting corners.
- Front-wheel lift detection is ON, but it offers less assistance. Agility comes before stability in the **DYNAMIC** riding mode, so slight wheelies are possible.

Throttle response

- Engine response is optimum and direct.
- The engine's maximum torque is made available.
- The thrust acoustics are on.

Riding mode DYNAMIC PRO

- with riding modes Pro^{OE}

Sporty one-up riding

DYNAMIC PRO is the sportiest riding mode. The DYNAMIC PRO mode cannot be activated unless the encoding plug is inserted. The DYNAMIC PRO riding mode was developed in its default setting for situations in which the rider has an open view of the road ahead and the surroundings and is for riding on dry surfaces with the high level of grip generally encountered only on race tracks. Similarly, the assumption

on which the parameter settings for this riding mode are based is that the motorcycle is fitted with tyres with a very high level of surface grip and is ridden one-up.

The following systems can also be individually adjusted to adapt the motorcycle to the current purpose.

ABS and ABS Pro

- ABS support is reduced to a minimum. It intervenes later than in the DYNAMIC riding mode. The shortest braking distances can be achieved.
- Lift detection for the rear wheel is deactivated. The rear wheel can lift clear of the ground.
- Assistance with integral pressure build-up is reduced sooner than in the DYNAMIC riding mode.
- ABS for the rear wheel is deactivated. Assistance deactivated

with respect to the DYNAMIC riding mode.

- ABS Pro functions are not supported in the DYNAMIC PRO riding mode!
- Note that deactivating the ABS means that the ABS remains switched off even after the ignition has been switched off and then on again.

Alternatively ABS can be adjusted accordingly for the ROAD or DYNAMIC riding modes in DYNAPRO setup.

DTC

- The controller of the DTC system assumes that the vehicle is fitted with tyres with the maximum level of grip.
- DTC offers only very slight assistance.
- Slip is highest in the DYNAMIC PRO riding mode.

- Maximum acceleration is achieved.
- The DTC intervenes so late that lengthy drifts are possible.
- Front-wheel lift detection is deactivated. Agility comes before stability in this sporty riding mode, so any wheelies are possible. It is up to the rider to control wheelies and prevent the motorcycle from flipping over backwards in extreme cases.
- Note that deactivating the DTC means that the DTC remains switched off even after the ignition has been switched off and then on again.

Alternatively DTC can be adjusted accordingly for the RAIN, ROAD or DYNAMIC riding modes in *DYNA-PRO* setup.

Throttle response

- Engine response is optimum and direct.
- The engine's maximum torque is made available.
- The thrust acoustics are on.

Alternatively, the throttle response can also be set to the RAIN riding mode in the *DYNA-PRO* setup.

Riding without ABS, ASC or DTC

ABS and ASC or, as applicable DTC can be switched off individually or together in all riding modes. Under these circumstances bear in mind the lack of assistance from the suspension and running-gear control systems:

ABS switched off

- The ABS indicator and warning light shows.

- ABS assistance is deactivated. Under these circumstances the front wheel can lock up.
- Assistance with integral pressure build-up is in accordance with the selected riding mode. Burn Outs are not permitted even with the ABS switched off.
- ABS for the rear wheel is deactivated. Under these circumstances, the rear wheel can lock up.
- Rear-wheel lift detection is deactivated. The rear wheel can lift clear of the ground.
- with ABS Pro^{OE}
- ABS Pro is not available.

ASC switched off

- The ASC indicator and warning light shows.
- ASC assistance is deactivated. Any drifts are possible.

- Front-wheel lift detection is deactivated. Any wheelies are possible. There is a possibility of the motorcycle flipping over backwards.

- with Dynamic Traction Control (DTC)^{OE}

DTC switched off

- The DTC indicator and warning light shows.
- DTC assistance is deactivated. Any drifts are possible.
- Front-wheel lift detection is deactivated. Any wheelies are possible. There is a possibility of the motorcycle flipping over backwards.

Maintenance

General instructions.....	130	Fuses	163
Toolkit	130	Diagnostic connector	164
Front-wheel stand	131	Chain	165
Rear-wheel stand	132		
Engine oil	132		
Brake system	133		
Clutch	138		
Coolant	139		
Tyres	140		
Rims and tyres.....	140		
Wheels	141		
Light source	149		
Trim panel components	157		
Jump-starting.....	160		
Battery.....	161		

General instructions


The Maintenance chapter describes straightforward procedures for checking and replacing certain wear parts.

Special tightening torques are listed as applicable. The tightening torques for the threaded fasteners on your vehicle are listed in the section entitled "Technical data".

You will find information on more extensive maintenance and repair work in the Repair Manual on DVD for your vehicle, which is available from your authorised BMW Motorrad dealer.

Some of the work calls for special tools and a thorough knowledge of the technology involved. If you are in doubt, consult a specialist workshop, preferably your authorised BMW Motorrad dealer.

Toolkit

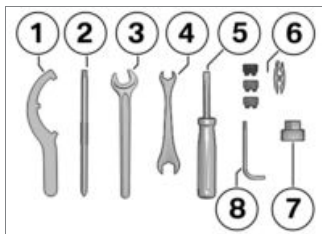

- 1** Hook wrench
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjusting spring preload for rear wheel (►► 67).
- 2** Reversible screwdriver blade
Phillips PH1 and Torx T25
 - Removing and installing trim panel components.
 - Removing front seat (►► 60).
 - Replacing bulbs for front and rear turn indicators (►► 154).
- 3** Open-ended spanner
Width across flats 17
 - Mirror clamp
- 4** Open-ended spanner
Width across flats 10/13
 - Removing battery (►► 163).
 - with Dynamic Damping Control (DDC)^{OE}
 - Adjusting spring preload for rear wheel (►► 68).
- 5** Reversible-blade screwdriver with star-head and plain tips
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjusting compression-stage damping for front wheel (►► 70).
 - without Dynamic Damping Control (DDC)^{OE}
 - Adjust the rebound-stage damping for front wheel (►► 70).

- 5 – without Dynamic Damping Control (DDC)^{OE}
 - Adjusting rebound-stage damping for rear wheel (➡ 71).
- 6 Spare fuses with gripping clamp
 - Mini-fuses 4 A, 7.5 A and 10 A
 - Clamps for removing the fuses
 - Replacement fuses
- 7 Plastic cap
 - with Dynamic Damping Control (DDC)^{OE}
 - Adjusting spring preload for front wheel (➡ 66).
- 8 Torx bit, T25
 - Removing and installing trim panel components.
 - Removing front seat (➡ 60).

Front-wheel stand

Fitting the front-wheel stand



Use of the BMW Motorrad front wheel stand without accompanying use of centre stand or auxiliary stand

Risk of damage to parts if vehicle topples

- Place the motorcycle on its centre stand or another auxiliary stand before lifting the front wheel with the BMW Motorrad front-wheel stand.◀
- Place the motorcycle on an auxiliary stand; BMW Motorrad recommends the BMW Motorrad rear-wheel stand.
- Fitting the rear-wheel stand (➡ 132).



- The description of how to fit the front-wheel stand correctly will be found in the instructions for the stand.
- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

Rear-wheel stand

Fitting the rear-wheel stand



- The description of how to fit the rear-wheel stand correctly will be found in the instructions for the stand.
- BMW Motorrad offers an auxiliary stand suitable for every vehicle. Your BMW Motorrad retailer will be happy to help you with the selection of a suitable auxiliary stand.

Engine oil

Checking engine oil level

ATTENTION

Misinterpretation of oil level reading, because oil level is temperature-dependent (the higher the temperature, the higher the oil level)

Engine damage


- Check the oil level only after a lengthy ride or when the engine is at operating temperature. ◀
- Make sure the engine is at operating temperature and hold the motorcycle upright.
- Allow the engine to idle for one minute.

NOTICE


As a contribution to reducing environmental impact, BMW Motorrad recommends

checking the engine oil on occasion after a trip of at least 50 km. ◀

- Switch off the ignition.
- Wait five minutes for the oil to drain into the oil pan.

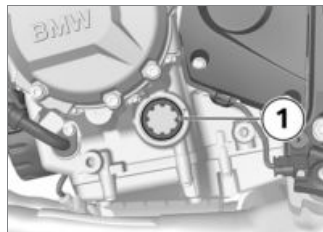

- Check the oil level in oil-level indicator **1**.

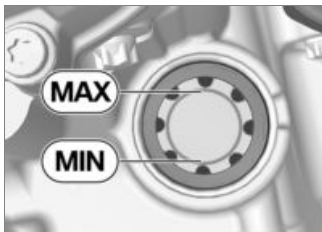

If the oil level is above the MAX mark:


- Have the oil level corrected by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Topping up the engine oil

- Place the motorcycle on its stand on firm, even ground.
- Wipe the area around the oil filler neck clean.




- Remove cap **1** of the oil filler neck.

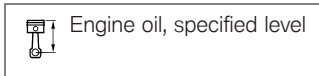

Engine oil, specified level

Between **MIN** and **MAX** mark

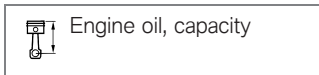

Engine oil, capacity

Viscosity class

approx. 3.5 l (with filter change)

If the oil level is below the MIN mark:

- Topping up the engine oil (➡ 133).



ATTENTION

Use of insufficient engine oil or too much engine oil

Engine damage

- Always make sure that the oil level is correct.◀
- Top up the engine oil to the specified level.
- Checking engine oil level (➡ 132).
- Install oil filler cap **1**.

Brake system

Checking function of brakes

- Operate brake lever.
 - » The pressure point must be clearly perceptible.
- Press the footbrake lever.
 - » The pressure point must be clearly perceptible.

If pressure points are not clearly perceptible:



ATTENTION

Work on brake system not in compliance with correct procedure

Risk to operational reliability of the brake system


- Have all work on the brake system undertaken by trained and qualified specialists. ◀
- Have the brakes checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking front brake pad thickness

- Place the motorcycle on its stand on firm, even ground.
- Turn the handlebars to the full-lock position.



- Visually inspect the left and right brake pads to ascertain their thickness. Viewing direction: from the rear toward brake pads **1**.

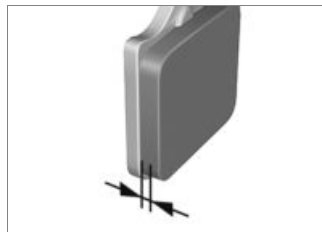

Brake-pad wear limit, front

min 0.8 mm (Friction pad only, without backing plate)


If the brake pads are worn:


WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, damage to the brakes

- In order to ensure the dependability of the brake system, do not permit the brake pads to wear past the minimum permissible thickness. ◀
- Have the brake pads replaced by a specialist workshop, preferably an authorised BMW Motorrad dealer.
- If the brake pads installed are not genuine BMW Motorrad brake pads, it is absolutely essential to measure the thickness of the brake-pad carrier plates.

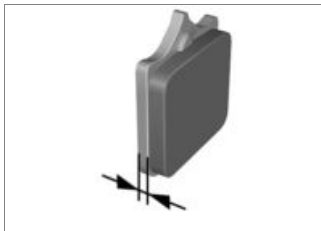

 Thickness of brake-pad carrier plate

min 4.5 mm

If the carrier plates are not thick enough:

WARNING

Use of unsuitable brake pads


Failure of the brake system due to loss of the brake pads

- Use only brake pads with brake pad carrier plates of adequate thickness. ◀


- BMW Motorrad recommends installing only genuine BMW Motorrad brake pads.

Check rear brake pad thickness

- Place the motorcycle on its stand on firm, even ground.

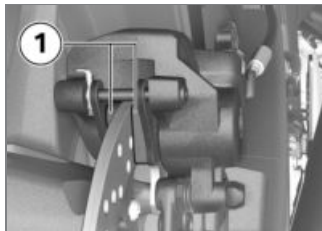

- Visually inspect the brake pads to ascertain their thickness. Viewing direction: from the rear toward brake pads **1**.

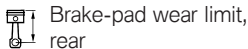

Brake-pad wear limit,
rear

min 1.0 mm (Friction pad only,
without backing plate)

If the wear indicating mark is no
longer visible:



WARNING

Brake-pad thickness less than permissible minimum

Diminished braking effect, dam-
age to the brakes


- In order to ensure the depend-
ability of the brake system, do
not permit the brake pads to

wear past the minimum per-
missible thickness. ◀

- Have the brake pads replaced
by a specialist workshop,
preferably an authorised
BMW Motorrad dealer.

Checking brake-fluid level, front brakes

- Make sure the ground is level
and firm and hold the motor-
cycle upright.
- Move the handlebars to the
straight-ahead position.

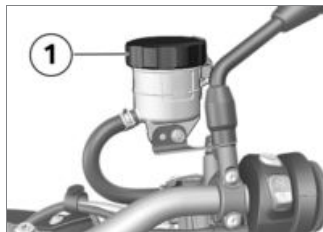

- Check the brake fluid level on
brake fluid tank **1**.



NOTICE

Wear of the brake pads causes
the brake fluid level in the reser-
voir to sink. ◀



Brake fluid level, front

Brake fluid, DOT4

The brake fluid level must not drop below the **MIN** mark. (Brake-fluid reservoir, horizontal)

If the brake fluid level drops below the permitted level:

 **WARNING**

Not enough brake fluid in brake fluid reservoir

Considerably reduced braking power due to air in the brake system

- Check the brake-fluid level at regular intervals.◀
- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking the brake-fluid level, rear brakes

- Make sure the ground is level and firm and hold the motorcycle upright.



- Check the brake fluid level in rear reservoir **1**.



NOTICE

Wear of the brake pads causes the brake fluid level in the reservoir to sink.◀



Brake fluid level, rear

Brake fluid, DOT4

The brake fluid level must not drop below the **MIN** mark. (Brake-fluid reservoir, horizontal)

If the brake fluid level drops below the permitted level:



WARNING

Not enough brake fluid in brake fluid reservoir

Considerably reduced braking power due to air in the brake system

- Check the brake-fluid level at regular intervals. ◀
- Have the defect rectified as quickly as possible by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Clutch


Checking clutch function

- Pull the clutch lever.
 - » The pressure point must be clearly perceptible.

If the pressure point is not clearly perceptible:

- Have the clutch checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.

Checking clutch-lever play

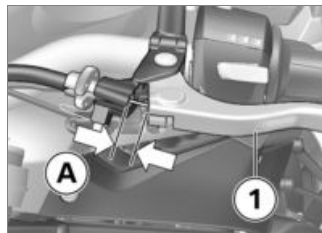

- Pull clutch lever **1** until resistance is perceptible.
- In this position, measure clutch play **A** between the handlebar fitting and the clutch lever.




Clutch-lever play

0.5...1.0 mm (at the handlebar fitting, with engine cold)

Clutch play is out of tolerance:

- Adjust the clutch-lever play (▶▶▶ 139).

Adjust the clutch-lever play

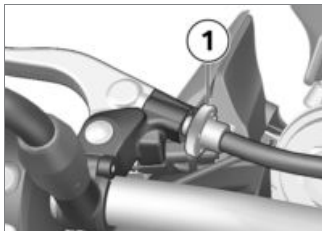

- To increase clutch play: turn screw **1** in the tightening direction, i.e. into the handlebar fitting.
- To reduce clutch play: turn screw **1** in the loosening direction, i.e. out of the handlebar fitting.
- Checking clutch-lever play (☞ 138).
- Repeat the steps in this procedure until clutch play is set correctly.


Coolant


Check coolant level

- Place the motorcycle on its stand on firm, even ground.



- Check the coolant level in expansion tank **1**. Viewing direction: from the front towards the outside of the right side trim panel.

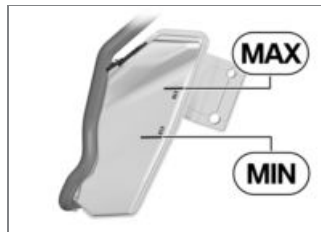

 Coolant, specified level

Between MIN and MAX marks on the expansion tank (Engine cold)

If the coolant drops below the permitted level:

- Top up the coolant.

Top up coolant

- Remove the side panel (☞ 157).



- Open cap **1** of the expansion tank.
- Top up coolant to specified level.
- Check coolant level (➡ 139).
- Close the cap of the expansion tank.
- Install the right side panel (➡ 157).

Tyres

Checking tyre pressure



WARNING

Incorrect tyre pressure

Impaired handling characteristics of the motorcycle, shorter useful tyre life

- Always check that the tyre pressures are correct.◀



WARNING

Tendency of valve inserts to open by themselves at high riding speeds

Sudden loss of tyre pressure

- Install valve caps fitted with rubber sealing rings and tighten firmly.◀
- Place the motorcycle on its stand on firm, even ground.
- Check tyre pressures against the data below.



Tyre pressure, front

2.5 bar (Tyre cold)



Tyre pressure, rear

2.9 bar (Tyre cold)

If tyre pressure is too low:

- Correct tyre pressure.

Rims and tyres

Checking rims

- Place the motorcycle on its stand on firm, even ground.
- Visually inspect the rims for defects.
- Have damaged rims inspected by a specialist workshop and replaced if necessary, preferably by an authorised BMW Motorrad dealer.

Checking tyre tread depth



Riding with badly worn tyres

Risk of accident due to impaired handling

- If applicable, have the tyres changed in good time before they wear to the minimum tread depth permitted by law. ◀
- Place the motorcycle on its stand on firm, even ground.
- Measure the tyre tread depth in the main tread grooves with wear marks.



Wear indicators are built into the main profile grooves on each tyre. The tyre is worn out when the tyre tread has worn down to the level of the marks. The locations of the marks are indicated on the edge of the tyre, e.g.

by the letters TI, TWI or by an arrow. ◀

If the tyre tread is worn to minimum:

- Replace tyre or tyres, as applicable.

Wheels

Tyre recommendation

For each size of tyre, BMW Motorrad tests and classifies as roadworthy certain makes. BMW Motorrad cannot assess the suitability or provide any guarantee of road safety for other tyres.

BMW Motorrad recommends using only tyres tested by BMW Motorrad.

Detailed information is available from your authorised BMW Motorrad dealer or in the internet at:

bmw-motorrad.com

Effect of wheel size on chassis and suspension control systems

Wheel size is very important as a parameter for the running-gear control systems ABS and ASC/DTC. In particular, the diameter and the width of a vehicle's wheels are programmed into the control unit and are fundamental to all calculations. Any change in these influencing variables, caused for example by a switch to wheels other than those installed ex-works, can have serious effects on the performance of the control systems.

The sensor rings are essential for correct wheel-speed calculation, and they too must match the motorcycle's control systems and consequently cannot be changed.

If you decide that you would like to fit non-standard wheels to

your motorcycle, it is very important to consult a specialist workshop beforehand, preferably an authorised BMW Motorrad dealer. In some cases, the data programmed into the control units can be changed to suit the new wheel sizes.


Removing front wheel

- Place the motorcycle on its stand on firm, even ground.



- Remove screw **1** and remove the wheel-speed sensor from its bore.

- Mask off the parts of the wheel rim that could be scratched in the process of removing the brake calipers.

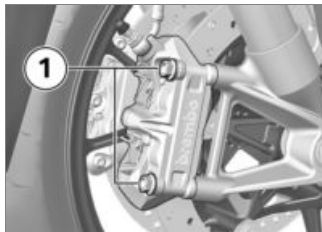


ATTENTION

Unwanted inward movement of the brake pads

Component damage on attempt to install the brake caliper or because brake pads have to be forced apart


- Do not operate the brakes with a brake caliper not correctly secured. ◀

- Remove screws **1** of the brake callipers on left and right.

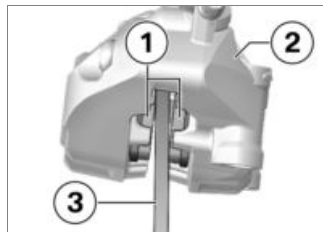

- Force the brake pads **1** slightly apart by rotational movement of the brake caliper **2** against brake disc **3**.
- Carefully pull the brake calipers back and out until clear of the brake discs.
- Lift the motorcycle, preferably with a BMW Motorrad rear-wheel stand.
- Fitting the rear-wheel stand (▶▶ 132).

- Lift the front of the motorcycle until the front wheel is clear of the ground, preferably using a BMW Motorrad front-wheel stand.
- Fitting the front-wheel stand (►► 131).

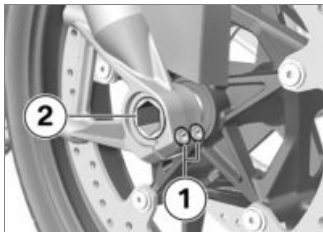

ATTENTION

Incorrectly aligned threaded bush in front suspension

Damage to wheel speed sensor.
ABS malfunction

- Left axle clamping screws locate the threaded bush; do

not loosen or remove these screws.◀

- Slacken right axle clamping screws **1**.
- Remove quick-release axle **2**, while supporting the wheel.
- Roll the front wheel forward to remove.

Installing front wheel

WARNING

Use of a non-standard wheel Malfunctions during ABS and ASC/DTC intervention

- See the information on the effect of wheel size on the ABS and ASC/DTC systems at the start of this chapter.◀

ATTENTION

Tightening threaded fasteners to incorrect tightening torque

Damage, or threaded fasteners work loose


- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀

ATTENTION


Front wheel installed wrong way round

Risk of accident

- Note direction-of-rotation arrows on tyre or rim.◀
- Roll the front wheel into position between the front forks.

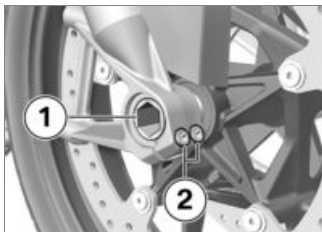


- Lift front wheel and fit quick-release axle **1** with torque.

 Quick-release axle in threaded bush

50 Nm

- Tighten right axle clamping screws **2** to the specified tightening torque.




 Clamping screws in axle holder


Tightening sequence: Tighten screws six times in alternate sequence

19 Nm

- Remove front-wheel stand and rear-wheel stand.
- Place brake calliper on the brake discs.

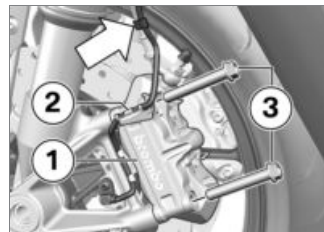

- Place brake calliper **1** on left and position cable routing **2**.
- Install screws **3** and tighten to specified torque.


 Radial brake calliper to axle mount

38 Nm


- Secure the cable for the wheel-speed sensor in the holder **ar-row**.



- Insert wheel speed sensor in the bore hole and secure with screw **1**.

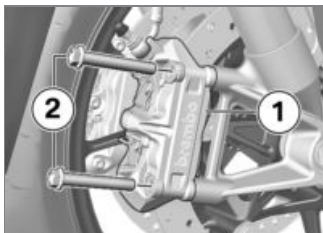

- Locate brake calliper **1** in position on right and install screws **2** to specified torque.


 Radial brake caliper to axle mount

38 Nm


- Remove the adhesive tape from the wheel rim.
- Powerfully pull brake lever several times until the pressure point can be felt.

Removing rear wheel

- Lift the motorcycle, preferably with a BMW Motorrad rear-wheel stand.
- Fitting the rear-wheel stand (▶ 132).
- Slip wooden chocks or similar under the rear wheel to prevent it from dropping out after the quick-release axle has been removed.

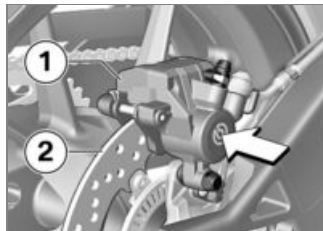


- Press brake caliper **1** against brake disc **2**
» Brake pistons are pushed back.

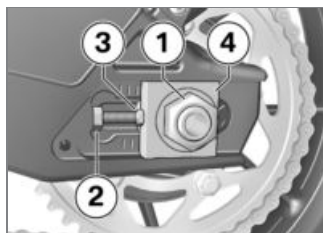

- Remove axle nut **1** with washer.


- Slacken locknuts **2** on left and right.
- Slacken adjusting screws **3** on left and right.
- Remove adjusting plate **4** and push the axle in as far as it will go.

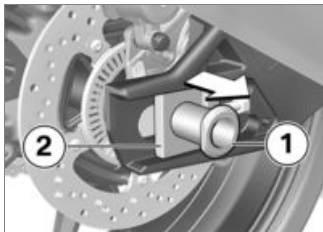


- Remove quick-release axle **1** and remove adjusting plate **2**.



- Roll the rear wheel as far forward as possible and disengage chain **1** from the sprocket.

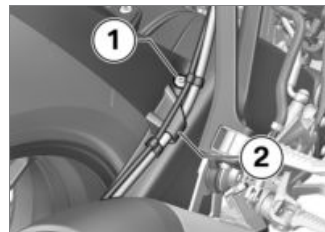


- Remove screw **1** and disengage the brake line from holder **2**.

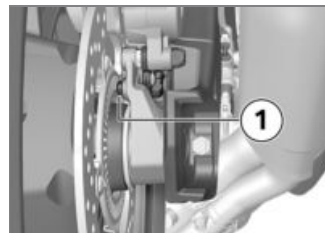

- When rolling the rear wheel clear of the motorcycle, take

care not to damage wheel-speed sensor **1**.

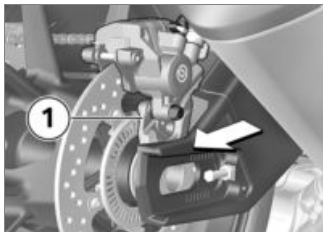

- Roll the rear wheel to the rear and clear of the swinging arm and at the same time pull brake-caliper carrier **1** back far enough to allow the rear wheel to clear it.

NOTICE

The sprocket and the spacer sleeves on left and right are loose fits in the wheel. When removing, make sure that no parts are damaged or mislaid.◀

Installing the rear wheel

WARNING

Use of a non-standard wheel

Malfunctions during ABS and ASC/DTC intervention

- See the information on the effect of wheel size on the ABS and ASC/DTC systems at the start of this chapter.◀


ATTENTION

Tightening threaded fasteners to incorrect tightening torque


Damage, or threaded fasteners work loose

- Always have the security of the fasteners checked by a specialist workshop, preferably an authorised BMW Motorrad dealer.◀


- Roll the rear wheel on the support into the swinging arm as far as necessary to permit the brake-caliper carrier to be inserted.

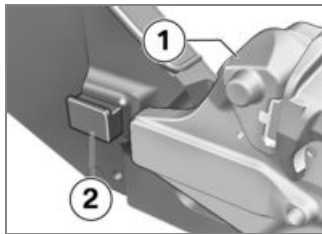

- Insert brake-caliper carrier **1** into guide **2**.

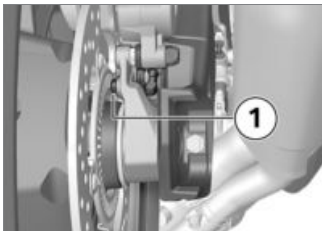

- When rolling the rear wheel into position, take care not to damage wheel-speed sensor **1**.

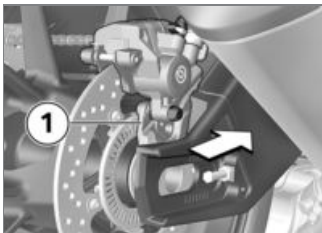


- Roll the rear wheel further into the swinging arm, while push-

ing brake-caliper carrier **1** forward at the same time.




- Roll the rear wheel as far forward as possible and loop chain **1** over the sprocket.

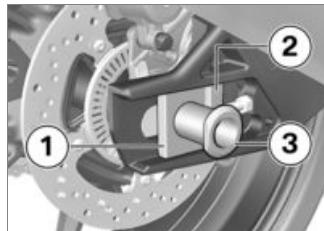

- Insert right adjusting plate **1** into the swinging arm with stop **2** to the front.
- Lift the rear wheel and work quick-release axle **3** through the adjusting plate and into the brake-caliper carrier and the rear wheel.
- Make sure that the quick-release axle is seated against the stop of the adjusting plate.



- Insert left adjusting plate **1**.
- Install axle nut **2** with its washer, but do not tighten the nut at this point.

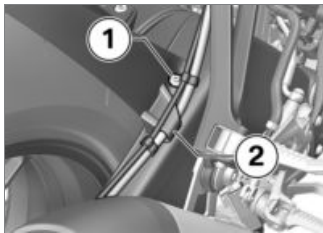

- Secure the brake line in holder **2** and install screw **1**.


- Adjust the chain tension (☞ 166).

Light source


Replacing bulb for low-beam headlight

NOTICE


- The plug arrangement can differ from the illustration, depending on the bulb to be replaced.◀
- Switching off ignition (☞ 41).
 - Remove the cover on the right (☞ 158).

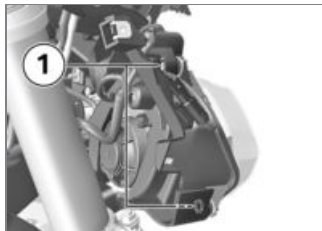

- Remove screws **1** and tilt the headlight to the right a little.

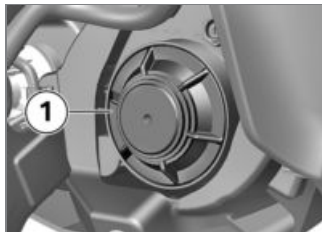

- Remove cover **1**.

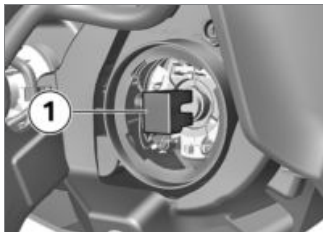

- Disconnect plug **1**.



- Release spring clip **1** at left and right and swing it up.
- Remove bulb **2** from the socket.

- Replace the defective bulb.



NOTICE


Bulbs with higher light-intensity ratings are available through after-market suppliers. These bulbs burn out more rapidly and generate more heat than conventional bulbs. Under adverse conditions the extra heat can cause damage to the headlight. ◀




Bulbs for the low-beam headlight

H7 / 12 V / 55 W

- Hold the bulb by the base only, in order to keep the glass free of foreign matter.

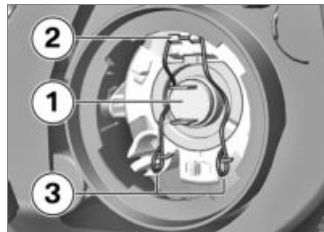

- Install bulb **1**. Begin by seating lug **2** and then press the bulb into the socket.
- Engage spring clip **3** in the catch on left and right.

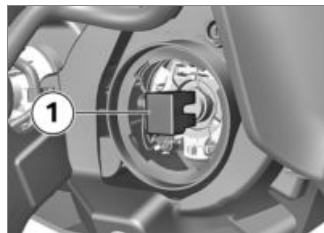


- Connect plug **1**.

- Install the cover.
- Fit cover on right (▣▶ 159).

Replacing bulb for high-beam headlight

- Switching off ignition (▣▶ 41).
- Remove the cover on the left (▣▶ 158).

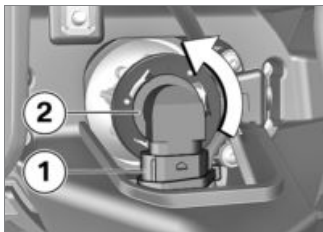

- Disconnect plug connection **1** for high beam.
- Turn base **2** anti-clockwise and remove from the high beam support.

- Replace the defective bulb.


NOTICE

Bulbs with higher light-intensity ratings are available through after-market suppliers. These bulbs burn out more rapidly and generate more heat than conventional bulbs. Under adverse conditions the extra heat can cause damage to the headlight. ◀

 Bulb for high-beam headlight

HB3 / 12 V / 60 W


- Hold the bulb by the base only, in order to keep the glass free of foreign matter.

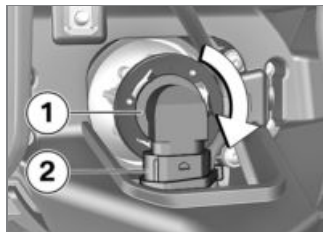


- To secure the light source **1** for the high beam headlight, insert the light source into the support and turn clockwise.
- Connect plug connection **2** for high beam headlight.
- Fit the cover on the left (▣▶ 159).

Replacing bulb for left parking light

- Switching off ignition (▣▶ 41).
- Removing headlight fairing (▣▶ 158).

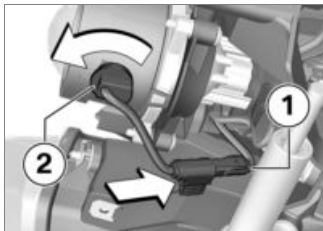

- Detach plug connection from the bracket (**arrow**) (use a screwdriver if necessary) and disconnect from the connector **1**.
- Turn socket **2** anticlockwise and pull out of the support.

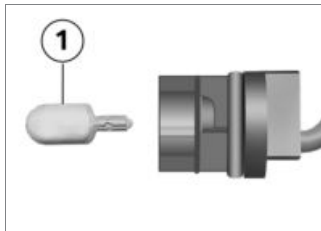


- Remove bulb **1** from the socket.
- Replace the defective bulb.




Bulb for parking light

W5W / 12 V / 5 W

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.

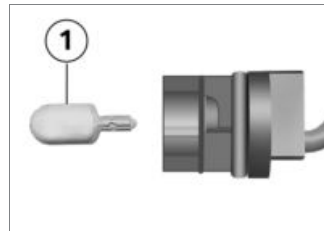

- Insert bulb **1** into the socket.

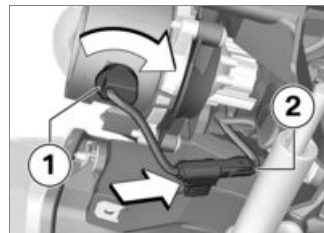


- Insert socket **1** in the support and turn clockwise.
- Insert plug connection in the bracket (**arrow**) and connect to connector **2**.

- Installing headlight fairing (►► 159).

Replacing bulb for right side light

- Place the motorcycle on its stand on firm, even ground.
- Switch off the ignition.
- Remove the cover on the right (►► 158).

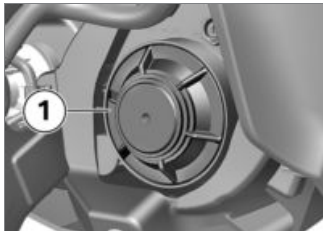

- Remove cover **1**.



- Push retainer to the side (using a screwdriver if necessary) and pull socket **1** out of the headlight housing.



- Remove bulb **1** from the socket.

- Replace the defective bulb.



Bulb for parking light

W5W / 12 V / 5 W


- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.



- Insert bulb **1** into the socket.



- Insert socket **1** into the headlight housing, making sure that the retainer engages.

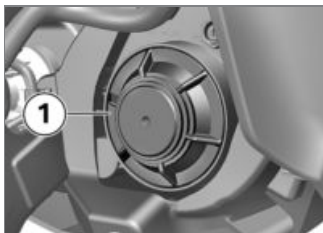

- Install cover **1**.
- Fit cover on right (➡ 159).

Replacing bulbs for front and rear turn indicators


- Switching off ignition (➡ 41).



- Remove screw **1**.




- Pull the glass out of the light housing at the threaded-fastener side.

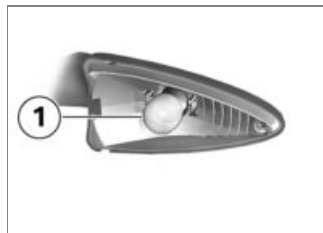

- Turn bulb **1** counter-clockwise and remove it from the light housing.


- Replace the defective bulb.

 Bulbs for flashing turn indicators, front

RY10W / 12 V / 10 W

– with LED flashing turn indicators^{OE}

LED<


 Bulbs for flashing turn indicators, rear

RY10W / 12 V / 10 W

– with LED flashing turn indicators^{OE}

LED<

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.

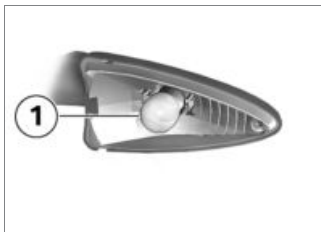

- Turn bulb **1** clockwise to install it in the light housing.




- Working from the inboard side, insert the glass into the light housing and close the housing.



- Install screw **1**.

Replacing bulb for number-plate light


- Switching off ignition (☛ 41).

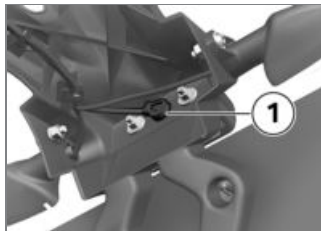

- Pull number-plate light bulb **1** out of the light housing.



- Remove the bulb from the socket.
- Replace the defective bulb.


 Light source for the number plate light

W5W / 12 V / 5 W

- Use a clean, dry cloth to hold the bulb in order to keep the glass free of foreign matter.



- Push the bulb into the bulb socket.

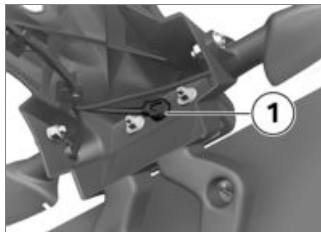

- Press number-plate light bulb **1** into the light housing.


Replace LED flashing turn indicators

- with LED flashing turn indicators^{OE}
- LED flashing turn indicators can only be replaced as a complete unit. Consult a specialist workshop, preferably an authorised BMW Motorrad dealer.<

LED rear light

If more LEDs in the rear light have failed that specified below, the rear light must be replaced. Under these circumstances:

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

 Maximum number of defective LEDs in rear-light unit

1


Trim panel components

Removing right side panel


NOTICE

The procedure described here for the right side apply applies by analogy to the left side panel.◀

- Switching off ignition (☐→ 41).
– with engine spoiler^{OE}

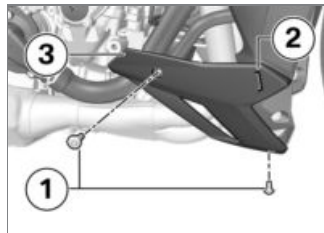


- Remove screws **1**.
- Detach retaining hook **2** and remove engine spoiler **3**.◀

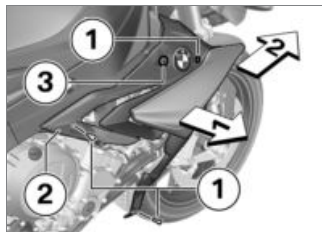


- Remove screws **1**.
- Release fairing side panel on the right **2** from grommet **3** and remove.

Installing right side panel

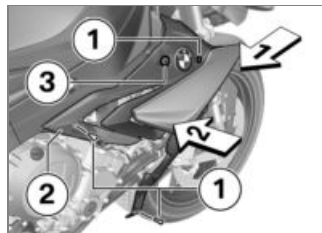

- Secure fairing side panel **2** in the grommet **3**.
- Install screws **1**.


– with engine spoiler^{OE}

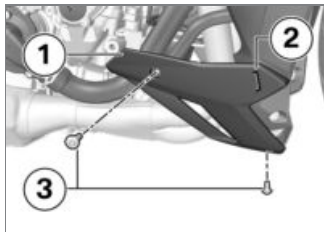


- Fit engine spoiler **1** ensuring that the retaining hook **2** is secured.
- Install screws **3**. ◀

Removing headlight fairing

- Switching off ignition (➡ 41).

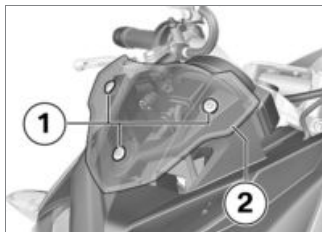


- Remove screws **1** and remove windscreen **2**.

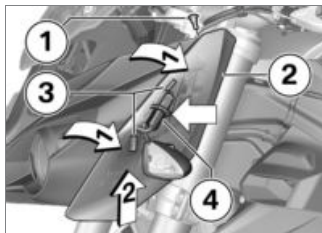


- Remove screw **1**.
- Pull the cover on the left **2** to one side and detach from the two brackets **3**.

- Disconnect plug connection **4** for the turn indicators.

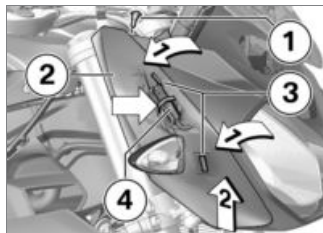


- Remove screw **1**.
- Pull the cover on the right **2** to one side and detach from the two brackets **3**.
- Remove cable ties (**arrow**).
- Disconnect plug connection **4** for the turn indicators.
- Remove the cover on the right.

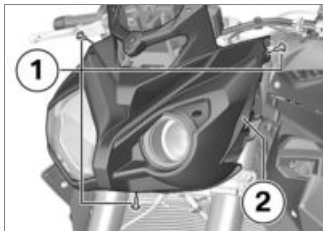


- Remove screws **1** and light trim **2**.

Installing headlight fairing

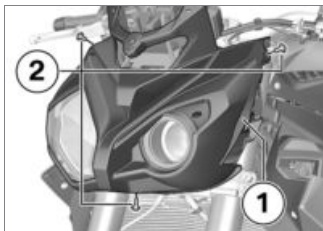


- Hold lamp trim **1** in position and secure it with screws **2**.

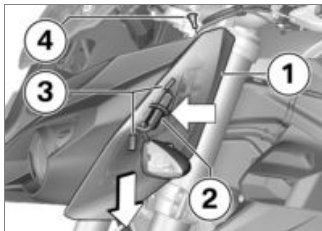

- Set cover **1** in position from above.
- Connect plug connection **2** for the turn indicators and route the cable.
- Fasten left cover in the brackets **3**.
- Install screw **4**.



- Set right-hand cover **1** in position from above.
- Connect plug connection **2** for the turn indicators and route the cable.
- Fasten right cover in the brackets **3**.
- Install screw **4**.

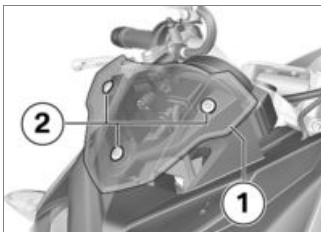

- Fit windscreen **1** and screws **2**.



Windscreen on holder for instrument cluster

2 Nm

Jump-starting



CAUTION

Touching live parts of the ignition system when the engine is running

Electric shock

- Do not touch parts of the ignition system when the engine is running. ◀



ATTENTION

Excessive current flowing when the motorcycle is jump-started

Wiring smoulders/ignites or damage to the on-board electronics

- If the motorcycle has to be jump-started connect the leads to the battery terminals; never attempt to jump-start the engine by connecting leads to the on-board socket. ◀



ATTENTION

Contact between crocodile clips of jump leads and vehicle

Risk of short-circuit



ATTENTION

Jump-starting with a voltage greater than 12 V

Damage to the on-board electronics

- Make sure that the battery of the donor vehicle has a voltage rating of 12 V. ◀
- When jump-starting the engine, do not disconnect the battery from the on-board electrical system.
- Removing front seat (▶▶▶ 60).
- Run the engine of the donor vehicle during jump-starting.
- Begin by connecting one end of the red jump lead to the positive terminal of the discharged battery and the other end to the positive terminal of the donor battery.

- Then connect one end of the black jump lead to the negative terminal of the donor battery, and the other end to the negative terminal of the discharged battery.
- Start the engine of the vehicle with the discharged battery in the usual way; if the engine does not start, wait a few minutes before repeating the attempt in order to protect the starter motor and the donor battery.
- Allow both engines to idle for a few minutes before disconnecting the jump leads.
- Disconnect the jump lead from the negative terminals first, then disconnect the second lead from the positive terminals.
- Installing front seat (🔧➔ 61).

Battery

Maintenance instructions

Correct upkeep, recharging and storage will prolong the life of the battery and are essential if warranty claims are to be considered.

Compliance with the points below is important in order to maximise battery life:

- Keep the surface of the battery clean and dry.
- Do not open the battery.
- Do not top up with water.
- Be sure to read and comply with the instructions for charging the battery on the following pages.
- Do not turn the battery upside down.



ATTENTION

On-board electronics (e.g. clock) draining connected battery

Battery is deep-discharged; this voids the guarantee

- Connect a float charger to the battery if the motorcycle is to remain out of use for more than four weeks.◀




NOTICE

BMW Motorrad has developed a float charger specially designed for compatibility with the electronics of your motorcycle. Using this charger, you can keep the battery charged during long periods of disuse, without having to disconnect the battery from the motorcycle's on-board systems. You can obtain additional information from your authorised BMW Motorrad dealer.◀

Disconnecting battery from motorcycle

- Place the motorcycle on its stand on firm, even ground.
- Switch off the ignition.
- Removing front seat (▣▣▣ 60).

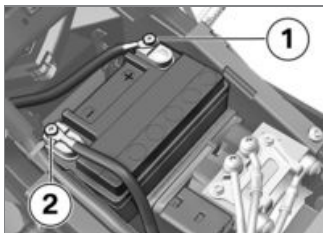

ATTENTION


Battery not disconnected in accordance with correct procedure

Risk of short-circuit

- Always proceed in compliance with the specified disconnection sequence.◀

- Remove the battery earth lead **2**. Also remove the washer between the battery and the battery earth lead.
- Remove positive battery cable **1**.

Connecting battery to motorcycle

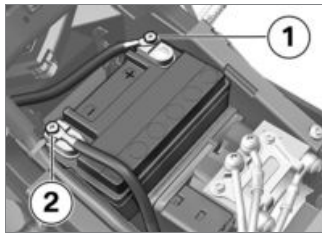

- Connect battery positive lead **1** first.
- Replace the washer between the battery and the battery earth lead. Then install battery negative lead **2**.
- Installing front seat (▣▣▣ 61).

Recharging battery

- Disconnecting battery from motorcycle (▣▣▣ 162).
- Charge the battery using a suitable charger.
- Comply with the operating instructions of the charger.
- Once the battery is fully charged, disconnect the charger's terminal clips from the battery terminals.



NOTICE

The battery has to be recharged at regular intervals in the course of a lengthy period of disuse. See the instructions for caring for your battery. Always fully recharge the battery before restoring it to use.◀

- Connecting battery to motorcycle (▣▣▣ 162).

Removing battery


- Removing front seat (➡ 60).
- Disconnecting battery from motorcycle (➡ 162).
- Lift the battery up and out: work it slightly back and forth if it is difficult to remove.

Installing battery

NOTICE

If the battery was disconnected from the motorcycle for a prolonged period of time it will be necessary to enter the current date in the instrument panel, in order to ensure that the service-due indicator functions correctly. If you want to have the date set consult a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

- Place the battery in the battery compartment, positive terminal on the right in the forward direction of travel.
- Place the battery in the battery compartment, minus terminal on the left in the forward direction of travel.
- Connecting battery to motorcycle (➡ 162).
- Installing front seat (➡ 61).
- Setting the clock (➡ 47).
- Switch off the ignition.
- Place the motorcycle on its stand on firm, even ground.
- Removing rear seat (➡ 59).

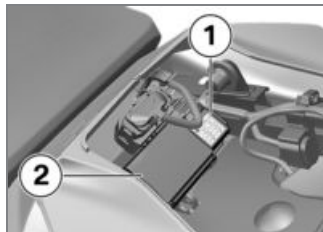

Fuses

Removing the fuse

ATTENTION

Jumpering of blown fuses

Risk of short-circuit and fire

- Never attempt to jumper a blown fuse.
- Always replace a defective fuse with a new fuse of the same amperage. ◀


- Press the locking lever together and remove the fuse box cover **1**.
- To replace the main fuse, remove the relay box cover **2**.
- Remove the faulty fuse upwards out of the fuse box.

NOTICE

If fuse defects recur frequently have the electric circuits checked

by a specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

Replacing fuse

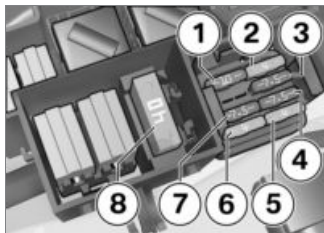

- Replace faulty fuse with a fuse with the required current level.

NOTICE

The fuse assignments and fuse amperage ratings specified for your motorcycle are listed in the section entitled "Technical data". The figures in the graphic correspond to the fuse numbers. ◀

- Closing the fuse cover.

- » The latch engages with an audible click.
- Install the rear seat (▣▣▣ 60).

Diagnostic connector Disengaging diagnostic connector


CAUTION

Incorrect procedure followed when loosening the diagnostic connector for the on-board diagnosis

Motorcycle experiences malfunctions

- Only have the diagnostic connector loosened by a specialist workshop or other authorised persons during your next BMW Service appointment.
- Have the work performed by appropriately trained staff.
- Refer to the vehicle manufacturer specifications. ◀


- Removing rear seat (▣▣▣ 59).

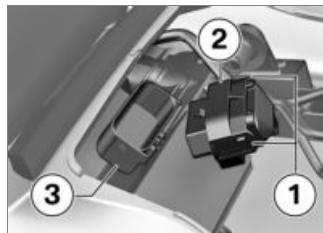

- Press locks **1**.
- Disengage diagnostic connector **2** from holder **3**.
- » The interface to the diagnosis and information system can be connected to diagnostic connector **2**.

Securing the diagnostic connector

- Disconnect the interface for the diagnosis and information system.

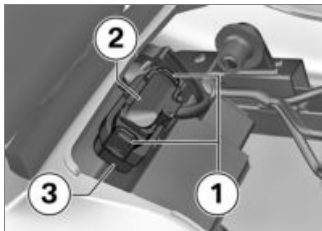

- Seat diagnostic connector **2** in bracket **3**.
- » Retainers **1** engage with an audible click.
- Install the rear seat (➡ 60).

Chain

Lubricating chain



ATTENTION

Inadequate cleaning and lubrication of the drive chain

Accelerated wear

- Clean and lubricate the drive chain at regular intervals.◀

- Lubricate the chain more frequently if the motorcycle is ridden in wet, dusty or dirty conditions.

	Lubricate drive chain at regular intervals.
--	---

min 800 km

- Switch the ignition off and select neutral.
- Clean the drive chain with a suitable cleaning product, dry it and apply chain lubricant.
- To prolong chain life, BMW Motorrad recommends the use of BMW Motorrad chain lubricant, or:


	Lubricant
--	-----------

Chain spray

- Wipe off excess lubricant.

Checking chain tension

- Place the motorcycle on its stand on firm, even ground.
- Turn the rear wheel until it reaches the position with the lowest amount of chain sag.

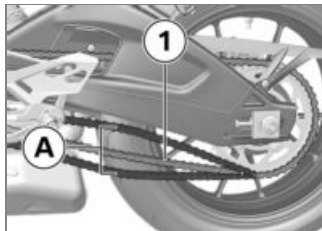

- Use a screwdriver to push the chain **1** up and down at a point midway along the run between pinion and sprocket and measure difference **A**.



Chain deflection


35...45 mm (Motorcycle with no weight applied, supported on its side stand)

If measured value is outside permitted tolerance:

- Adjust the chain tension (▶▶▶ 166).

Adjust the chain tension

- Place the motorcycle on its stand on firm, even ground.

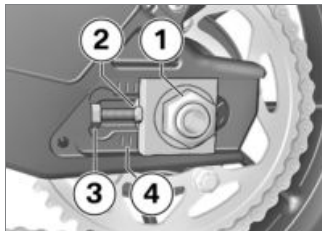

- Loosen nut **1** for the quick-release axle.
- Slacken locknuts **3** on left and right.
- Use adjusting screws **2** on left and right to adjust chain tension.
- Checking chain tension (▶▶▶ 165).
- Make sure that scale readings **4** are the same on left and right.
- Tighten locknuts **3** on left and right to the specified tightening torque.



Locknut of the final-drive chain tensioning screw

19 Nm

- Tighten nut **1** for the quick-release axle to the specified tightening torque.




Rear quick-release axle in swinging arm

Thread-locking compound: mechanical

100 Nm

Checking the chain wear

- Engage 1st gear.
- Turn the rear wheel in the normal direction of travel until the chain is tensioned.
- Determine the length of the chain underneath the rear wheel swinging arm above the middle of 10 rivets in 3 different places.

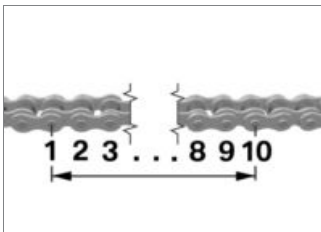

Permissible chain length

max 144.30 mm (measured
centre to centre over 10
pins, chain pulled taut)

If the chain has stretched to the maximum permissible length:

- Seek the advice of a specialist workshop, preferably an authorised BMW Motorrad dealer.

Accessories

General instructions..... 170

General instructions

CAUTION

Use of other-make products

Safety risk

- BMW Motorrad cannot examine or test each product of outside origin to ensure that it can be used on or in connection with BMW vehicles without constituting a safety hazard. Country-specific official authorisation does not suffice as assurance. Tests conducted by these instances cannot make provision for all operating conditions experienced by BMW vehicles and, consequently, they are not sufficient in some circumstances.
- Use only parts and accessories approved by BMW for your vehicle. ◀

BMW has conducted extensive testing of the parts and ac-

cessory products to establish that they are safe, functional and suitable. Consequently, BMW accepts product liability. BMW accepts no liability whatsoever for parts and accessories that it has not approved.

Whenever you are planning modifications, comply with all the legal requirements. Make sure that the vehicle does not infringe the national road-vehicle construction and use regulations applicable in your country.

Your BMW Motorrad dealer can offer expert advice on the choice of genuine BMW parts, accessories and other products.

To find out more about accessories go to:

**[bmw-motorrad.com/
accessories](http://bmw-motorrad.com/accessories)**

Care

Care products	172
Washing the vehicle	172
Cleaning easily damaged components.....	173
Paint care	174
Laying up the motorcycle	174
Protective wax coating	174
Restoring motorcycle to use	174

Care products

BMW Motorrad recommends that you use the cleaning and care products you can obtain from your authorised BMW Motorrad dealer.

The substances in BMW CareProducts have been tested in laboratories and in practice; they provide optimised care and protection for the materials used in your vehicle.



ATTENTION

Use of unsuitable cleaning and care products

Damage to vehicle parts

- Do not use solvents such as cellulose thinners, cold cleaners, fuel or the like, and do not use cleaning products that contain alcohol. ◀

Washing the vehicle

BMW Motorrad recommends that you use BMW insect remover to soften and wash off insects and stubborn dirt on painted parts prior to washing the motorcycle.

To prevent stains, do not wash the vehicle immediately after it has been exposed to strong sunlight and do not wash it in the sun.

Make sure that the vehicle is washed frequently, especially during the winter months.

To remove road salt, clean the motorcycle with cold water immediately after every trip.



WARNING

Wet brake discs and brake pads after vehicle wash, after riding through water and in rainy conditions

Diminished braking effect, risk of accident

- Apply the brakes in good time to allow the friction and heat to dry the brake discs and brake pads. ◀



ATTENTION

Effect of road salt intensified by warm water

Corrosion

- Use only cold water to wash off road salt. ◀



ATTENTION

Damage due to high water pressure from high pressure cleaners or steam cleaners

Corrosion or short-circuit, damage to seals, to the hydraulic brake system, to the electrics and the seat

- Exercise restraint when using a steam jet or high-pressure cleaning equipment.◀

Cleaning easily damaged components

Plastics

ATTENTION

Use of unsuitable cleaning agents

Damage to plastic surfaces

- Do not use cleaning agents that contain alcohol, solvents or abrasives.
- Do not use insect-remover pads or cleaning pads with hard, scouring surfaces.◀

NOTICE

Under conditions of use as intended by the manufacturer, sooner or later irremovable marks may appear on the seat

coverings. Clothing that is not colour-fast is a major cause of this occurrence.◀

Body panels

Clean the trim panels with water and BMW plastic care emulsion.

Windscreens and lenses made of plastic

Clean off dirt and insects with a soft sponge and plenty of water.

NOTICE

Soften stubborn dirt and insects by covering the affected areas with a wet cloth.◀

Chrome

Use plenty of water and BMW shampoo to clean chrome, particularly if it has been exposed to road salt. Use chrome polish for additional treatment.

Radiator

Clean the radiator regularly to prevent overheating of the engine due to inadequate cooling. For example, use a garden hose with low water pressure.

ATTENTION

Bending of radiator fins

Damage to radiator fins

- Take care not to bend the radiator fins when cleaning.◀

Rubber

Treat rubber components with water or BMW rubber-care products.

ATTENTION

Application of silicone sprays to rubber seals

Damage to the rubber seals

- Do not use silicone sprays or care products that contain silicon.◀

Paint care

Washing the vehicle regularly will help counteract the long-term effects of substances that damage the paint, especially if your vehicle is ridden in areas with high air pollution or natural sources of dirt, for example tree resin or pollen.

Remove particularly aggressive substances immediately, however, as otherwise the paint can be affected or become discoloured. Substances of this nature include spilt fuel, oil, grease, brake fluid and bird droppings. We recommend BMW vehicle polish or BMW paint cleaner for this purpose.

Marks on the paintwork are particularly easy to see after the vehicle has been washed. Remove stains of this kind immediately, using cleaning-grade benzene or petroleum spirit on a clean cloth or ball of cotton wool.

BMW Motorrad recommends using BMW tar remover for removing specks of tar. Remember to wax the parts treated in this way.

Laying up the motorcycle

- Clean the motorcycle.
- Fill the motorcycle's fuel tank.
- Removing battery (▣▣▣▶ 163).
- Spray the brake and clutch lever pivots and the main and side stand pivots with a suitable lubricant.
- Preserve bright metal and chrome-plated parts with an acid-free grease (e.g. Vaseline).
- Stand the motorcycle in a dry room in such a way that there is no load on either wheel (preferably using the front-wheel and rear-wheel stands from BMW Motorrad).

Protective wax coating

BMW Motorrad recommends applying only BMW car wax or products containing carnauba wax or synthetic wax.

It is time to rewax the paintwork when water "puddles" on the surface, instead of forming beads.

Restoring motorcycle to use

- Remove the protective wax coating.
- Clean the motorcycle.
- Installing battery (▣▣▣▶ 163).
- Comply with checklist (▣▣▣▶ 78).

Technical data

Troubleshooting chart	176
Threaded fasteners	177
Fuel.....	179
Engine oil	179
Engine	180
Clutch	181
Transmission	181
Final drive.....	182
Frame	182
Chassis and suspension	182
Brakes	183
Wheels and tyres	184
Electrical system.....	186
Dimensions	188
Weights.....	188

Riding specifications	189
-----------------------------	-----

Troubleshooting chart

Engine does not start or is difficult to start.

Possible cause	Rectification
Side stand extended and gear engaged	Retract the side stand.
Gear engaged and clutch not disengaged	Select neutral or pull the clutch lever.
No fuel in tank	Refuelling (▣▣▣ 88).
Battery flat	Recharge the battery.
Overheating protection for starter motor has been activated. Starter motor can only be operated for a limited period of time.	Allow the starter motor to cool down for approx. 1 minute before using it again.

Threaded fasteners

Front wheel	Value	Valid
Quick-release axle in threaded bush		
M24 x 1.5	50 Nm	
Clamping screws in axle holder		
M8 x 35	Tighten screws six times in alternate sequence	
	19 Nm	
Radial brake caliper to axle mount		
M10 x 65	38 Nm	
Rear wheel	Value	Valid
Locknut of the final-drive chain tensioning screw		
M8	19 Nm	
Rear quick-release axle in swinging arm		
M24 x 1.5 mechanical	100 Nm	

Rear wheel	Value	Valid
Swinging-arm adapter to rear wheel swinging arm		
M8 x 30	20 Nm	
Spring strut to main frame		
M10 x 65	56 Nm	
Mirrors	Value	Valid
Locknut (mirror) to clamping piece		
M10 x 1.5 Multi-wax spray	20 Nm	

Fuel

Recommended fuel grade	Super Plus, unleaded (max. 10 % ethanol, E10) 98 ROZ/RON 91 AKI
Usable fuel capacity	approx. 17.5 l
Fuel reserve	approx. 4 l

Engine oil

Engine oil, capacity	approx. 3.5 l, with filter change
Specification	SAE 5W-40, API SL / JASO MA2, Additives (e.g. molybdenum-based) are not permissible because they can attack coated components of the engine, BMW Motorrad recommends BMW Motorrad ADVANTEC Ultimate oil.
Engine oil, quantity for topping up	max 0.8 l, Difference between MIN and MAX

BMW recommends **ADVANTEC**
ORIGINAL BMW ENGINE OIL

Engine

Location of engine number	Crankcase lower part right, behind the coolant pump
Engine type	104EC
Engine design	Water-/oil-cooled four-cylinder four-stroke inline engine, four valves per cylinder, two overhead camshafts
Displacement	999 cm ³
Cylinder bore	80 mm
Piston stroke	49.7 mm
Compression ratio	12.1:1
Nominal output	121 kW, at engine speed: 11000 min ⁻¹
– with reduction of power ^{OE}	79 kW, at engine speed: 7500 min ⁻¹
Torque	114 Nm, at engine speed: 9250 min ⁻¹
– with reduction of power ^{OE}	103 Nm, at engine speed: 7000 min ⁻¹
Maximum engine speed	max 12000 min ⁻¹
Idle speed	1270 min ⁻¹ , Engine at regular operating temperature
Exhaust emissions standard	EU 4

Clutch

Clutch type	Multiplate oil-bath clutch, anti-hopping
-------------	--

Transmission

Gearbox type	Claw-shift 6-speed gearbox, integrated into engine block
Gearbox transmission ratios	1.652 (76:46 teeth), Primary transmission ratio 2.647 (45:17 teeth), 1st gear 2.091 (46:22 teeth), 2nd gear 1.727 (38:22 teeth), 3rd gear 1.500 (36:24 teeth), 4th gear 1.360 (34:25 teeth), 5th gear 1.261 (29:23 teeth), 6th gear

Final drive

Type of rear suspension	Aluminium double swinging arm
Final drive, number of teeth (Pinion / sprocket)	17/45
Secondary transmission ratio	2.647

Frame

Frame type	Aluminium composite bridge frame, load-bearing engine
Type plate location	Steering head, right
Position of the Vehicle Identification Number	Steering head, right

Chassis and suspension

Front wheel

Type of front suspension	Upside-down telescopic fork
Spring travel, front	120 mm, at wheel

Rear wheel

Type of rear suspension	Aluminium double swinging arm
Type of final drive	Chain drive
Spring travel, rear	120 mm, at wheel

Brakes

Front wheel

Type of front brake	Hydraulically radially operated twin disc brake with 4-piston radial fixed calipers and floating brake discs
Brake-pad material, front	Sintered metal
Brake disc thickness, front	5.0 mm, When new min 4.5 mm, Wear limit
Play of brake controls (Front brake)	0.6...1.4 mm

Rear wheel

Type of rear brake	Hydraulically actuated disc brake with 1-piston floating caliper and fixed disc
Brake-pad material, rear	Organic material
Brake disc thickness, rear	5.0 mm, When new min 4.5 mm, Wear limit
Blow-by clearance of the footbrake lever	2...3 mm, between limit position and footbrake lever

Wheels and tyres

Recommended tyre sets	Your authorised BMW Motorrad dealer will be happy to supply an up-to-date list of the approved wheel/tyre combinations, or you can check the information posted on the bmw-motorrad.com website.
Speed category, front/rear tyres	W, required at least: 270 km/h
Front wheel	
Front wheel type	Aluminium cast wheel
Front wheel rim size	3.50" x 17"
Tyre designation, front	120/70 ZR 17
Load index, front tyre	58
Permissible front-wheel imbalance	max 5 g
Balance weight for front wheel (One half of the weights must be attached to the left and the other half to the right of the wheel rim)	max 80 g

Rear wheel

Rear-wheel type	Aluminium cast wheel
Rear wheel rim size	6.0" x 17"
Tyre designation, rear	190/55 ZR 17
Load index, rear tyre	75
Permissible rear-wheel imbalance	max 45 g
Balance weight for the rear wheel (One half of the weights must be attached to the left and the other half to the right of the wheel rim)	max 80 g

Tyre pressure

Tyre pressure, front	2.5 bar, Tyre cold
Tyre pressure, rear	2.9 bar, Tyre cold

Electrical system

Fuses

Fuse 1	10 A, Instrument panel
Fuse 2	4 A, Master relay, diagnosis plug, anti-theft alarm
Fuse 3	Not used
Fuse 4	7.5 A, Low-beam headlight, load relief relay
Fuse 5	7.5 A, High-beam headlight
Fuse 6	7.5 A, Socket for optional accessories, number-plate light
Fuse 7	4 A, Ignition switch
Fuse 8	4 A, Angular rate sensor, left multi-function switch
Main fuse	40 A

Battery

Battery type	AGM (Absorbent Glass Mat) battery
Battery rated voltage	12 V
Battery rated capacity	9 Ah

Spark plugs

Spark plugs, manufacturer and designation	NGK LMAR9D-J
Electrode gap of spark plug	0.8 mm

Lighting

Bulb for high-beam headlight	HB3 / 12 V / 60 W
Bulbs for the low-beam headlight	H7 / 12 V / 55 W
Bulb for parking light	W5W / 12 V / 5 W
Bulb for tail light/brake light	LED
Maximum number of defective LEDs in rear-light unit	1
Bulbs for flashing turn indicators, front	RY10W / 12 V / 10 W
– with LED flashing turn indicators ^{OE}	LED
Bulbs for flashing turn indicators, rear	RY10W / 12 V / 10 W
– with LED flashing turn indicators ^{OE}	LED
Light source for the number plate light	W5W / 12 V / 5 W

Dimensions

Length of motorcycle	2057 mm
Height of motorcycle	1228 mm, To windscreen at DIN unladen weight
Width of motorcycle	845 mm, via mirror
Front-seat height	814 mm, without rider
Rider's inside-leg arc, heel to heel	1805 mm, Without rider

Weights

Vehicle kerb weight	205 kg, DIN unladen weight, ready for road, 90 % load of fuel, without OE
Permissible wheel load, front	max 180 kg
Permissible wheel load, rear	max 270 kg
Permissible gross weight	407 kg
Maximum payload	202 kg

Riding specifications

Starting capability on uphill gradients (at permissible gross weight)	max 20°
Top speed	>200 km/h

Service

BMW Motorrad Service	192
BMW Motorrad Mobility services	192
Maintenance work	192
Maintenance schedule	195
Confirmation of maintenance work	196
Confirmation of service	210

BMW Motorrad Service

BMW Motorrad has an extensive network of dealerships in place to look after you and your motorcycle in more than 100 countries. Authorised BMW Motorrad dealerships have the technical information and the technical know-how to reliably carry out all maintenance and repair work on your BMW.

You can locate your nearest authorised BMW Motorrad dealership by visiting our website:

bmw-motorrad.com



WARNING

Maintenance and repair work not in compliance with correct procedure

Risk of accident due to consequential damage

- BMW Motorrad recommends having work of this nature carried out on the vehicle by a

specialist workshop, preferably an authorised BMW Motorrad dealer. ◀

In order to help ensure that your BMW is always in optimum condition, BMW Motorrad recommends compliance with the maintenance intervals specified for your motorcycle. Have all maintenance and repair work that is carried out confirmed in the "Service" chapter in this manual. For generous treatment of claims submitted after the warranty period has expired, evidence of regular maintenance is essential.

Your authorised BMW Motorrad dealer can provide information on BMW services and the work undertaken as part of each service.

BMW Motorrad Mobility services


As owner of a new BMW motorcycle, in circumstances in which assistance is required you can benefit from the protection afforded by the various BMW Motorrad mobility services (e.g. Mobile Service, breakdown service, vehicle recovery service). Your authorised BMW Motorrad dealer will be happy to provide information about the mobility services available to you.

Maintenance work

BMW Pre-delivery Check

Your authorised BMW Motorrad dealer conducts the BMW pre-delivery check before handing over the vehicle to you.

BMW Running-in Check

 Running-in check
500...1200 km


BMW Service

The BMW Service is carried out once a year; the extent of servicing can vary, depending on the age of the vehicle and the distance it has covered. Your authorised BMW Motorrad dealer confirms that the service work has been carried out and enters the date when the next service will be due.

Riders who cover long distances in a year might have to bring in their vehicles for service before the next scheduled date. It is to allow for these cases that a maximum odometer reading is entered as well in the confirmation of service. Servicing has to be brought forward if this odo-

meter reading is reached before the next scheduled date for the service.

The service-due indicator in the multifunction display reminds you about one month or a defined distance in advance when the time for a service is approaching, on the basis of the programmed values.

 The distance remaining until the next service appointment
1000 km

The regular service intervals as stated apply to motorcycles used on public roads. In the case of motorcycles used for racing, the intervals have to be adapted accordingly in line with the increased wear and tear associated with this mode of use.

Maintenance schedule

- 1** BMW Running-in check
- 2** BMW Service standard scope
- 3** Engine-oil change, with filter
- 4** Check valve clearance
- 5** Checking timing
- 6** Replace all spark plugs
- 7** Replacing air filter
- 8** Oil change in the telescopic forks
- 9** Change brake fluid, entire system
 - a** annually or every 10000 km (whichever comes first)
 - b** for the first time after one year, then every two years

Confirmation of maintenance work

BMW Motorrad Service, standard scope

The activities in the BMW Motorrad Service standard scope are listed below. The actual scope of maintenance work for your vehicle may differ.

- Performing vehicle test with BMW Motorrad diagnostic system
- Visually inspect the brake pipes, brake hoses and connections
- Checking front brake pads and brake discs for wear
- Checking brake-fluid level, front brakes
- Checking rear brake pads and brake disc for wear
- Checking brake-fluid level, rear brakes
- Checking steering-head bearing
- Checking coolant level
- Checking fastener of clutch lever fitting
- Checking clutch cable and clutch-lever play
- Lubricating clutch mechanism
- Checking and lubricating chain drive
- Checking tyre pressures and tread depth
- Checking ease of movement of side stand
- Check the lights and signalling equipment
- Function test, engine start suppression
- Final inspection and check for road safety
- Setting service-due date and service countdown distance
- Checking battery charge state
- Confirm BMW service in on-board literature

BMW Pre-delivery Check

Completed

on _____

Stamp, signature

BMW Running-in Check

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

BMW Motorrad Service, standard
scope

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head
cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Yes

No

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

Yes

No

BMW Motorrad Service, standard scope

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

BMW Motorrad Service, standard
scope

Yes

No

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head
cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

Yes

No

BMW Motorrad Service, standard
scope

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head
cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

BMW Motorrad Service, standard
scope

Yes

No

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head
cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Notes

BMW Service

Completed
 on _____
 Odometer reading _____
Next service
 at the latest
 on _____
 or, if reached beforehand
 Odometer reading _____

Item	Yes	No
BMW Motorrad Service, standard scope	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

 Stamp, signature

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

BMW Motorrad Service, standard
scope

Yes

No

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head
cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

BMW Motorrad Service, standard scope

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Yes No

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

BMW Motorrad Service, standard
scope

Yes

No

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head
cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Notes

BMW Service

Completed

on _____

Odometer reading _____

Next service

at the latest

on _____

or, if reached beforehand

Odometer reading _____

Stamp, signature

Item

BMW Motorrad Service, standard
scope

Yes

No

Oil change, engine, with filter

Checking valve clearance

Checking valve timing (cylinder head
cover removed)

Renewing all spark plugs

Renewing air cleaner insert

Oil change in telescopic front forks

Change brake fluid in entire system

Notes

BMW Service

Completed
 on _____
 Odometer reading _____
Next service
 at the latest
 on _____
 or, if reached beforehand
 Odometer reading _____

Item	Yes	No
BMW Motorrad Service, standard scope	<input type="checkbox"/>	<input type="checkbox"/>
Oil change, engine, with filter	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve clearance	<input type="checkbox"/>	<input type="checkbox"/>
Checking valve timing (cylinder head cover removed)	<input type="checkbox"/>	<input type="checkbox"/>
Renewing all spark plugs	<input type="checkbox"/>	<input type="checkbox"/>
Renewing air cleaner insert	<input type="checkbox"/>	<input type="checkbox"/>
Oil change in telescopic front forks	<input type="checkbox"/>	<input type="checkbox"/>
Change brake fluid in entire system	<input type="checkbox"/>	<input type="checkbox"/>

Notes

 Stamp, signature

Confirmation of service

The table is intended as a record of maintenance and repair work, the installation of optional accessories and, if appropriate, special campaign (recall) work.

Item	Odometer reading	Date

Item	Odometer reading	Date

Appendix

Certificate for Electronic Immobiliser	214
--	-----

FCC Approval

Ring aerial in the ignition switch



To verify the authorization of the ignition key, the electronic immobilizer exchanges information with the ignition key via the ring aerial.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.



Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ◀

Approbation de la FCC

Antenne annulaire présente dans le commutateur d'allumage



Pour vérifier l'autorisation de la clé de contact, le système d'immobilisation électronique échange des

informations avec la clé de contact via l'antenne annulaire.

Le présent dispositif est conforme à la partie 15 des règles de la FCC. Son utilisation est soumise aux deux conditions suivantes :

- (1) Le dispositif ne doit pas produire d'interférences nuisibles, et
- (2) le dispositif doit pouvoir accepter toutes les interférences extérieures, y compris celles qui pourraient provoquer une activation inopportune.



Toute modification qui n'aurait pas été approuvée expressément par l'organisme responsable de l'homologation peut annuler l'autorisation accordée à l'utilisateur pour utiliser le dispositif. ◀

- A**
 - Abbreviations and symbols, 6
 - ABS
 - ABS Pro display, 24
 - ABS Pro in detail, 118
 - Control, 17
 - Engineering details, 116
 - Indicator and warning lights, 32 operate, 51
 - Self-diagnosis, 80
 - Accessories
 - General instructions, 170
 - Actuality, 7
 - Anti-theft alarm
 - Indicator and warning lights, 36
 - Indicator light, 19
 - operate, 49
 - ASC
 - Control, 17
 - Engineering details, 119
 - operate, 52
 - Reading, 33
 - Self-diagnosis, 81
- Average values
 - Resetting, 47
- B**
 - Battery
 - Charging, 162
 - connecting to motorcycle, 162
 - disconnecting from motorcycle, 162
 - Installation, 163
 - Maintenance instructions, 161
 - Position on the vehicle, 16
 - Removal, 163
 - Technical data, 186
 - Brake fluid
 - Checking fluid level, front, 136
 - Checking fluid level, rear, 137
 - Reservoir, front, 15
 - Reservoir, rear, 15
 - brake lever, 64
 - Brake pads
 - Checking front, 134
 - checking rear, 135
 - Running in, 83
- Brakes
 - ABS Pro, 86
 - Adjusting handlebar lever, 64
 - Checking function, 133
 - Safety instructions, 85
 - Technical data, 183
- C**
 - Chain
 - Adjusting tension, 166
 - Checking tension, 165
 - Checking wear, 166
 - Lubricating, 165
 - Checklist, 78
 - Clutch
 - Adjusting play, 139
 - Checking function, 138
 - Checking play, 138
 - Technical data, 181
 - Confirmation of maintenance work, 196

Coolant
 Checking fill level, 139
 Filling level indicator, 15
 Topping up, 139
 Warning for overtemperature, 29

Cruise-control system
 Control, 17
 operate, 56

D

Damping
 Adjuster, front, 11, 13
 Adjuster, rear, 11, 13, 15
 Adjusting, 69

DDC
 Control, 17
 Engineering details, 122

Diagnostic connector
 Loosen, 164
 secure, 164

Dimensions
 Technical data, 188

Drop sensor
 Warnings, 32

DTC
 Control, 17
 Engineering details, 120
 operate, 53
 Self-diagnosis, 81
 Warnings, 34

E

Electrics
 Technical data, 186

Emergency off switch (kill switch)
 Operation, 42
 Position on the motorcycle, 18

Emissions warning light, 30

Engine
 Indicator light for engine control, 30
 Indicator light for engine electronics, 29
 Malfunction indicator lamp, 30
 starting, 78
 Technical data, 180

Engine oil
 Checking fill level, 132
 Filling level indicator, 11, 13

Oil filler opening, 15
 Technical data, 179
 Topping up, 133

Equipment, 7

F

Frame
 Technical data, 182

Front-wheel stand
 Installing, 131

Fuel
 refuelling, 88
 Technical data, 179

Fuel reserve
 Range, 38
 Warning, 37

Fuses
 Position on the vehicle, 16
 replacing, 163
 Technical data, 186

G

General views
 Indicator and warning lights, 22
 Instrument panel, 19
 Left multifunction switch, 17

Left side of vehicle, 11, 13
Multifunction display , 23
Right multifunction switch, 18
Right side of vehicle, 15
SETUP MENU, 103
Underneath the seat, 16

H

Hazard warning flashers
Control, 17
operate, 43

Headlight

Adjustment for driving on left/
driving on right, 64
Beam throw, 64

Heated handlebar grips

Control, 18
operate, 58

Helmet holder

Helmet, securing, 61
Position on the vehicle, 16

Horn, 17

I

Ignition

Switching off, 41
Switching on, 40

Immobiliser, 41

Warning, 29

Instrument panel

Ambient-light brightness
sensor, 19
Overview, 19

J

Jump-starting, 160

K

Keys, 40

L

Laptimer

operate, 94
RACE INFO, 98

Launch Control, 107

Lighting

High-beam headlight, 151
Low-beam headlight, 149
Number-plate light, 155

Replacing rear light, 156

Side light, left, 151

Side light, right, 153

Technical data, 187

Turn indicators, 154

Warning for bulb failure, 31

Lights

Control, 17

Headlight flasher, operating, 42

High-beam headlight,
operating, 42

Low-beam headlight, 42

Parking lights, operating, 43

Side light, 42

Luggage

Instructions for loading, 76

Luggage loops

Position on the vehicle, 16
use, 62

M

Maintenance

General instructions, 130

Maintenance schedule, 195

Maintenance intervals, 192

Mirrors
 Adjusting, 64
 Removing and installing, 109

Mobility services, 192

Motorcycle
 care, 171
 cleaning, 171
 Lashing, 90
 Laying up, 174
 parking, 87

Multifunction display, 19
 Control, 17
 LAPTIMER Operation, 94
 Overview, 23
 RACE INFO, 98
 Select display, 45
 SETUP MENU, 103

Multifunction switch
 General view, left side, 17
 General view, right side, 18

N

Number-plate carrier
 Removing and installing, 110

O

On-board computer
 Control, 17

P

Parking, 87

Pit-lane speed limiter
 operate, 109

Pre-Ride-Check, 79

R

Race track
 LAPTIMER Operation, 94
 Pit-lane speed limiter, 109

Rear seat, 164

Rear-wheel drive
 Technical data, 182

Rear-wheel stand
 Installing, 132

Refuelling, 88

Rev. counter, 19

Rider's Manual
 Position on the vehicle, 16

Riding mode
 Adjusting, 54
 Control for riding mode, 18

DYNAMIC, 125

DYNAMIC PRO, 126

Engineering details, 122

RAIN, 123

ROAD, 124

Running gear
 Technical data, 182

Running in, 82

S

Safety instructions
 for brakes, 85
 for riding, 76

Seats
 install, 59
 Lock, 11, 13
 remove, 59

Service, 192

Shift assistant, 84
 Gear not trained, 35

Shifting gear
 Gearshift light, 19, 83

Spark plugs
 Technical data, 186

Speedometer, 23

- Spring preload
 - Adjuster, front, 11, 13
 - Adjuster, rear, 11, 13
 - Adjusting, 65
- Starting, 78
 - Control, 18
- steering damper
 - Position on the vehicle, 15
- Steering lock
 - Locking, 40

T

- Technical data
 - Battery, 186
 - Brakes, 183
 - Chassis and suspension, 182
 - Clutch, 181
 - Dimensions, 188
 - Electrical system, 186
 - Engine, 180
 - Engine oil, 179
 - Final drive, 182
 - Frame, 182
 - Fuel, 179
 - Fuses, 186
 - Lighting, 187
 - Spark plugs, 186
 - Standards, 7
 - Transmission, 181
 - Weights, 188
 - Wheels and tyres, 184
- Telltale lights, 19
 - Overview, 22
- Toolkit
 - Contents, 130
 - Position on the vehicle, 16
- Torques, 177
- Traction control
 - DTC, 120
- Transmission
 - Technical data, 181
- Trim panels
 - Installation, 159
 - Removal, 158
- Troubleshooting chart, 176
- Turn indicators
 - Control, 17
 - operate, 44
 - Removing and installing, 113

- Type plate
 - Position on the vehicle, 15
- Tyres
 - Checking inflation pressure, 140
 - Checking tread depth, 140
 - Pressures, 185
 - Recommendation, 141
 - Running in, 83
 - Table of tyre pressures, 11, 13
 - Technical data, 184

V

- Vehicle
 - Restoring to use, 174
- Vehicle Identification Number
 - Position on the vehicle, 15

W

- Warning lights, 19
 - Overview, 22
- Warnings
 - ABS, 32
 - Anti-theft alarm, 36
 - ASC, 33
 - Bulb defect, 31

- Drop sensor, 32
- DTC, 34
- Engine control unit, 30
- Engine electronics, 29
- Fuel reserve, 37
- Gear not trained, 35
- Immobiliser, 29
- Malfunction indicator lamp, 30
- Mode of presentation, 24
- Overtemperature, 29
- Warnings, overview, 25
- Weights
 - Payload table, 11, 13
 - Technical data, 188
- Wheels
 - Change of size, 141
 - Checking rims, 140
 - Installing front wheel, 143
 - Installing the rear wheel, 147
 - Removing front wheel, 142
 - Removing rear wheel, 145
 - Technical data, 184

Details described or illustrated in this booklet may differ from the vehicle's actual specification as purchased, the accessories fitted or the national-market specification. No claims will be entertained as a result of such discrepancies.

Dimensions, weights, fuel consumption and performance data are quoted to the customary tolerances.

The right to modify designs, equipment and accessories is reserved.

Errors and omissions excepted.

© 2016 Bayerische Motoren Werke Aktiengesellschaft
80788 Munich, Germany
Not to be reproduced by any means whatsoever, wholly or in part, without the written permission of BMW Motorrad, After Sales.

Original rider's manual, printed in Germany.

